


CROSS-CUT PAPER SHREDDER


Operation Manual

MODEL:C281P

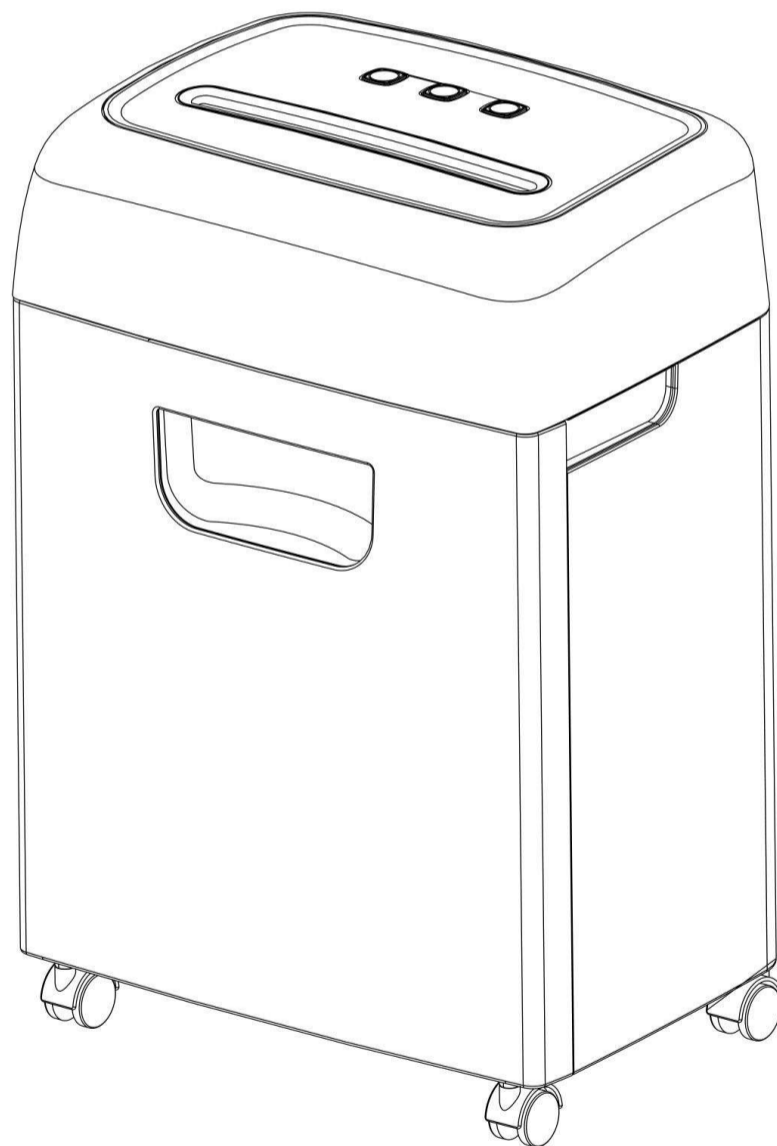

Attention before Using:

To operate this shredder correctly and safely, please make sure you understand the following icons correctly.

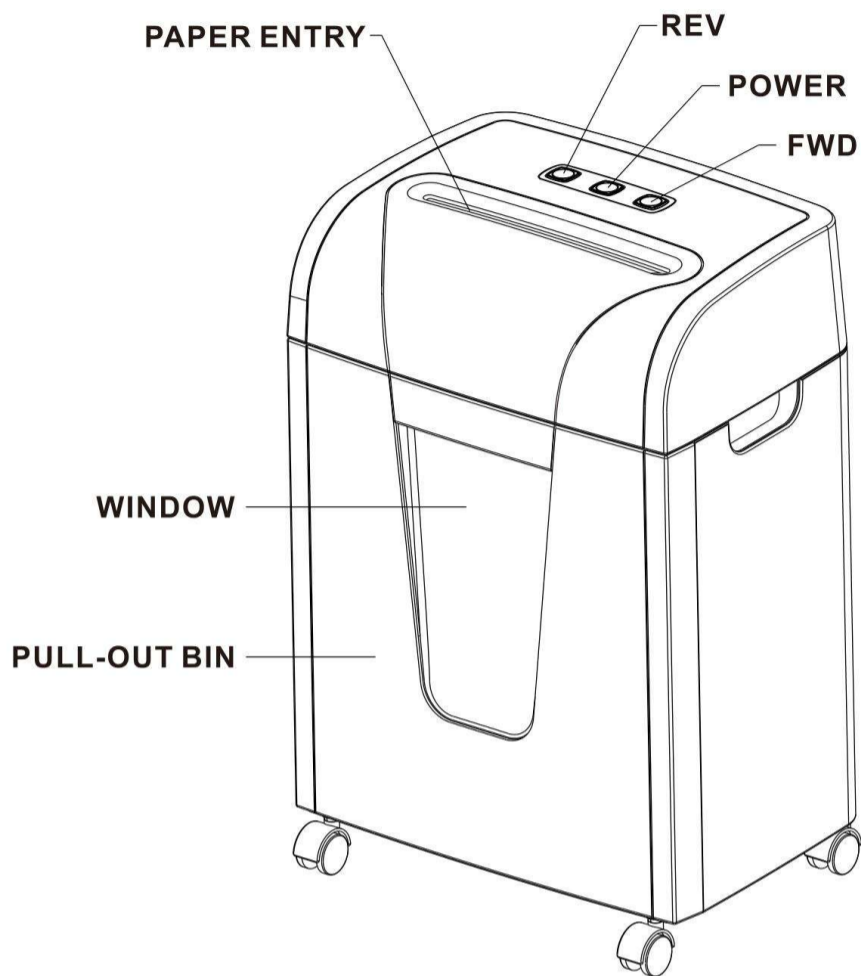

Cautions:



This symbol is for the safety warning sign.



This symbol is for the user to read the instruction before use the machine.



Sharp edges Do not touch.

This device is not intended for use by children.



Avoid touching the intake opening with hands, clothing or hair.
Unplug the device if it is not going to be used for a prolonged period.
Moving parts.



Please keep children out of this shredder.
The sharp blade inside shredder may hurt children.



This means paper clips must not be inserted into cutting head.



This means don't reach into the feed opening of the cutting head. This could cause serious injury.



This means be careful of ties and other loose clothing or necklace which could become entangled in the cutting head.



keep off your necklace away from the feed opening.




This means you should be careful if you have long hair which can become entangled in the cutting head. This could cause serious injury.



Keep aerosol cans and small items away from the shredder.

3. When the shredder is overloaded the motor or the shredder reverses automatically. Please reduce the amount of paper and insert again, shredder will run again. If auto reverse fails, please press “**REV**” button to take the paper out, if the jammed paper is too short to be taken out manually,
4. The machine will automatically stop running to prevent electromotor from overheating and run again after several minutes.
5. When the waste bin is full, the Bin-full LED will turn on (red color LED), and the machine will stop working. The shredder will start working again after emptying the waste bin. When the waste bin is pulled out, the Bin-Full LED will be off.
6. Red color LED flash—overload.
7. Red color LED light—over heat.
8. Blue color LED light—stand by.

 Overheat and the shredder will automatically stop operation. If the shredder is stopped as a result of the activation of automatic overheating protection device, please unplug it and the shredder will work again after about 60 minutes cold down.

Maintenance:

1. Warning: Be sure to unplug it before cleaning the shredder.
2. Use cloth dabbed with small amount of soap water to clean the exterior of the shredder. The cloth must be closely wrapped around the hand when using the cloth to wipe. So as to avoid the cloth to drop into the paper-feeding opening (only use fine cloth to do the cleaning). The maintenance by user is only limited to the cleaning of the external parts of the shredder.
3. As the case of the shredder is made from plastics. It is prohibited to use organic solvents such as gasoline benzenes solvents or dilution agent to do the cleaning. Decontamination powder must not be used too. Otherwise the plastic part of the shredder may suffer from discoloration, cracking, solution or scratch (caution) when cleaning the exterior of the shredder. Do not allow water to drop into the interior of the shredder.

Key Specification:

Basket:	20L
Power:	220-240VAC, 50-60Hz, 2.0A
Duty Cycle	45 mins ON/60 mins OFF
Power consumption:	380W
Shred size	4x33mm
Sheet capacity 70g A4:	18sheets
Throat width:	220mm
Dimension:	350x246x519mm