


MICRO CUT PAPER SHREDDER

Model: CS201C

Instruction manual

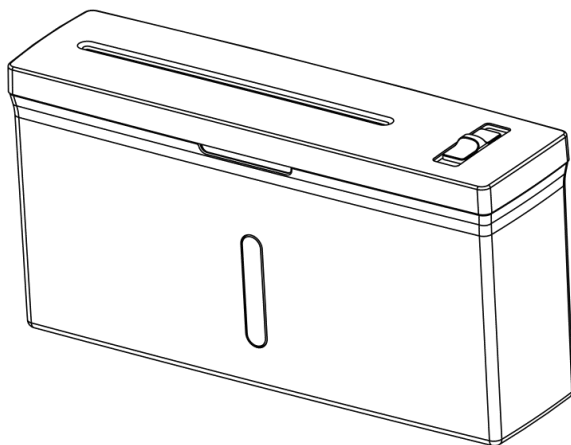

USER'S MANUAL

Setup:

1. Place the shredder securely on the top of the wastebasket. Be sure not to allow your fingers to get between the basket and the shredder head as you are placing the shredder in place.
2. Power adapter into any standard 24VDC outlet.

Operating the shredder:

The Switch is located on the top of the shredder. The Switch has three (3) settings.

1. When **AUTO** is selected. the shredding process is started automatically by inserting the paper into the feed opening. The shredder will stop automatically when the paper has completed its travel through the feed opening.
2. **REV** is used to assist in the removal of a paper jam, which reverses the shredding process prior to a completed cycle, thus clearing the cutters.
3. **OFF** Position is recommended when emptying the wastebasket or when the shredder is not in use for a prolonged period of time.

Shredder capacity:

CS201C will shred 2 sheets of 80 g/m² A4 paper and will accept paper width up to 220mm. When shredding small material like envelopes or credit card receipts, insert them through the middle of the feed opening.

Cautions:



This symbol is for the safety warning sign.

It can protect the motor very well after 3 to 5 seconds to reverse while the paper jammed.



This symbol is for the user to read the instruction before use the machine.



This device is not intended for use by children.

Avoid touching the intake opening with hands, clothing or hair.

Unplug the device if it is not going to be used for a long period.



Sharp edges Do not touch.



Please keep children out of this shredder. The sharp blade inside shredder may hurt children.



This means paper clips must not be inserted into cutting head.



This means don't reach into the feed opening of the cutting head. This could cause serious injury.



This means be careful of ties and other loose clothing or necklace which could become entangled in the cutting head.



keep off your necklace away from the feed opening.



This means you should be careful if you have long hair which can become entangled in the cutting head. This could cause serious injury.



Keep aerosol cans and small items away from the shredder.

- 1). Disconnect the power source prior to disabling or bypassing the equipment safeguard.
- 2). Restore the equipment safeguard before restoring power.
- 3). Unplug the equipment when not in use for an extended period of time.
- 4). Power adapter is used to disconnect/ connect the equipment, the socket outlet should be easily accessible.

Paper jams and overloads protection:

CS201C is equipped with a motor overload protection device, The normal short duty cycle for continuous shredding at maximum capacity is 10 minutes on and 45 minutes off. The power may terminate automatically in case of the following abnormal situations:

1. Operating the shredder at the maximum capacity continuously for a prolonged period of time, e.g. More than 10 minutes without stopping.
2. Exceeding the shredding capacity, e.g. Inserting more than 2 sheets of 80g/m² A4 paper at one pass, or the paper is not feed squarely into the feed opening.

Both abnormal operations may result in the activation of the automatic motor overload protection, which terminates the power to the unit. If this occurs you

should:

1. Power adapter from the DC outlet and wait at least 45 minutes for the overload protection to reset. Tear or cut off any excess paper from the top of the shredder.
2. Power adapter back into the DC outlet and place the Switch in REV. Pull the remaining paper out of the cutters. Place the Switch back to the Auto position if necessary.
3. With the Switch in the AUTO position and the feed opening clear, you are now ready to resume normal shredding. 8.8Lb paper in one pass, or if the paper is not feed squarely into the feed opening. Both abnormal operations may result in the activation of the automatic thermal motor overload protection circuit which terminates power to the shredder. A paper jam could cause the thermal motor overload protection to terminate AC power to the motor. Never allow the shredder to remain in a jammed condition with the AC power turned on.

For a minor paper jam

Place the slide switch in the REV position and pull the remaining sheets of paper out of the feed opening. Remove the not shredded portion of paper from the top and clean any excess paper shreds from the feed opening.

For a major paper jam

Turn off or unplug the power cord from the AC outlet and wait at least 30 minutes for the thermal overload protection to reset.

2. Plug in the AC power cord and place the slide switch in the AUTO position. If paper was left inside the feed opening prior to the overload, place the slide switch in the REV position, grasp the excess paper from the top, and pull it out. Be careful to not place your fingers near the feed opening or serious harm could result. Clear any excess paper shreds from the feed opening. Place the slide switch in the AUTO position. You are now ready to resume normal shredding.

Specifications:

Shred Type -----	Micro Cut
Shred Size -----	5/64"x15/32"(2x12mm)
Waste Container Capacity -----	1.05Gallons(4L)
Shredding Capacity -----	2 sheets
Feed Opening -----	220mm
Input -----	24VDC, 1.5A
Shredder dimension -----	13.97"x3.74"x7.08" (355x95x180mm)
Shredding speed -----	1.6m/min