

STRIP CUT PAPER SHREDDER


Model: SD108P

Operation manual



USER'S MANUAL

The safety alert symbol precedes each safety message in this instruction manual and on the product. This symbol indicates a potential personal safety hazard that could hurt you or others, as well as cause damage to the shredder.

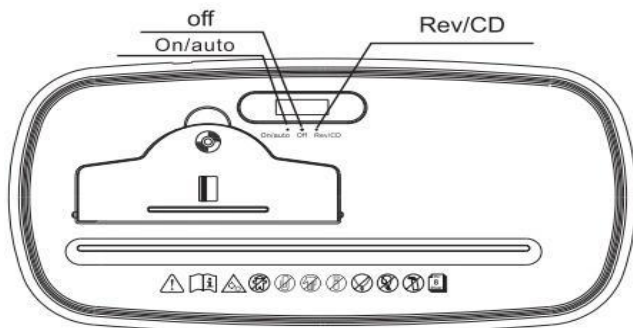

Settings auto

Simply insert paper into the center of the inlet, once your document has activated the trigger switch, the unit will turn on and off automatically.

Off and reverse

Moving the switch to OFF or REVERSE will cause the unit to run in the corresponding direction.

Clearing jams

If a paper jam occurs, switch the unit to the REVERSE position until the paper is out of the cutting wheels. In some cases, it may be necessary to alternate between OFF and REVERSE positions several times to help clear excess paper from the cutting area.

Following warnings are located on the unit please be aware of them.



This symbol is for the safety warning



This symbol is for the user to read the instruction before use the machine.



This device is not intended for use by children.

Avoid touching the intake opening with hands, clothing or hair.

Unplug the device if it is not going to be used for a long period.



Please keep children out of this shredder. The sharp blade inside shredder may hurt children.



This means paper clips must not be inserted into cutting head.



This means don't reach into the feed opening of the cutting head. This could cause serious injury.



This means be careful of ties and other loose clothing or necklace which could become entangled in the cutting head.



This means you should be careful if you have long hair which can become entangled in the cutting head. This could cause serious injury.



Keep aerosol cans and small items away from the shredder.



Do not Feed CDs/DVDs into the feed shaft.

ELECTRICAL SAFEGUARDS

- Unplug your shredder from mains before moving it, emptying the basket, or when it is not in use for an extended period of time.
- Do not operate with a damaged power supply cord or plug.
- The socket-outlet should be installed near the equipment and be easily accessible.
- Close supervision is necessary when the shredder is being used near children, persons suffering from physical impairment or pets.
- This shredder should not be used by children.

Installation

To place the shredder onto your basket, Plug the unit into a standard AC outlet.

Materials you can shred

Your shredder will handle most any type of office paper documents. Maximum capacity 8 sheets of 80gsm paper.

Important safety instructions

Your safety as well as the safety of others is important to us. In this instruction manual and on the product are important safety messages. Please read these messages carefully.

Disposal

Please dispose of this product responsibly at approved waste or recycling facilities. Do not dispose of in household waste.

Warning

If the machine becomes jammed DO NOT attempt to clear the jammed paper with your fingers. Instead, try to clear the jam by feeding another piece of paper through. Should this method be unsuccessful in clearing the paper jam, please turn off and unplug the machine before attempting any alternative methods of removing the jam.

Specifications

Shred Type	Strip cut
Shred Size	0.23"x11.69"(6x297mm)
Waste Container Capacity	3.12gallons(12L)
Standard Shredding Capacity	8 sheets of 80g/m ²
Feed Opening	8.66"x220mm
Input	110-120VAC, 60Hz, 2.0 A
Shredder Dimension	12"x6.1"x14.6"(306x155x373mm)
Shredding Speed	0.11"(2.8m/min)
Continuous Working Time	3 mins on/30 mins off