

Electric Kettle

(SK-1605 SK-1703SEW SK-1709W LPS-1996)

INSTRUCTION MANUAL

I. IMPORTANT SAFEGUARDS

When using any electrical appliance, basic precautions should always be followed including the following:

- Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- Do not put or take out the plug to or from a socket with wet hands and do not pull the power cord!
- The appliance is intended for household use only and similar (in shops, offices, and

similar workplaces, in hotels, motels and other residential environments, in facilities providing accommodation with breakfast). Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than intended.

- Avoid any contact with moving parts.
- This product can be used by children at the age of 8 years and above if they are supervised or if they were instructed regarding use of the appliance in a safe way and if they understand possible risks. Children should be supervised to ensure that they do not play with the appliance. User cleaning and maintenance must not be performed by children if they are younger than 8 and unsupervised. Children younger than 8 years must be kept out of reach of the appliance and its power cord.
- This appliance is not intended for use by

persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Check the power cord and plug regularly for any damage.
- Never use the appliance if its power cord or plug is damaged, if it does not work properly, if it fell down and was damaged or if it fell to water. In this case take the appliance to a special service to check its safety and proper function.
- If the power cord of the appliance is corrupted, it has to be replaced by the producer, its service technician or a similarly qualified person so as to prevent dangerous situations.
- In case of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an

authorized service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this appliance.

- Never immerse the electric kettle and the power base in water and other liquids (even partially)! Do not allow liquid to penetrate the electrical parts of this kettle.
- Do not open the lid if the water is boiling or if it is hot or if it is in use.
- Only fill the kettle with cold water.
- Always unplugging the unit when not in use, before cleaning, or when adding/removing parts. Allow it to cool down completely before cleaning the appliance.
- Always keep the fork of plug dried before the appliance is used again.
- Use the electric kettle with the power base designed for this type only.
- DO NOT carry the appliance by the power cord.
- When the appliance is in operation, prevent pets,

plants, or insects to get in contact with it.

- Do not insert any objects into holes or slots in this appliance.
- Never leave the appliance unsupervised and check it during the whole time of water heating!
- The electric kettle cannot be used for heating other liquids than water!
- Do not wash the removable power base or the kettle in running water!
- Use the appliance on flat surfaces and in the working position only at places with no risk of turning over and in sufficient distance from heat sources (e.g. heater, stove, cooker, oven, grill), flammable objects (e.g. curtains, drapes, etc.) and wet surfaces (e.g. sinks, wash basins, etc.).
- The power base is designed and intended only for power supply of the appliances; it is not permitted to use it for another purpose.
- There must be water in the electric kettle before putting into operation. Do not fill the electric kettle with water if it is not on the power base.
- Do not add too much water to the electric kettle. If the water level exceeds the maximum recommended amount, hot water may be

splashing out.

- Prevent injuries when handling (e.g. by hot water, steam).
- Do not touch outer surfaces during operation of the kettle, they are hot and there is a risk of getting burned. Do not touch the lid during and after cooking!
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- The appliance is equipped with the heat safety lock which disconnects power supply if the steam sensor fails, if water boils away or if an empty kettle is turned on. If it happens, unplug the appliance from power supply and let it cool down. Do not fill the kettle with cold water in order to cool it down quickly. It could reduce life of the heating element.
- Before switching on the kettle ensure that the water level is between MIN and Max marks.
- It is not allowed to modify the surface of the appliance in any way (e.g. using a self-adhesive wallpaper, foils, etc.)!
- The kettle may not be used without the filter sieve.
- Keep the device and the cable away from heat,

direct sunlight, moisture, sharp edges, etc.

- The power cord must not be damaged with sharp or hot objects, open fire and it must not be sunk into water or bent over sharp edges. Never put it on hot surfaces or do not let it hang over the edge of a table or work tables. Hitting, stumbling, or pulling the power cord e.g. by children can result in tilting over or drawing the appliance down and serious injury!
- Use of an extension cord with appliance is not recommended. However, if it is necessary to use an extension cord, ensure that the cord is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. The extension cord should not be placed in a position where it can be pulled on by children or animals or tripped over.
- Ensure that the kettle is switched off before removing it from its power base.
- Ensure that the switch is in the “off” position after each use.
- Never use the appliance for any other purpose than for the intended purpose described in these instructions for use!

- The producer is not responsible for damage caused by improper use of the appliance (e.g. burning, scalding, fire) and its guarantee for the appliance does not apply to situations when the safety warnings above are not complied with.

II. INSTRUCTIONS FOR USE

Remove all the packing material and take out the electric kettle with the power base. Remove all possible adhesion foils, stick-on labels, or paper from the appliance. Fill the kettle with clean cold water up to max., turn it on and let the water boil before first use. Then pour the water out and repeat the process several times (at least two times). You will boil the kettle out properly this way and get rid of potential taste of plastic. If you feel like you have aftertaste of plastic from boiled water, we recommend to repeat the procedure according to the instructions in the paragraph IV. MAINTENANCE - cleaning the kettle. Another recommendation is to leave the empty kettle open for 24 hours. The material of the kettle coming in touch with water is approved of sound health

properties. Potential slight “smell” or “aftertaste of plastic” during first use after unpacking the kettle is a common case and should not be a reason for returning the appliance. Unwind the necessary length of the power cord from the storage space of the power base. Place the power base on a suitable surface, in the height of about 85cm, out of reach of children and incapacitated persons and plug the fork of the power cord to the electric socket. Hold the kettle on the handle. Open the lid by pulling off the lid button. Fill the kettle with drinking water. The minimum and maximum amount of water is marked on the water gauge. Closed the lid by snapping. Put the electric kettle on the power base and turn it to the “I” position by the on/off button. Function of the electric kettle is signaled with the control light in on/off button. After boiling the appliance switches off automatically. Before reaching the boiling point, you can switch off the appliance by turning the on/off button to the “0” position. Always use fresh drinking water for boiling.

Please beware of escaping steam from the lid of the kettle when in use.

ATTENTION

- When heating water, the lid must be closed, otherwise the kettle may not switch off.
- In bigger tilting of the electric kettle backwards, particularly when it is filled up to maximum, water can flow out from the electric kettle in the bottom part of the kettle. This does not affect safety or other functions and it does not mean any failure of the electric kettle. In the case of tilting the electric kettle with hot water there is a risk of scalding. Therefore, do not tilt the electric kettle.
- Make sure filter sieve and its cover is fit on thoroughly in the upper part of the kettle in order that it does not fall to the bottom!
- If the kettle was removed from the power base during boiling, remains in ON position. This means that if you put it back on the power base, it will immediately continue in heating.

III. MAINTENANCE

Unplug the appliance from power supply by taking the fork of the power cord out of the socket! Clean

the kettle only when it is cooled down! Do not use rough and aggressive detergents (e.g. sharp objects, scrapers, diluting agents or other solvents)! the casing of the electric kettle and the heating bottom is made of quality stainless steel, but in common use, impurities from water get stuck on them (water scale), particularly above the heating element. It is not rust or another material defect of the kettle container and the appliance is not subject to a complaint for this reason.

Cleaning the kettle

Pour about 50g citric acid to the kettle with the water scale sediment. Fill the kettle to about one half and mix. After it dissolves, fill the kettle to 3/4 of the maximum amount of water. Place the electric kettle on the power base and turn it on. Before boiling, turn off the kettle, let the solution take effect for about 10 minutes and then pour it out.

Clean the kettle thoroughly with clean water.

Repeat the whole procedure if the kettle is too soiled.

Clean the electric kettle regularly!

To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild

non-abrasive cleaner. Rinse and dry with a clean, dry, soft cloth.

Wipe the kettle, inside and out, with a damp cloth.

You may use a little household detergent, but if you do, rinse well to avoid tainting the water.

Wipe the base with a damp cloth.

Keep all connectors and sockets dry.

Do not use harsh or abrasive cleaning agents or solvents.

Cleaning the filter sieve

Take the filter sieve from the kettle. Clean it from possible sediments in running water using a fine brush. Then put the filter sieve back in the opposite away.

IV. ENVIRONMENT



Printed signs of materials used for manufacture, packing, components, and accessories, as well as their recycling, are on all the pieces if their dimensions enable it. The symbols on the product or in the accompanying documentation mean that the used electric or electronic products must not be disposed together with municipal wastes. Please,

hand them over to the collection points designed for their correct disposal, where they will be accepted free of charge. By correct disposal of this product, you can help to preserve valuable natural resources and help to prevent possible negative impacts to the environment and to human health, which could be the results of incorrect waste disposal. For further details ask the municipal authorities or the nearest collecting point. Penalties can be charged for incorrect disposal of such wastes, according to national regulations. If the appliance is to be put out of operation definitely, we recommend cutting off the feeder cable, to disable its use.

V. TECHNICAL DATA

Voltage (V)

shown on the type label of the appliance

Absorbed power (W)

shown on the type label of the appliance

Max. Volume

LPS-1996	0.8 L
----------	-------

SK-1605 / SK-1703SEW / SK-1709W	1.7L
---------------------------------	------

Protection class of the appliance	I.
-----------------------------------	----

EC declaration on conformity was issued for the product.

Regarding EMC, the product conforms to the council directive No. 2004/108/EC as amended and regarding the electric safety, the product conforms to the Council directive No.2006/95/EC as amended. The product is in compliance with the regulation of the European Parliament and Council No. 1935/2004/EC on materials and articles intended to come into contact with food.

The manufacture reserves its right for unimportant deviations from the standard design without influence of the product function.

HOUSEHOLD USE ONLY. DO NOT IMMERSE IN WATER OR OTHER LIQUIDS. TO AVOID DANGER OF SUFFOCATION, KEEP THIS PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY.



NOTICE