 




IN240900168V01_US

820-412V80

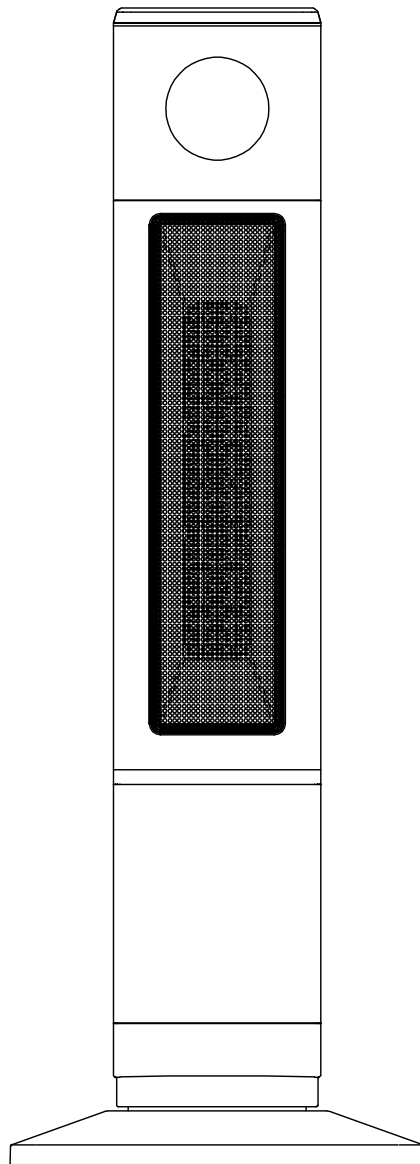

120V 60Hz 1500W

255895



EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Thank you for buying this product, please read the instructions carefully before using



Introductions:

This heater is designed according to the advanced technology at home and abroad, combined with the needs of domestic and foreign users. This series has the characteristics of simple operation, beautiful shape and exquisite design and it is suitable for home, school, office and other places.


Specifications:

Model	SF712A
Rated voltage	120V
Rated frequency	60Hz
Rated power	1500 W
Applicable ambient	The temperature is -20℃~ 40℃/ -4°F~104°F, and the relative humidity is less than 85%

  Construction

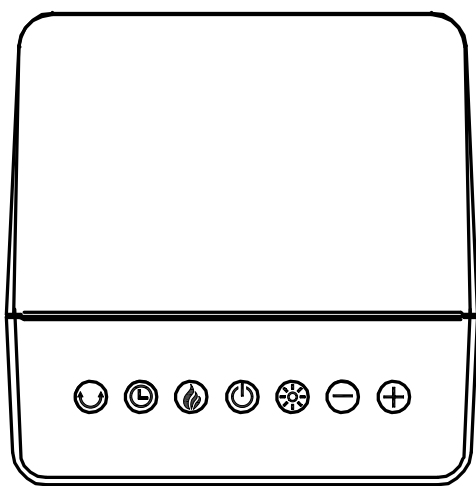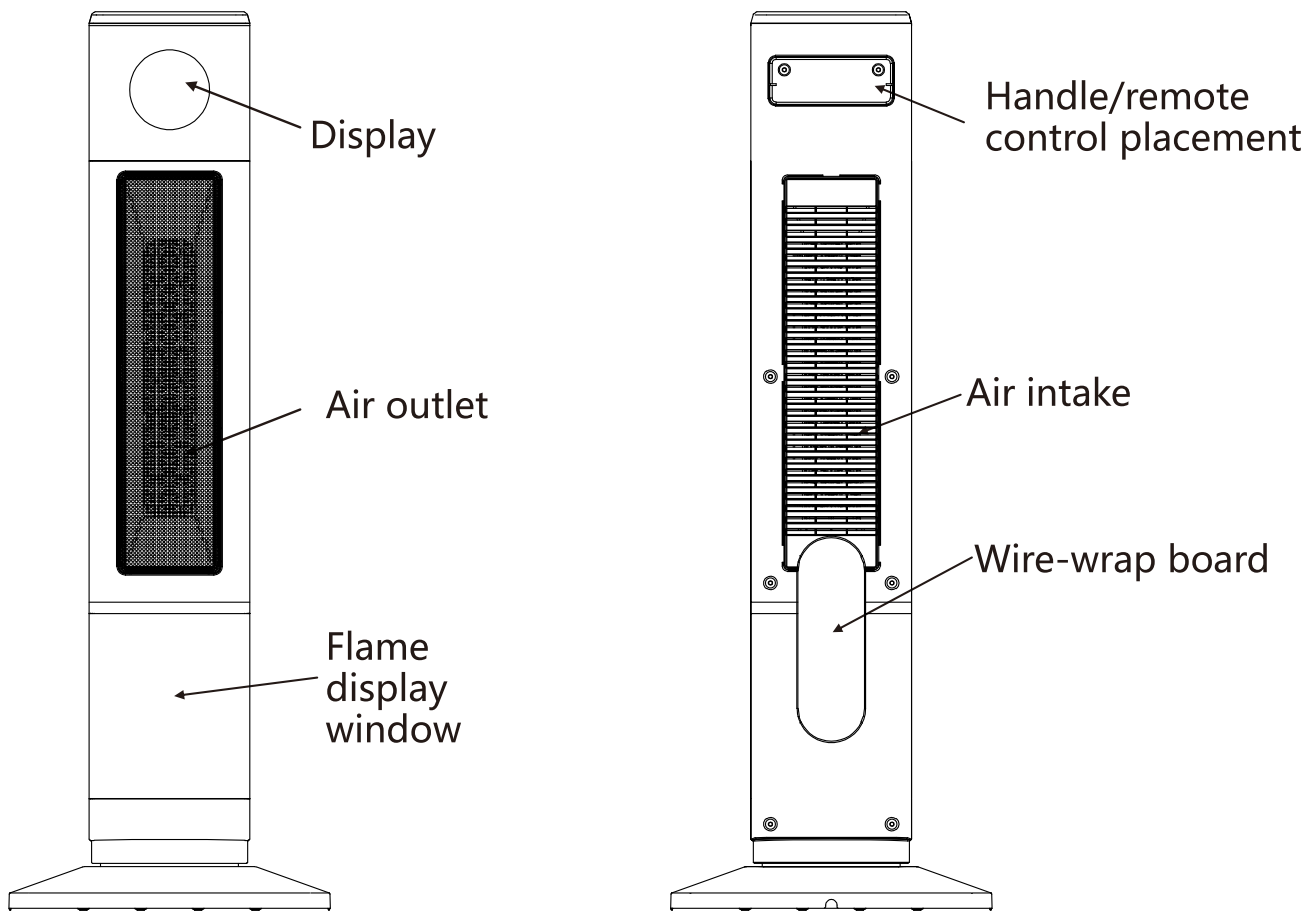


Control panel

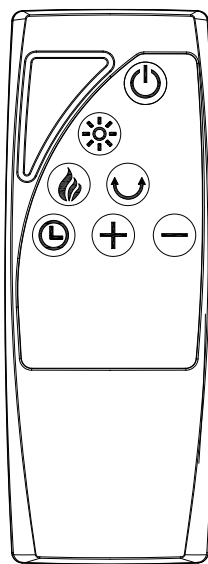 

Remote control

 Base Installation Instructions

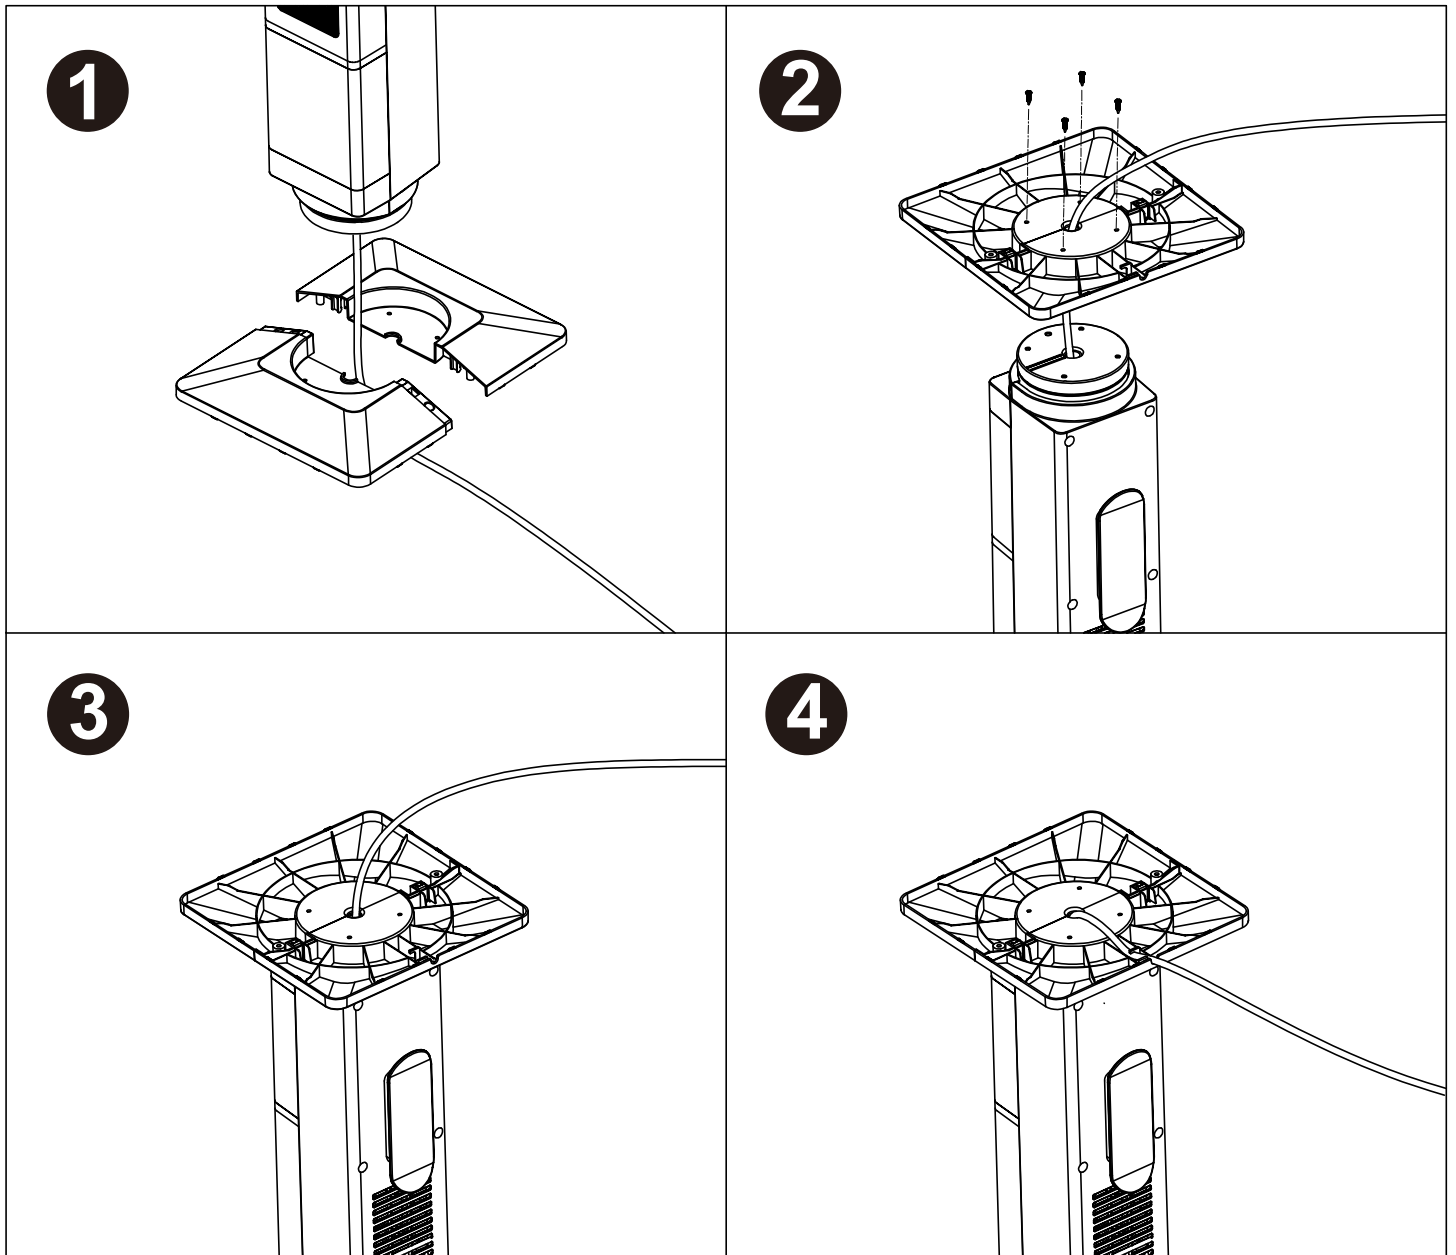

Step 1: Put the power cable in the middle of the base, and align the front and rear bases with the buckles and installed.

Step 2: Position the buckled base with the fuselage.

Step 3: Fix the base to the body with 4 screws.

Step 4: Fix the power cable in the cable hole.

Instructions for use

Instructions:

When the machine is connected to the power supply, it drops a sound and the product enters the standby state.

Press  switch button, the machine turns on,  indicator lights on, the machine starts cooling, blowing out cold air, and the flame display is turned on. Press the switch button again to enter the shutdown state (after shutdown, delay the blowing for 15 seconds).

Press  timing button to enter the timing function, and the timing cycle is "0H-1H-2H.....12H-0H", touch to achieve timing setting cycle, timing setting range is 1-12 hours.

Press  level button to select level. Press the "level" button once after turning on the machine, the machine will blow out low hot air, press twice to blow out high hot air, press again to blow out cool air (room temperature).

Press  wing button to start the swing function; press again, swing function stops.

Press "temperature" "+" "-" to select temperature setting, press touch "+" to raise temperature, press touch "-" to reduce temperature; stop operating for 3 seconds, the screen stops flashing, indicating that the setting has been completed, and the temperature setting range is 10°C- 35°C/50°F -95°F .

Note: Only when the heating gear is working can it be effectively used.

Press  flame button to start the flame displaying function; press again, the flame displaying stops.

Notes:

1. Before use, check whether the power supply used is consistent with the marking on the nameplate of the machine, and whether the power cord and plug are damaged.
2. Non-professional personnel are not allowed to repair or change the machine by themselves to avoid danger.
3. In order to ensure the use effect and product performance of this machine, please do not use this machine in the plateau area.
4. Turn off the power before pulling out the plug. Do not plug in or pull out the power plug with wet hands to avoid electric shock.
5. It is forbidden to use it in places where flammable and explosive items are stored, so as to avoid safety accidents such as fire and electric shock.
6. It is strictly forbidden to use it in a place with a lot of dust. When using it, the surrounding air should be unobstructed, and the ambient temperature should not exceed 35 °C /95 °F. The power should be turned off when there is no one in the room.
7. This machine is not suitable for persons with physical, sensory or intellectual disabilities or those who lack experience and common sense, unless someone else can ensure their safety, supervise them, and read the usage method in advance.
8. If the power cord is damaged, in order to avoid danger, it must be replaced by the qualified technician.
9. Do not clean, maintain and move the machine with electricity.
10. After use, turn off all buttons, and then unplug the power plug. Please unplug the power plug if it will not be used for a long time.
11. It is strictly forbidden to use this machine in an environment with flammable and explosive gases, and avoid direct sunlight for a long time.
12. It is forbidden to insert foreign objects into the air inlet and outlet to avoid danger, and more attention should be paid to children.

13. It is strictly forbidden to use this product with programs or other devices with automatic power-on.
14. Do not place items on the machine, keep the air inlet and outlet nets unblocked, and strictly prohibit foreign objects from covering the air outlet.
15. Do not place the machine in an inclined or other unbalanced place to avoid the machine falling down and causing damage to the body or internal parts.
16. This machine is suitable for indoor use, please do not use it outdoors.
17. When going out or not in use for a long time, please turn off the switch of the product and pull out the power plug from the socket.
18. When wiping or maintaining, first cut off the power supply, wait for the machine to stop working, and then clean it with a damp cloth or a soft brush. Do not use corrosive cleaning agents or solvents to wash the machine.
19. If the product fails, please contact the qualified technician.
20. It is strictly forbidden to overturn the machine to prevent accidents. If the machine is accidentally tipped over, unplug the power plug immediately.
21. Do not place the air inlet and outlet of the machine close to the walls, curtains and other objects, otherwise it may block the air flow and affect the air supply effect.
22. Do not knock or vibrate the body of the machine when it is in use, otherwise it may cause automatic shutdown, then just restart the machine.
23. It is forbidden to place the machine directly under the power socket.
24. Do not use the machine around the bathtub, spray head or swimming pool.
25. To avoid overheating, it is forbidden to cover the heater.

Cleaning and maintenance

1. When not in use for a long time, please clean the product, take it to dry, and put the body and all parts into the packaging box according to the original packaging sequence and place them in a cool and dry place for safekeeping.
2. Before cleaning, please cut off the power supply and wait until the standby body is cooled down.
3. Do not rinse the product directly with water, wipe it with a soft cloth containing a little neutral detergent, and then wipe it with a clean soft cloth. Please Do not use solvents such as gasoline and toluene for cleaning.
4. After cleaning, the product can be used after being fully dried.

Common faults and troubleshooting methods

Faults	Reasons	Solutions
can not turn on	• The power cord is not plugged in or in poor contact • The power switch is not turned on • Body damage	• Plug it in for good contact • Turn on the switch first, and then press other keys to make the machine work • Ask qualified technician for help
can not turn off	• The on/off key is not pressed •The body is damaged	• Press the switch to stop the machine •Ask qualified technician for help

If you have any questions, please contact our customer care center, Our contact details are below:

US

 001-877-644-9366

 customerservice@aosom.com

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA

If you have any questions, please contact our customer care center, Our contact details are below:

CA

 416-792-6088

 customerservice@aosom.ca

Imported by Aosom Canada Inc.
7270 Woodbine Avenue, Unit 307, Markham,
Ontario Canada L3R 4B9
MADE IN CHINA

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle, Nos coordonnées sont les suivantes:

 416-792-6088

 customerservice@aosom.ca

Importé par Aosom Canada Inc.
7270 Woodbine Avenue, unité 307,
Markham, Ontario Canada L3R 4B9
FABRIQUÉ EN CHINE

If you have any questions, please contact our customer care center, Our contact details are below:

UK

 0044-800-240-4004

 enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle, Nos coordonnées sont les suivantes:

 0033-1-84166106

 aosom@mhfrance.fr

Importé par/Fabricant/REP:
MH FRANCE
2 Rue Maurice Hartmann
92130 Issy Les Moulineaux
France
FABRIQUÉ EN CHINE

Wenn Sie Fragen haben, wenden Sie sich bitte an unser Kundendienstzentrum, Unsere Kontaktdaten stehen unten:

DE

 0049-0(40)-88307530

 service@aosom.de

ADRESSE DES IMPORTEURE/Hersteller/REP:
MH Handel GmbH
Wendenstraße 309
D-20537 Hamburg
Germany
IN CHINA HERGESTELLT

In caso di dubbio, si prega di contattare il nostro centro assistenza clienti, I nostri dettagli di contatto sono di seguito:

IT

 0039-0249471447

 clienti@aosom.it

IMPORTATO DA/Produttore/REP:
AOSOM Italy srl
Centro Direzionale Milanofiori
Strada 1 Palazzo F1
20057 Assago (MI)
P.I.: 08567220960
FATTO IN CINA

Si tiene alguna pregunta, comuníquese con nuestro Centro de Atención al Cliente, Nuestros datos de contacto son los siguientes:

ES

 0034-931294512

 atencioncliente@aosom.es

IMPORTADOR/Fabricante/REP:
SPANISH AOSOM, S.L.
C/ROC GROS, N°15.08550, ELS HOSTALET DE
BALENYÀ, SPAIN.
B66295775
HECHO EN CHINA

Se tiver alguma dúvida, por favor contacte o nosso Centro de Atendimento ao Cliente, Os nossos dados de contacto são os seguintes:

PT

 0034-931294512

 info@aosom.pt.

IMPORTADOR/Fabricante/REP:
SPANISH AOSOM, S.L.
C.ROC GROS N.15, 08550. ELS HOSTALET DE
BALENYÀ
FEITO NA CHINA

FR