

Ice Cream & Frozen Treat Maker

IC-1010

User Manual



We See Ice, We See Possibilities.

This product is intended for **home use** only. Please read and follow the instructions carefully.

Contents

1.Cautions & Warnings	1
Cautions & Warnings	1
2.Product Specifications	3
2.1 Product Specifications	3
2.2 Product Structure	4
2.3 Technical Specifications	4
3.Quick Start Guide	5
4.Troubleshooting	6
5.Maintenance & Care	7
6.Warranty	9

Please review this manual thoroughly before use and retain it for future reference. The product is as described in the actual packaging, and IcyTreat brand holds all rights to final interpretation.

1.Cautions & Warnings

1. Avoid electric shock: Do not immerse the cord, plug, or device in water or any other liquids.
2. Supervision required: Children should use this device and its attachments only under the supervision of a responsible adult.
3. Not for certain users: This device is not intended for use by individuals with limited physical, sensory, or mental abilities, or those without sufficient experience or knowledge, including children, unless supervised by a capable adult.
4. Unplug when not in use: Always unplug the device before cleaning or when not in use. Do not use if the cord or plug is damaged.
5. Do not use if damaged: Do not use the device or any of its parts if they are malfunctioning or damaged.
6. Use only approved attachments: Using attachments not recommended by the manufacturer may cause malfunctions.
7. Protect from the elements: Avoid exposing the device to outdoor elements or damp conditions for extended periods.
8. Protect the power cord: Do not bend the power cord, allow it to hang off edges, or let it come into contact with heat sources or hot surfaces.
9. Keep away from heat: Do not expose the device or its attachments to heat sources, hot surfaces, or magnetic or signal-emitting equipment.
10. Do not use in an oven or microwave: Never use the device or its attachments in an oven or microwave.
11. Ensure the locking cover is in place: Before operating the device, ensure the locking cover is securely locked in place.

12. Do not run the machine without pint: Never start the machine without inserting the pint, and never attempt to open the pint or adding indredients while the machine is running.
13. Do not touch the machine while it's running: Keep away from the machine while it is operating, and do not put your hand in the pint while the machine is running.
14. Handle with care: The paddle has sharp edges. Keep it away from children when handling or storing.
15. Use official accessories only: For safety and optimal performance, use only the official accessories and replacement parts designed for this device.
16. Only open after the machine has stopped: Do not attempt to remove the locing cover or the pint until the paddle has completely stopped.
17. Do not exceed the max fill line for proper operation.



Cautions:

*** This device complies with low voltage, electromagnetic compatibility, and environmental equipment standards and regulations. Follow the cautions below to ensure proper operation and avoid safety incidents due to improper use.**

- **Clean after each use:** To maintain the longevity of your device and prevent food odors or residue from affecting its performance, clean it with a damp cloth after each use.
- **Avoid crushing ice:** Do not use the device to crush pure ice, as this may cause damage.
- **Allow for rest:** For optimal performance, let the device rest for 10 minutes after 15 consecutive cycles before resuming use.

2. Product Specifications

2.1 Product Specifications

Product Name: Ice Cream & Frozen Treat Maker

Model: IC-1010

Rated Voltage: 120V

Rated Frequency: 60Hz


Rated Power: 500W

Motor: Brushless

Email: support@icytreat.vip

Made in China

2.2 Product Structure

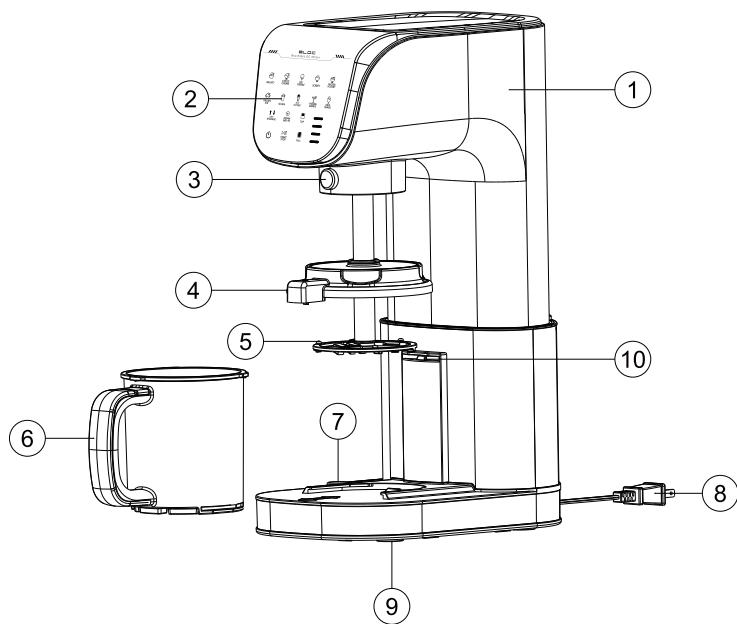

1. Main Unit	6. Pint
2. Display Screen	7. Main Power Switch & Fastening Components
3. Shaft-Paddle Unlock Button	
4. Locking Cover	8. UL Power Cord
5. Shaft-Paddle System	9. Rubber Feet

2.3 Technical Specifications


Rated Power: 500W

Capacity (single pint): 0.6Qt/19.2Oz/568ml


3. Quick Start Guide

1


Calibration

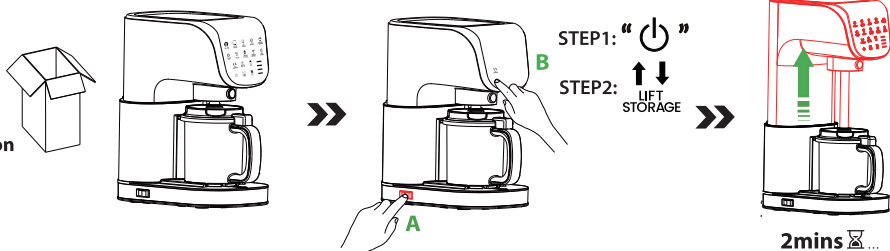

2 Preparation

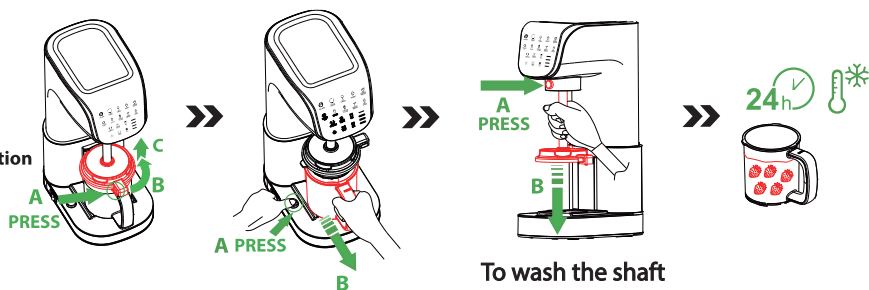

3 Start Up

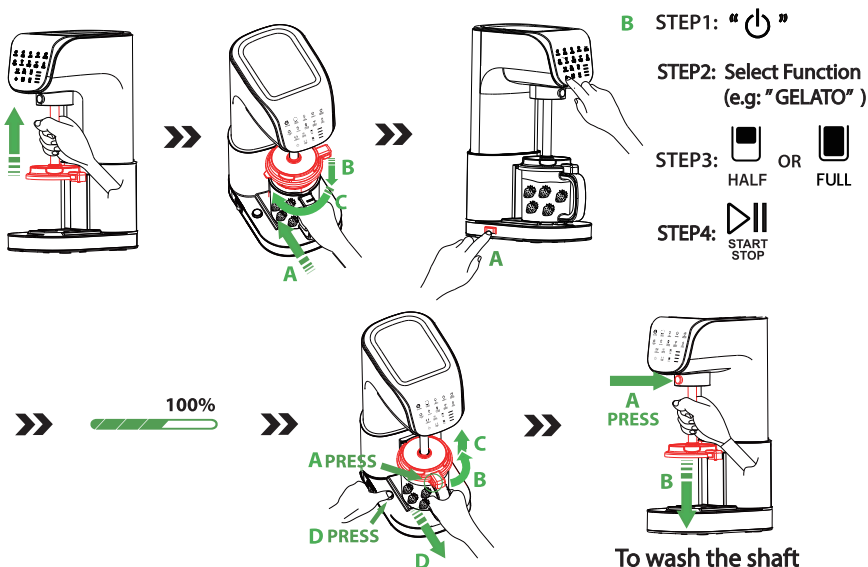


4. Troubleshooting


The device uses screen indicators and a red LED light to signal various issues. Issues are indicated by either rapid or slow flashing. If the issue cannot be resolved, please do not attempt to disassemble the machine yourself. Please contact customer service or take the device in for repairs.

> Flashing

(Not installed properly)

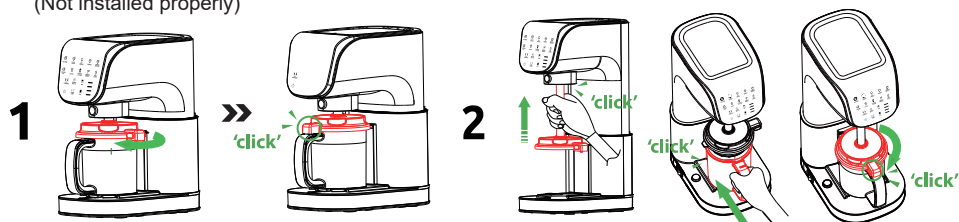

> Protective Pausing

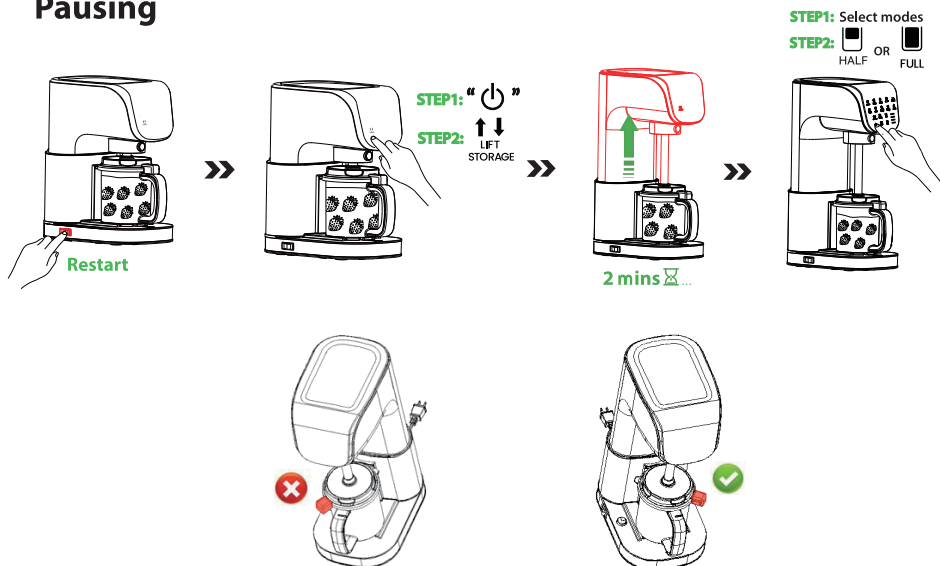

5. Maintenance & Care

After using the device, please remember to clean and maintain it promptly.

- Before cleaning, be sure to unplug the device to disconnect the power.
- Clean the main unit with a damp cloth only; do not immerse, rinse, or put it in the dishwasher.
- The shaft-paddle system and pints are dishwasher safe and can be cleaned directly in the dishwasher.

LED Flashing Mode Definitions:

- **Rapid Flashing Mode:** The LED on the power board flashes once every 0.5 seconds, with a 1-second interval.
- **Slow Flashing Mode:** The LED on the power board flashes once every 1 second, with a 2-second interval.

Indicator	Issue	Suggested Solution
Rapid flashing for 2 times	System self-check	Unplug the device, then plug it back in to check if it operates normally. If it still does not start correctly, please contact the customer service for assistance.
Rapid flashing for 3 times	Excessive ingredients	Please add ingredients only up to the pint's fill line, or wait for the device to reset before trying again.
Rapid flashing for 4 times	Abnormal power consumption in standby mode	Unplug the device, then plug it back in to check if it operates normally. If it still does not start correctly, please contact the customer service for assistance.
Rapid flashing for 5 times	Circuit components may need attention	
Slow flashing for 2 times	Input voltage is higher than the normal range	Please check if the power supply is functioning properly and test with different outlets. If the device still does not start correctly after testing, please contact customer service.
Slow flashing for 3 times	Input voltage is lower than the normal range	
Slow flashing for 4 times	Excessive ingredients	Please add ingredients only up to the pint's fill line, or contact the customer service for assistance.
Slow flashing for 5 times	The motor is jammed	Unplug the device, then plug it back in to check if it operates normally. If it still does not start correctly, please contact the customer service for assistance.

6. Warranty

One-Year Warranty:

This device (IC-1010) comes with a one-year warranty covering defects in materials and workmanship. Please note that this warranty does not cover damage resulting from misuse, abuse, or unauthorized modifications. For any warranty claims, please contact customer service.

30-Day Return and Exchange Policy:

New devices that didn't start when they arrived, arrived in damaged condition, or are still in an unopened box can be returned for a full refund within 30 days of delivery.

Extend the Warranty by Additional 6 Months:

By registering on our official website or join our community, our users can extend the warranty by an additional 6 months.

Warranty Exclusions:

Damage caused by improper use or handling.

Unauthorized repairs or modifications.

Accidental damage or wear and tear.

*To make a claim, please provide proof of purchase and a description of the issue. For further assistance, contact our customer service team.

Our customer service email

support@icytreat.vip

Or scan this QR code to contact Our
service team via the phone scanner



RoHS

