


Stainless Steel Pedal Trash Can Instruction Manual

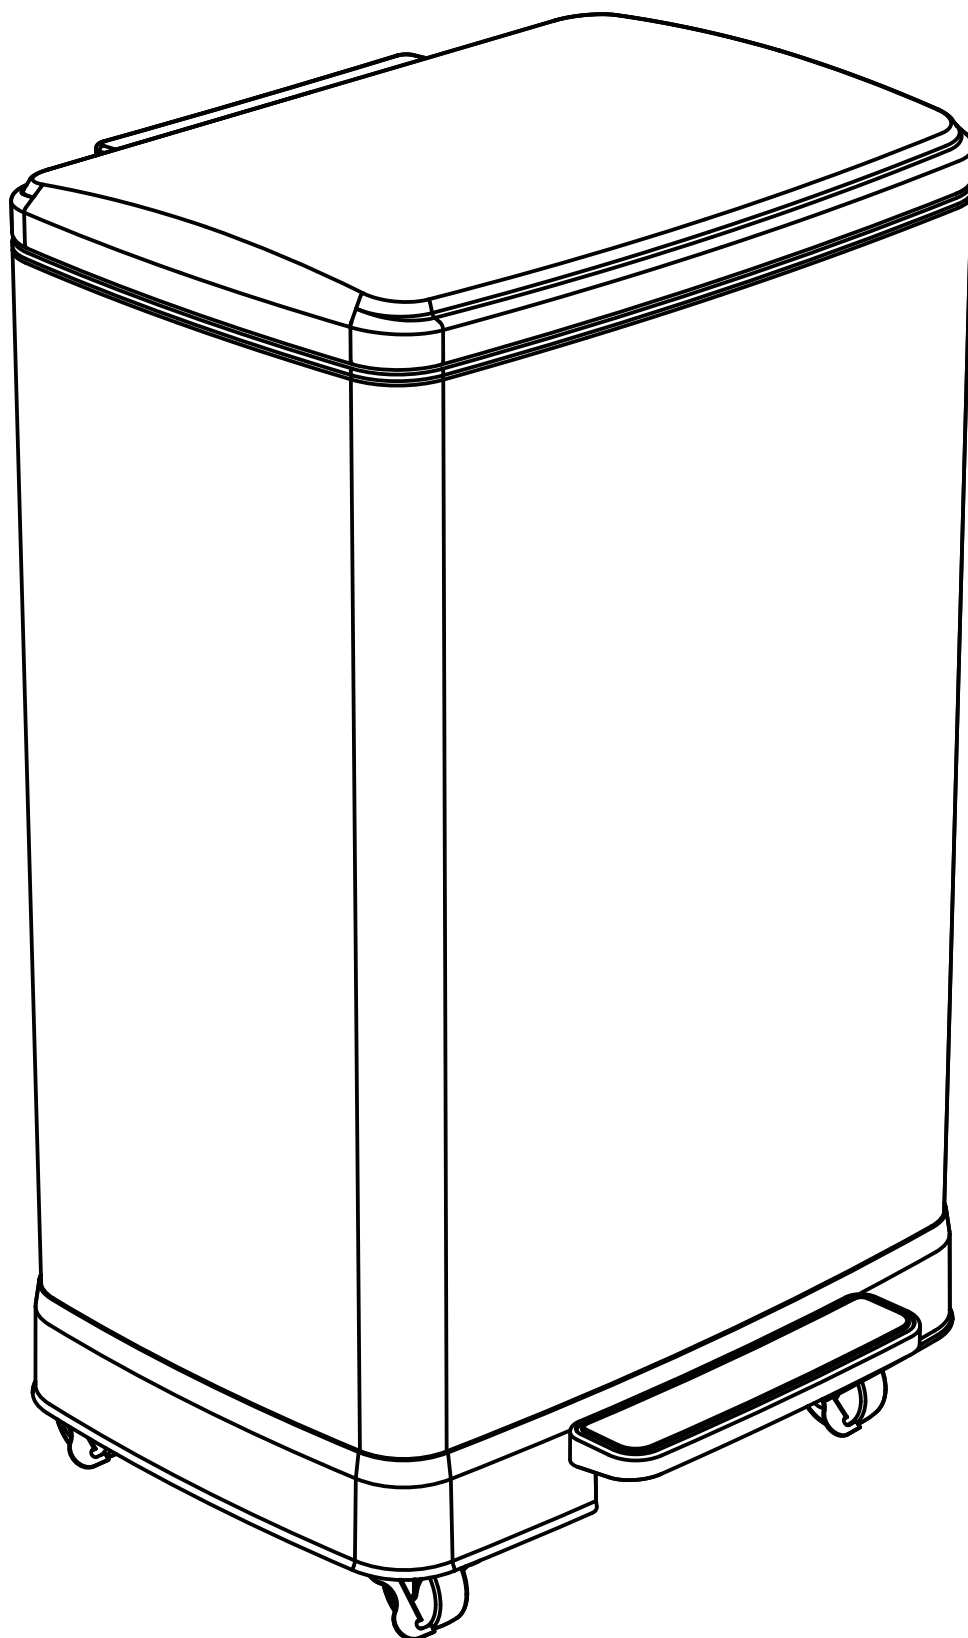

Product Features

Hands-free Operation:

Step on the pedal to open the lid; release to close automatically.

Dual-mode Lid Lock:

Manual push-lock only works when the pedal is fully released.

Durable Construction:

Sturdy stainless steel body with anti-fingerprint coating.

Removable Inner Bucket:

Easy to clean and empty.

Soft-close Mechanism:

Quiet, slow lid closure (no slamming).

The lid cannot be pushed open manually while the pedal is depressed. Manual push-to-open/lock is only available when the pedal is released.

How to Use

1. Open the Lid
2. Step on the pedal firmly → Lid lifts open.
3. Close the Lid.
4. Release your foot from the pedal → Lid closes slowly and silently.
5. Manual Lock (Only when pedal is released).
6. Ensure pedal is fully up → Push the lid down firmly to lock it open (for long tasks).
7. Unlock the Lid.
8. Gently lift the lid or step on the pedal to release the lock.

Installation & Bag Setup

1. Lift the inner bucket out of the outer can.
2. Place a trash bag into the inner bucket, tucking the bag edge over the rim.
3. Insert the inner bucket back into the outer can.

Care & Maintenance

Cleaning:

Wipe the stainless steel surface with a soft, damp cloth; avoid abrasive cleaners.

Odor Control:

Wash the inner bucket with mild soap and water; dry thoroughly before reuse.

Mechanism Care:

Keep the pedal and hinge area free of debris to ensure smooth operation.

Caution!

1. Do NOT force the lid open/closed manually while the pedal is depressed (may damage the mechanism).
2. Do NOT overfill the trash bag (may cause jamming or lid misalignment).
3. Keep fingers clear of the lid hinge area during opening/closing.