



- EN** Scan for user manual
- DE** Scan für Benutzerhandbuch
- FR** Scannez pour le manuel d'utilisation
- IT** Scansiona per il manuale utente
- ES** Escanear para el manual del usuario
- TH** สแกนคู่มือผู้ใช้

PRECAUTIONS

- Before using Joyride, please check if the pull rod and screws are fully tightened. Ensure the wheels are secure and there are no visible signs of damage.
- You are responsible for the safety of your children during the journey. Always supervise your children.
- Only allow adults to carry the suitcase.
- When a child is sitting on the JoyRide suitcase, the accompanying adult must hold the pull rod at all times.
- When pushing the suitcase with a child sitting on it, the adult must firmly grasp the handle, and the child's feet must be placed on the footrest.
- Do not use the suitcase with a child on it on slopes with a large incline.
- The seat of the suitcase can only accommodate one child.
- Do not exceed a walking speed of 5 km/h to prevent the child from falling.
- Avoid using the suitcase with a child on it in rainy or snowy weather to prevent slipping.
- Do not use the suitcase on wet, sandy, muddy, oily, dirty, icy, or uneven roads.
- When folding and expand the suitcase, keep children at a safe distance to avoid injury. Keep the folding frame away from children's reach to prevent them from pinching their fingers.
- Store the suitcase out of reach of children to prevent them from using it unsupervised.
- When using public transportation, prevent the suitcase from tipping over or sliding.
- Prohibit children from moving the JoyRide Suitcase by themselves to ensure their safety.
- JOYRIDE contains small parts that may pose a choking hazard. Keep packaging and small parts away from children to avoid choking or suffocation risks.



Joyful Kids · Joyful Trip



www.jovikids.com



[jovikids_global](https://www.instagram.com/jovikids_global)



service@jovikids.com



[jovikids_global](https://www.tiktok.com/jovikids_global)

25V1.0

Model WDST001

All rights reserved ©2025 JOVIKIDS. JOVIKIDS and all associated logos are trademarks.

 
All product specifications are correct at time of print.

JOVIKIDS reserves the right to change anything at any time without prior notice.

Color representation is as close as processes allow.


USER MANUAL

JOYRIDE

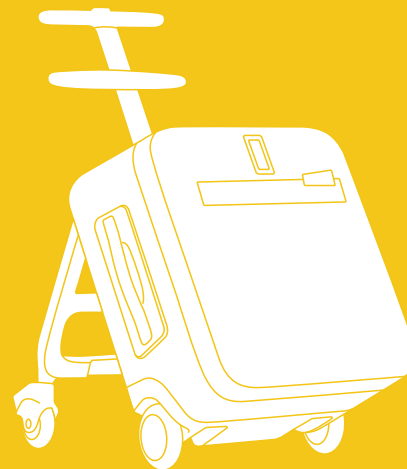

Approx.
3Y-8Y

 
SUITCASE ACCESSORIES

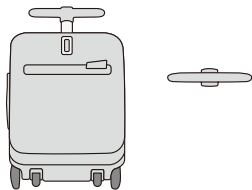

JoyRide Suitcase
Child Handle

X1
X1

 BASIC INFORMATION

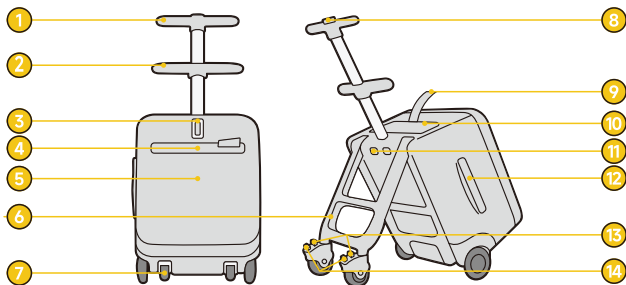

- | | |
|-------------------------|------------------------------|
| 1. Trolley Handle | 8. Pull Rod Adjusting Button |
| 2. Child Handle | 9. Trolley Detach Strap |
| 3. Retractable Bag Hook | 10. Seat Board |
| 4. Travel Banner | 11. Trolley Adjuster |
| 5. Suitcase Body | 12. Carry Handle |
| 6. Trolley | 13. Brake |
| 7. Omni Wheel | 14. Brake Unlock Button |

PRODUCT PARAMETERS


Model	WDST001	Recommended Age	Ages 3+
N.W	5.6kg	Storage Dimensions	30*38.6*56.9cm
Capacity	38L	Expanded Dimensions	75.6*95.6*95.6cm

OPERATING INSTRUCTIONS

EXPAND AND RETRACT TROLLEY


To Expand the Trolley:

 Press the trolley adjuster (11) to automatically extend the trolley (6) and pulling the trolley outward. The trolley (6) is fully expanded when you hear a "click" sound!

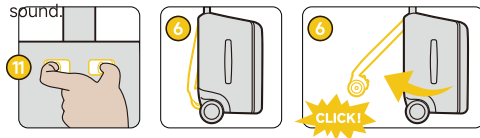

To Retract the Trolley:

 Press the trolley adjuster (11), and push the trolley (6) into the storage compartment.

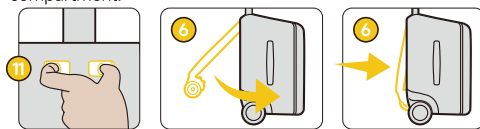


INSTALLING AND REMOVING THE CHILD HANDLE

Installing the Child Handle:

Fasten the child handle (2) to the lower section of the suitcase pull rod using the buckle. Ensure that the handle is properly installed by gently shaking it.

Removing the Child Handle:

 Unfasten the buckle to detach the child handle (2) from the suitcase, and store the child handle properly for future use.



INSTALLING AND REMOVING SUITCASE BODY

Detach the Suitcase Body:

Pull the trolley detach strap (9) to raise the seat board (10), take out the suitcase body (5) from trolley (6).



Install the Suitcase Body:

Pull the trolley detach strap (9) to raise the seat board (10), secure the bottom of the suitcase body to the trolley, and then push the entire suitcase body (5) into the trolley (6).



BRAKES

 
Press the luggage lock switch to securely lock the wheels in place. The brake (13) is used for securing the luggage when stationary.



Press the brake unlock button (14) to release the brake and resume normal use of the stroller.



TRAVEL BANNER

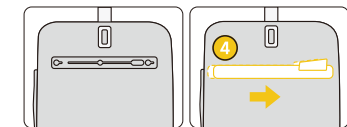

Installation/Removal:

Align the travel banner (4) with the round hole on the connector and insert it.

Then, slide it to the right to secure it in place, completing the installation. Slide the travel bar to the left to release it from the connector's round hole, completing the removal.