


INSTRUCTION MANUAL

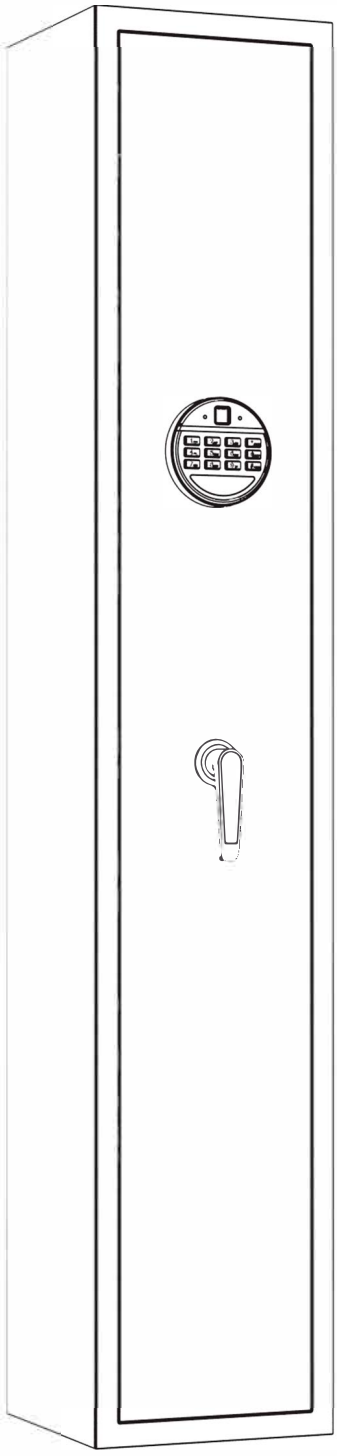

Do not leave the emergency key emergency battery pack in the gun cabinet!

Component Description

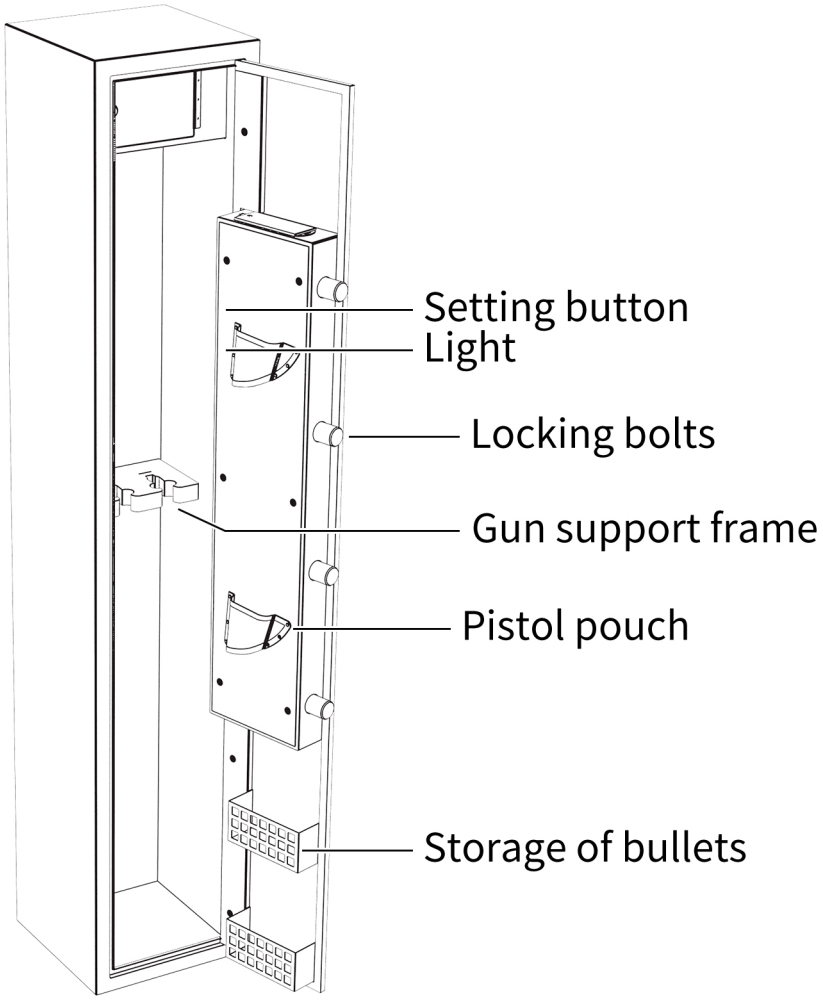


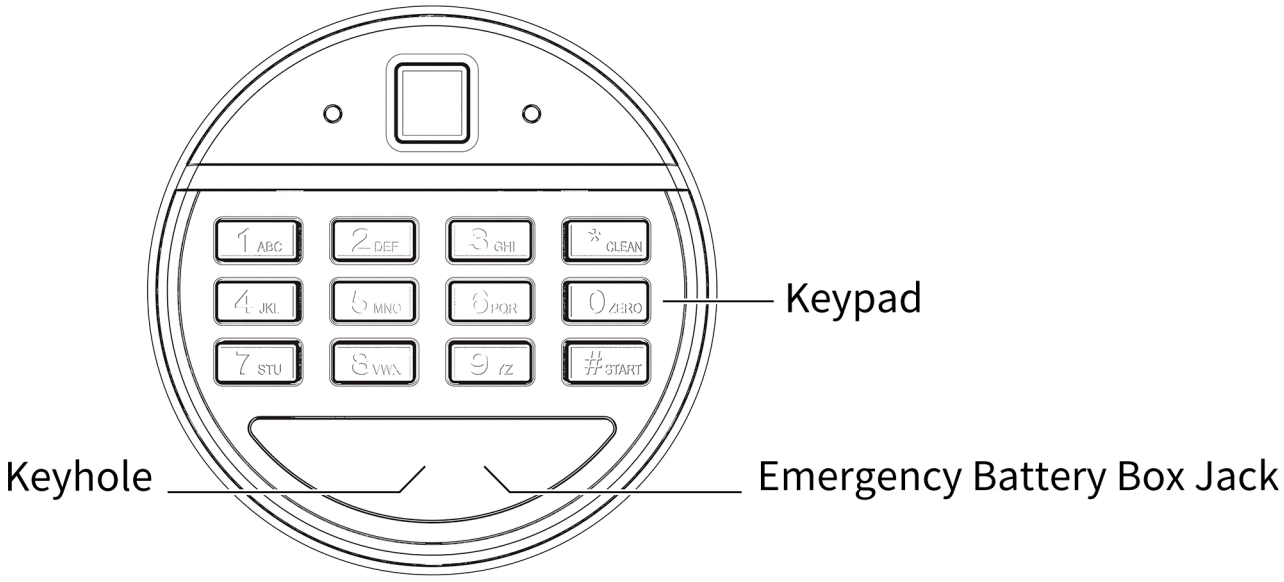

Installation Instructions

⚠ CAUTION:

Make sure that the gun cabinet is mounted on a wall or floor or it may tip over and jeopardize your safety.
We have provided 4 mounting holes for you to install the gun cabinet. 2 on the back and 2 on the bottom. Depending on your specific needs, you can use these expansion screws to fix the gun safe to the wall or floor.

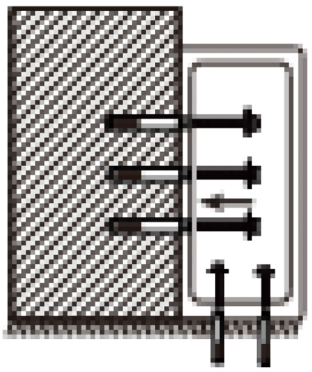

Thank you for choosing our products! Please take your time to read and familiar with the proper operating procedures presented on the following pages.

IMPORTANT



- Tip over hazard: Secure the cabinet! The cabinet can be tipped over by children or adults, please make sure the cabinetis mounted on the wall or floor.
- Keep the keys in a secure place away from children.
- Do not move this cabinet using its handle.

Electronic Lock Setting Procedure

I.How to open the keyhole
Press the left side of the half oval below the numeric keypad to reveal the keyhole.

II.Install the internal battery
When you open the cabinet for the first time, please use the emergency key, insert the emergency key into the keyhole, on the top of the inner side of the door, there is a battery box, rotate it to open it, remove the cover of the internal battery box, install 4 AA batteries.

III.User password setting
Press the "setup" button (red or green button) on the back of the door, the digital area will light up to enter the continuous setting mode. After inputting a new password (4-8 digits) in the digital area, press the "#" button, there will be a "beep--" prompt, and then input a new password ending with "#"",at the end of the "#", "Tick" a long green light indicates that the password is set successfully, "Tick, Tick, Tick" three short beeps prompted by the two input password is inconsistent with the red light indicates that the setup failed. If the password is less than 3 bits setup is not successful, setup is completed by pressing the # key to exit. (Note: the password must be entered twice)

V.management password settings
(this step applies to enterprises and other people using the situation, if personal use, it is recommended that the management password and personal password can be set to the same password)
Button area; two "00" and then press the door behind the "set" button (red or green button), the digital area light into the continuous setting mode. After inputting a new password (4-8 digits) in the digital area, press the "#" button, there will be a "beep--" prompting to input a new password again to "#" At the end of the "#", "Tick" a long green light indicates that the password is set successfully, there are "Tick, Tick, Tick" three short beeps prompting the two input password is inconsistent, the red light indicates that the setup fails. If the password is less than 3 bits setup is not successful, setup is completed by pressing the # key to exit. (Note: the password must be entered twice)

VI.Exit Setting
Directly press the "#" key, or idle for 10 seconds, the system exits the setting mode.
VII.Silencing function:
Long press the digital "1" key and do not let go (about 3 seconds), the green light is on, mute successful. And then long press the "1" key not to release (about 3 seconds) "Tick" a green light, the sound is on.

VIII.unlock
Directly enter the correct password to the end of "#", there is a "tick -" a long sound with the green light on the lock successfully, while the light is on for 20 seconds; there is a "tick, tick, tick" three times the red light, indicating that the password is not correct. 3 times the password. 3 times the password is wrong, the alarm will sound for 60 seconds.If the password is less than 3 digits, press # system exit.

IX.Forgot the password

Use the emergency key to open, long press the door behind the "settings" button (red or green button), restore factory settings, according to 3, 4 steps to reset the password!

X.anti-theft alarm

Long press the number 9 button (about 3 seconds), there is a "tick -" long sound, the system starts the anti-theft alarm, if you move or knocking behavior, the alarm will beep for 60 seconds. Input the correct password can release the alarm siren. The alarm function will be automatically lifted after each successful unlocking.

XI.Low battery reminder

The system unlocked after the "beep - beep - beep -" three long sound, suggesting that the battery power is low, the need to change the battery.

XII.Battery dead

Take out the battery box, install 4 AA batteries, insert the battery box into the interface, in accordance with the 2 steps to install the internal battery.