



# ASSEMBLY INSTRUCTION

H08-RZ-DE3001O

Fx1

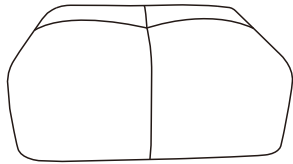


①

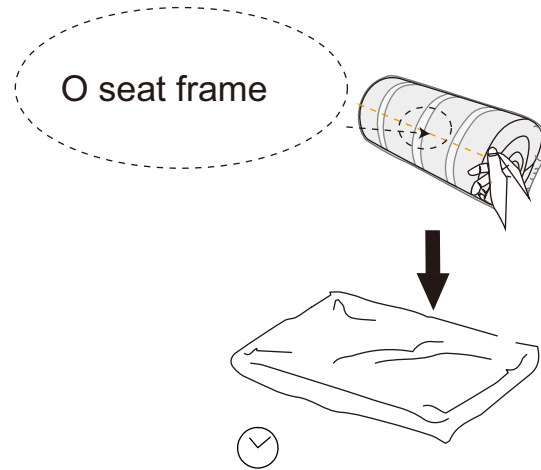

Wait 72 hours for rebound


②

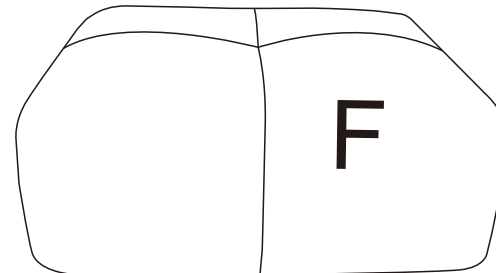

# MONTAGEANLEITUNG



H08-RZ-DE30010

Fx1

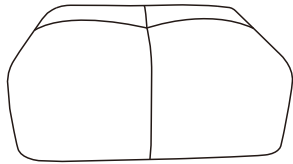


①

O setzt auf parkdeck:

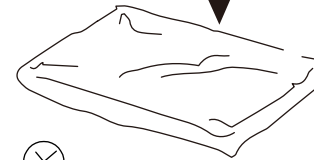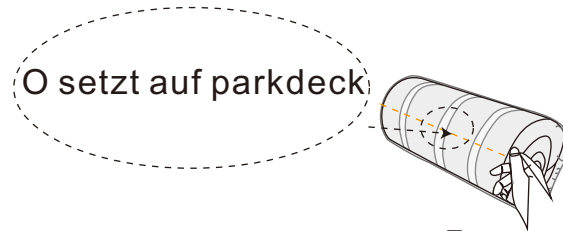

Warten sie auf den nächsten 72 stunden


②

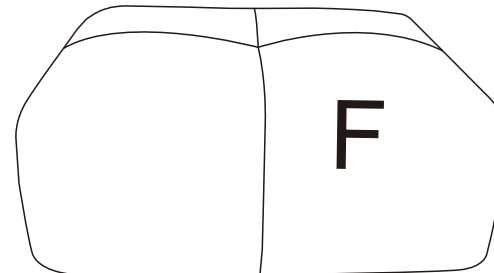

# INSTRUCTION DASSEMBLAG



H08-RZ-DE30010

Fx1

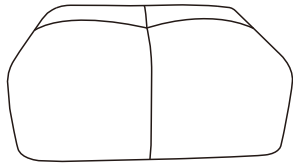


①

O cadre de siège

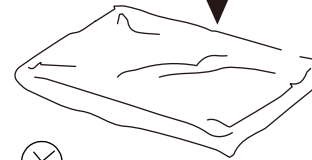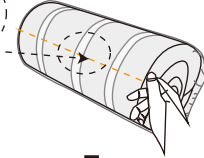

Attendre 72 heures pour le rebond


②

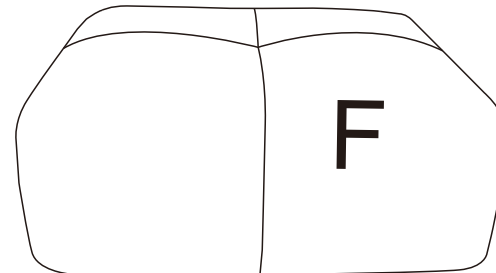


# ISTRUZIONI DI ASSEMBLAGGIO

H08-RZ-DE30010


Fx1

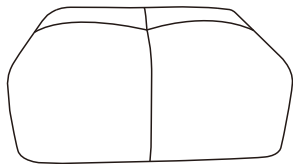

①

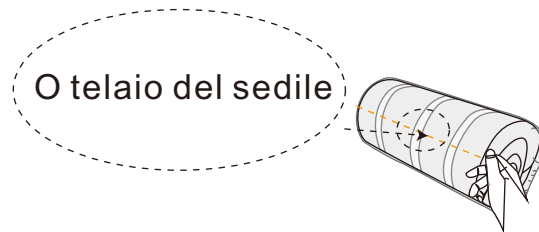


O telaio del sedile

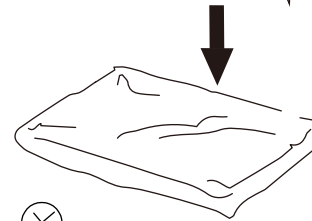

Aspetta 72 ore per il contraccolpo


②

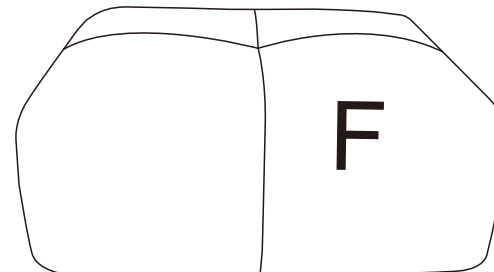

# INSTRUCCIÓN DEMONTAJE


H08-RZ-DE30010

Fx1

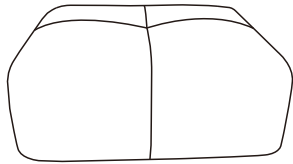

①

O marco del asiento

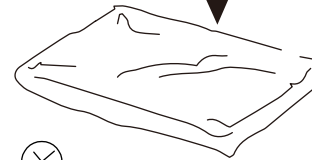

Esperar 72 horas para el rebote

②

