




W L I V E

I

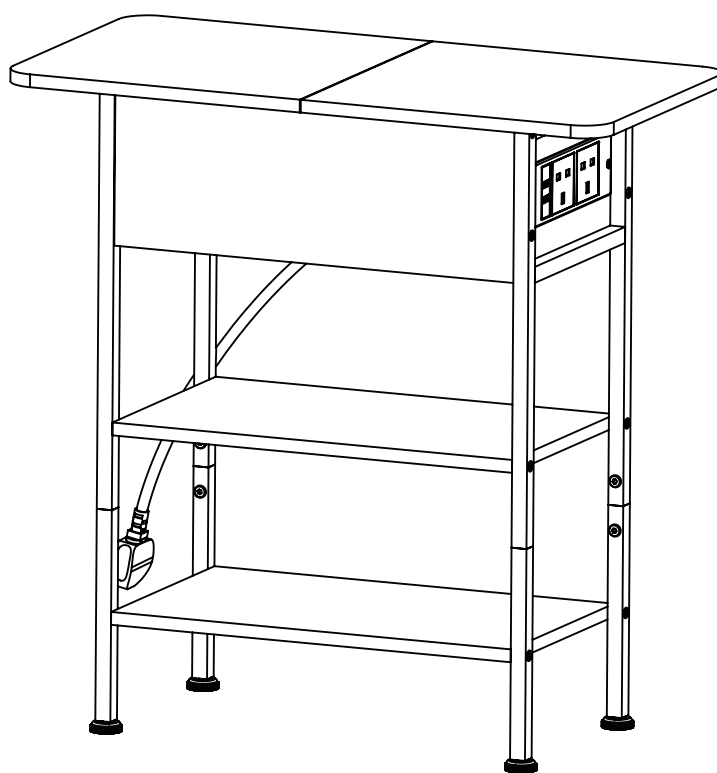

V5.0.1

**ABZ514**

End table



## IMPORTANT INFORMATION READ CAREFULLY.

**KEEP THIS INFORMATION FOR FURTHER REFERENCE.**


### **GENERAL GUIDELINES**

Please read the following instruction carefully and use the product accordingly.

Please keep this manual and hand it over when you transfer the product.

This summary may not include every detail of all variations and considered steps.

Please contact us when further information and help are needed.

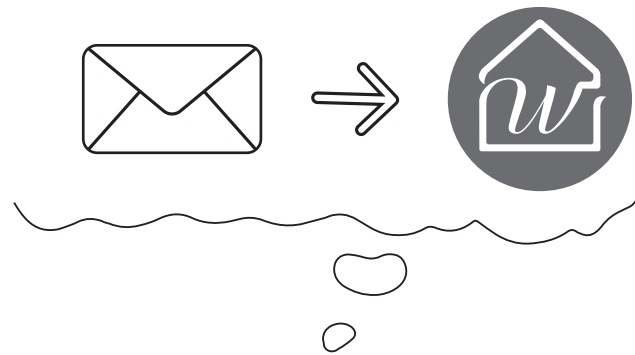

## NOTES

Please follow the assembly instructions precisely and only use the product as intended.

If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out. Please follow the assembly instructions precisely and only use the product as intended.

Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur; Please contact us for assistance and replacement.

During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.


It is suggested you regularly check the products bolts and connections to ensure safe use.

Assemble the item on a soft flat and clean surface to avoid scratches and damage.

It is recommended that two people assemble this product. During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.







## WARNINGS

During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard. Avoid sharp objects or corrosive chemicals to prevent damage to the product. Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.

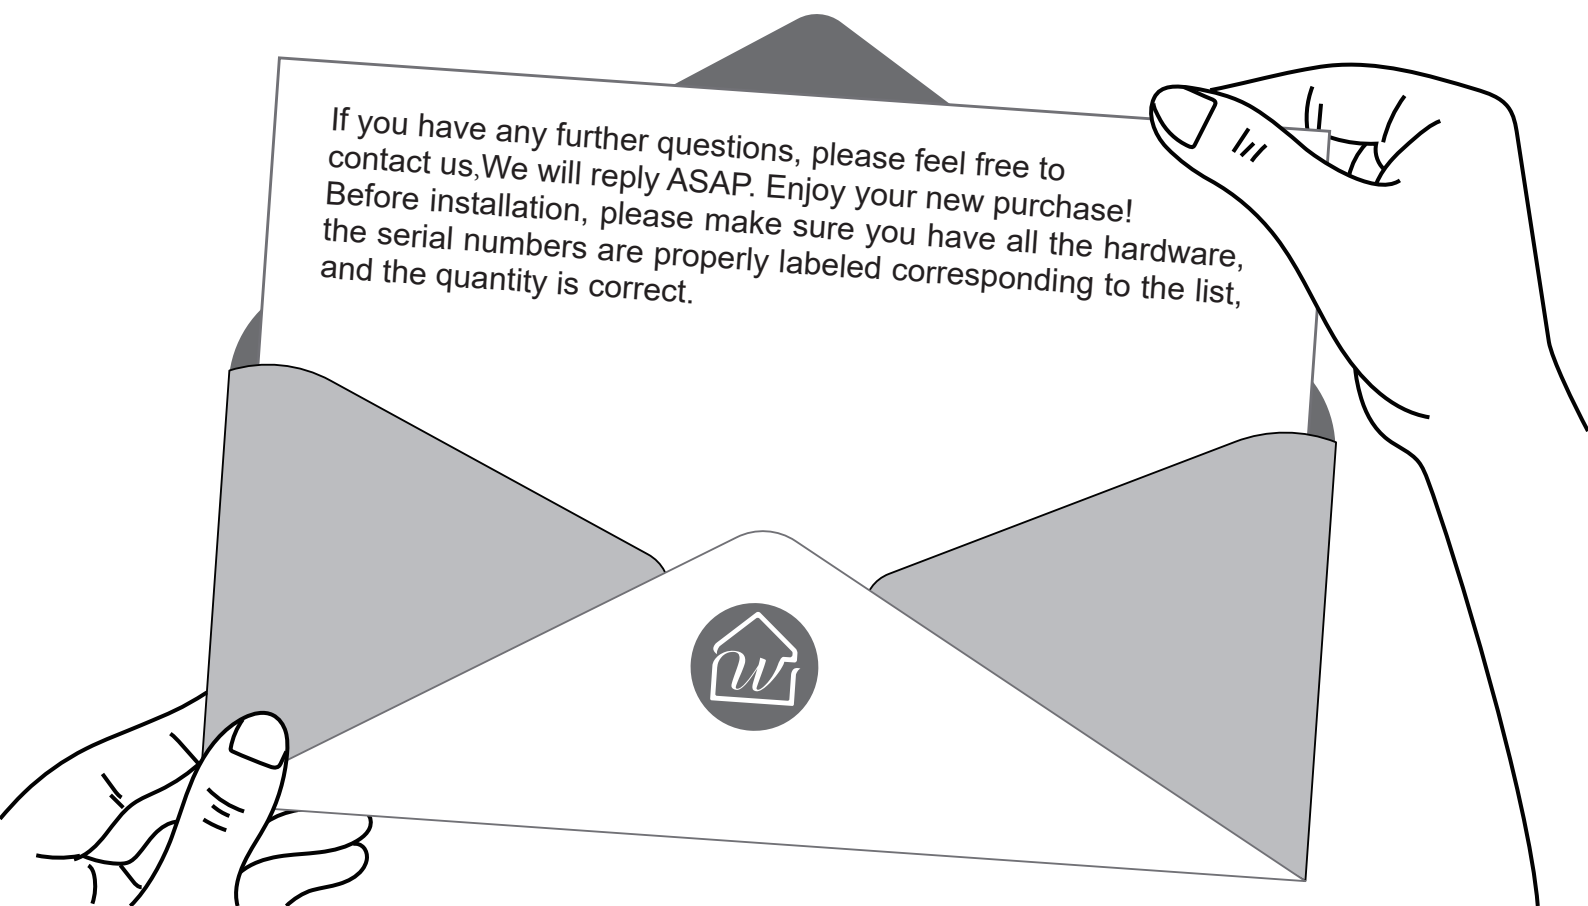


If you have any further questions, please feel free to contact us, We will reply ASAP. Enjoy your new purchase! Before installation, please make sure you have all the hardware, the serial numbers are properly labeled corresponding to the list, and the quantity is correct.













# INSTRUCTIONS

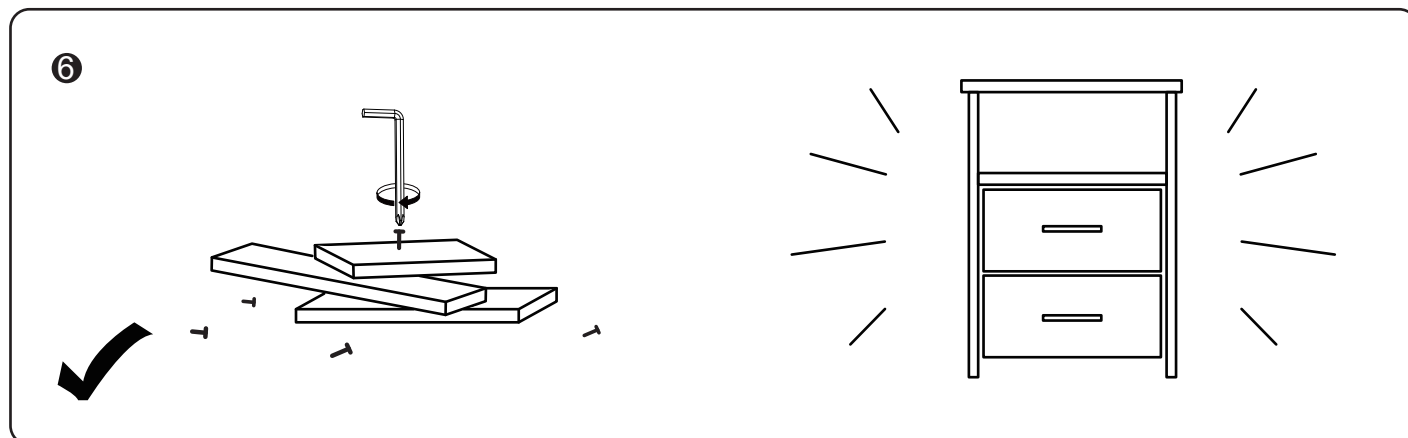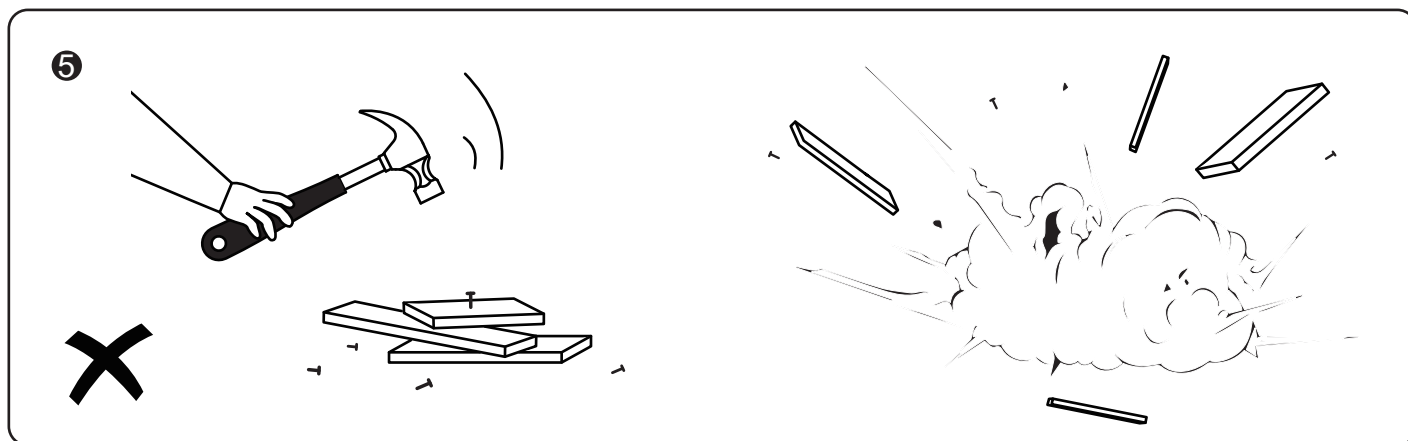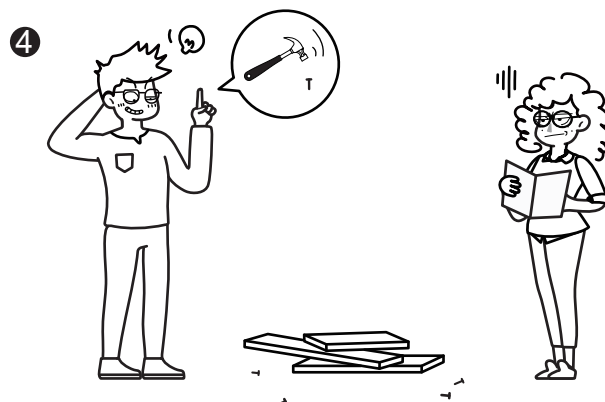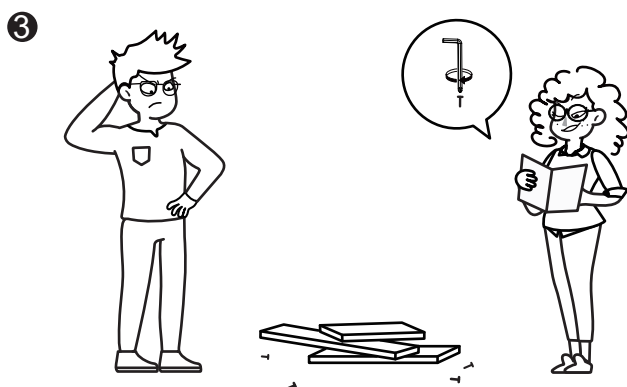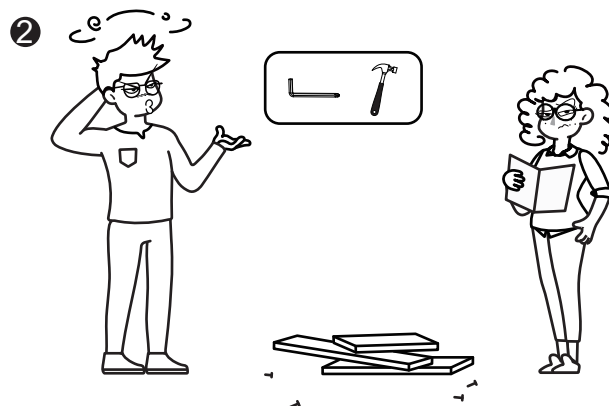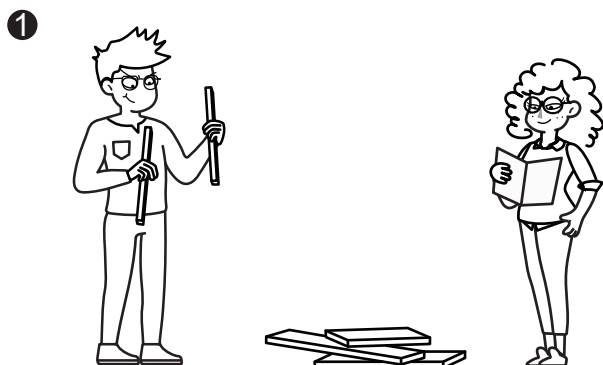

# EXPLODED DRAWING



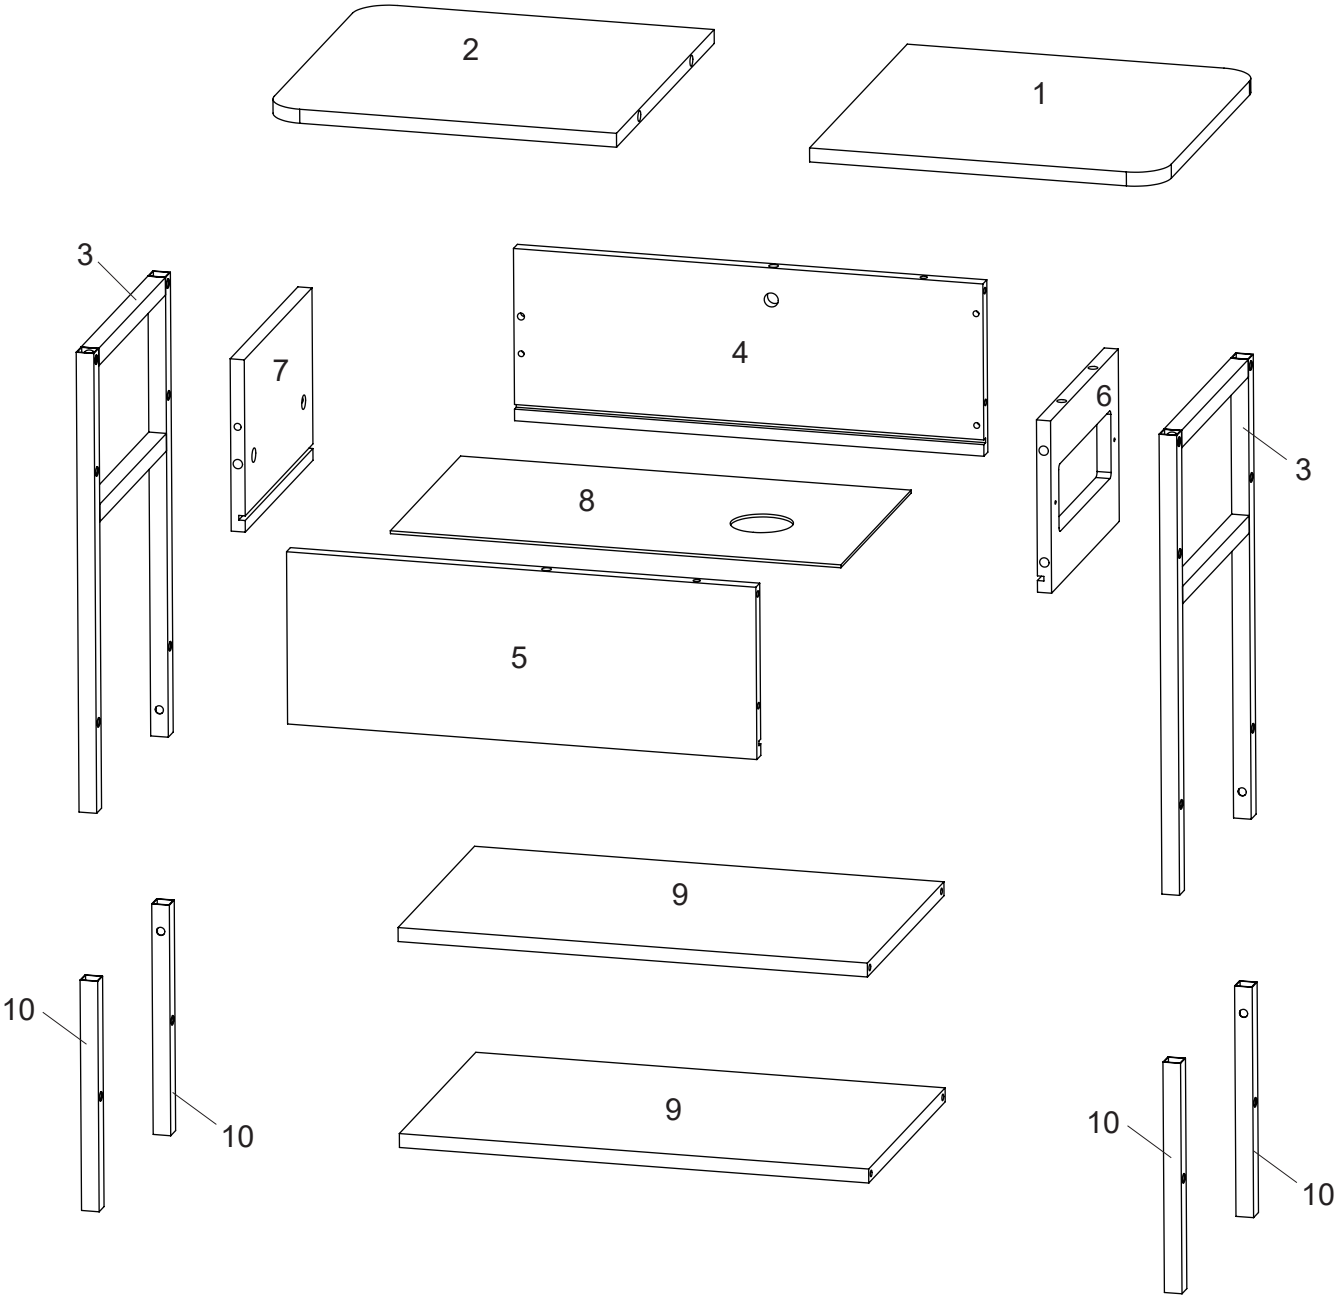


# PARTS

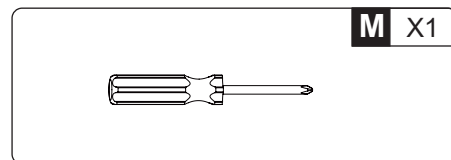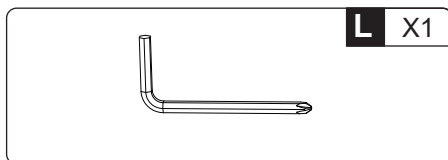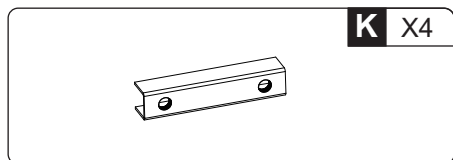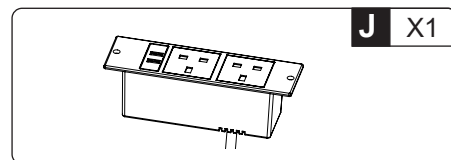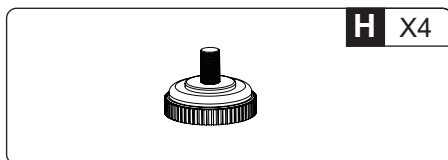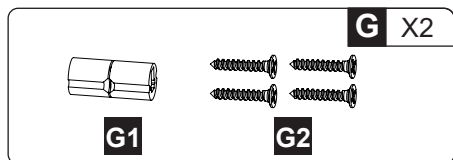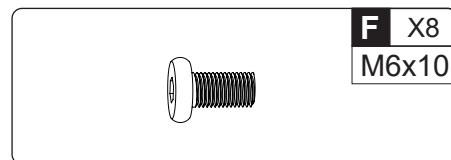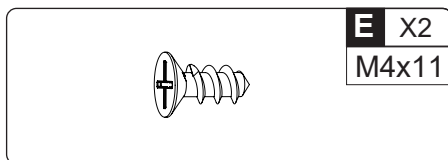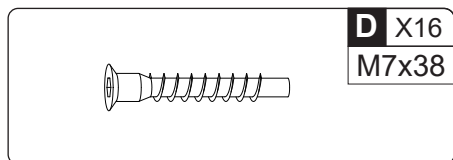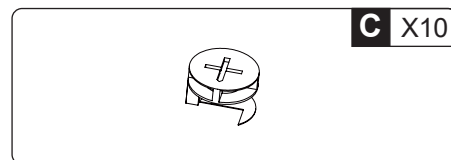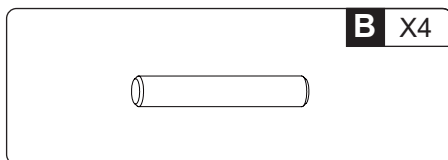
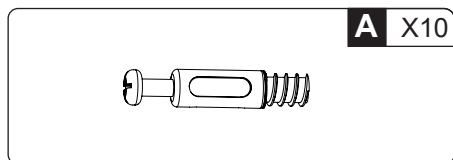


# REMARK






## MINIFIX POSITION

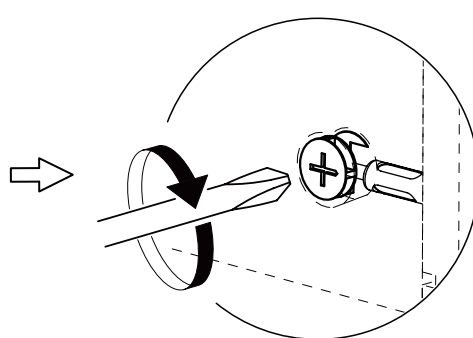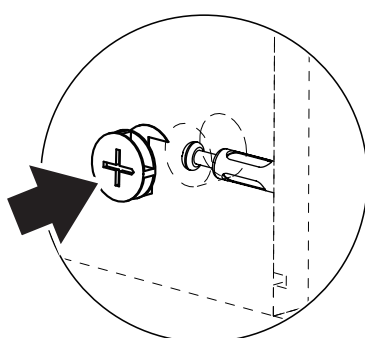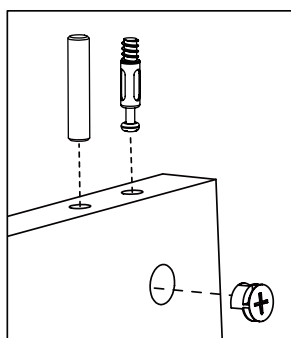





# Step 1

|                                                                                               |                                                                                                |
|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
|  <b>A</b> X6 |  <b>B</b> X2 |
|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|

1. Put a blanket under the board to avoid scratch or damage.
2. Please do not screw **A** too deep or too shallow.

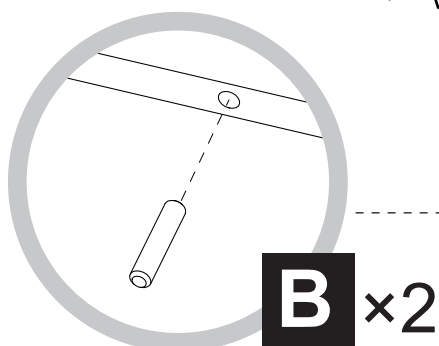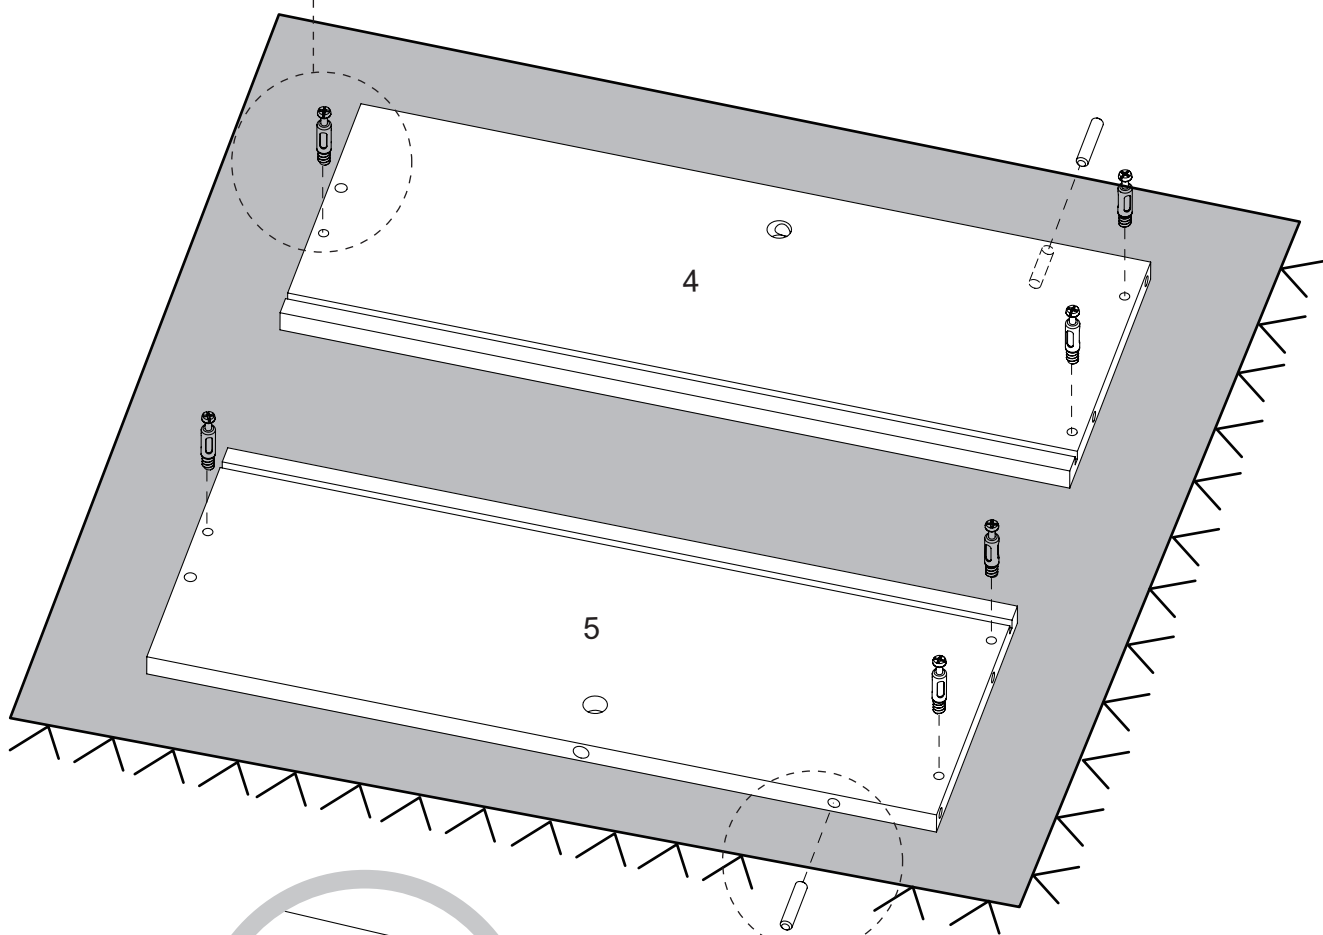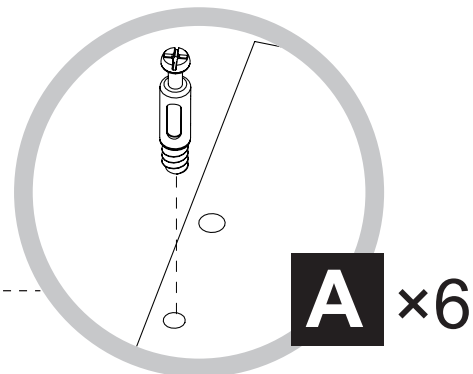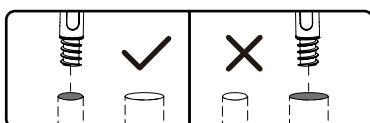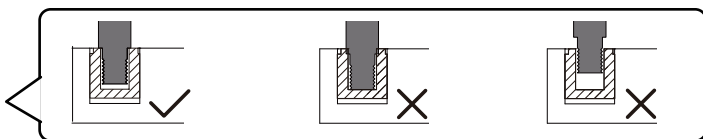




# Step 2

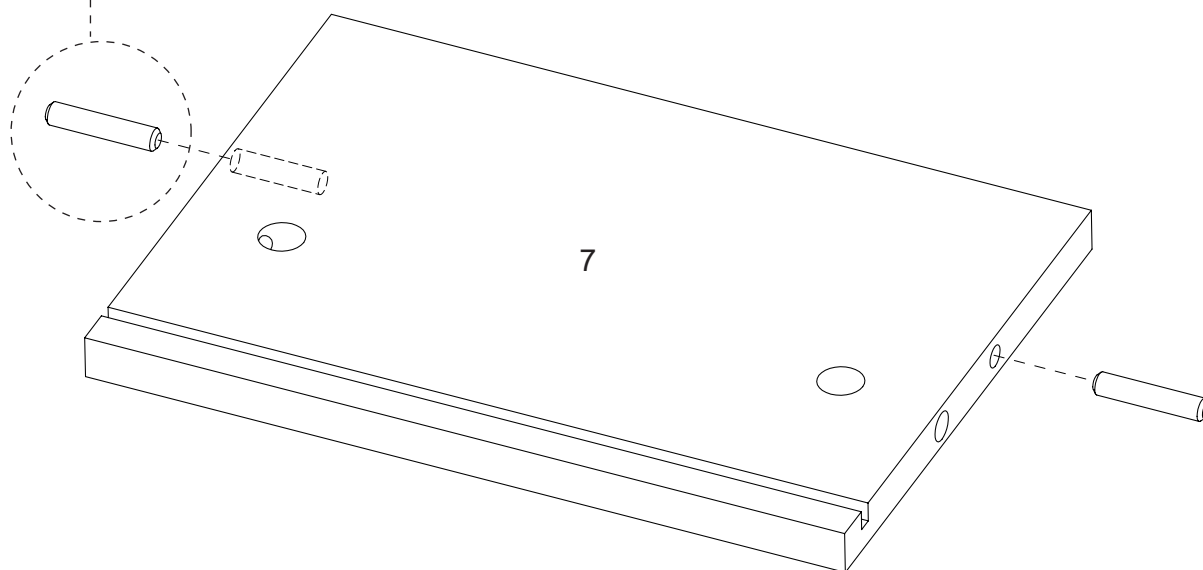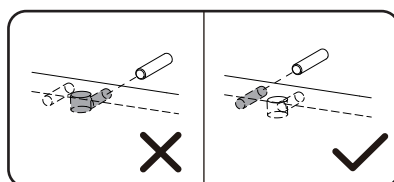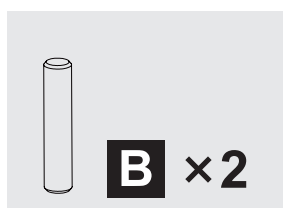

# Step 3




C X3

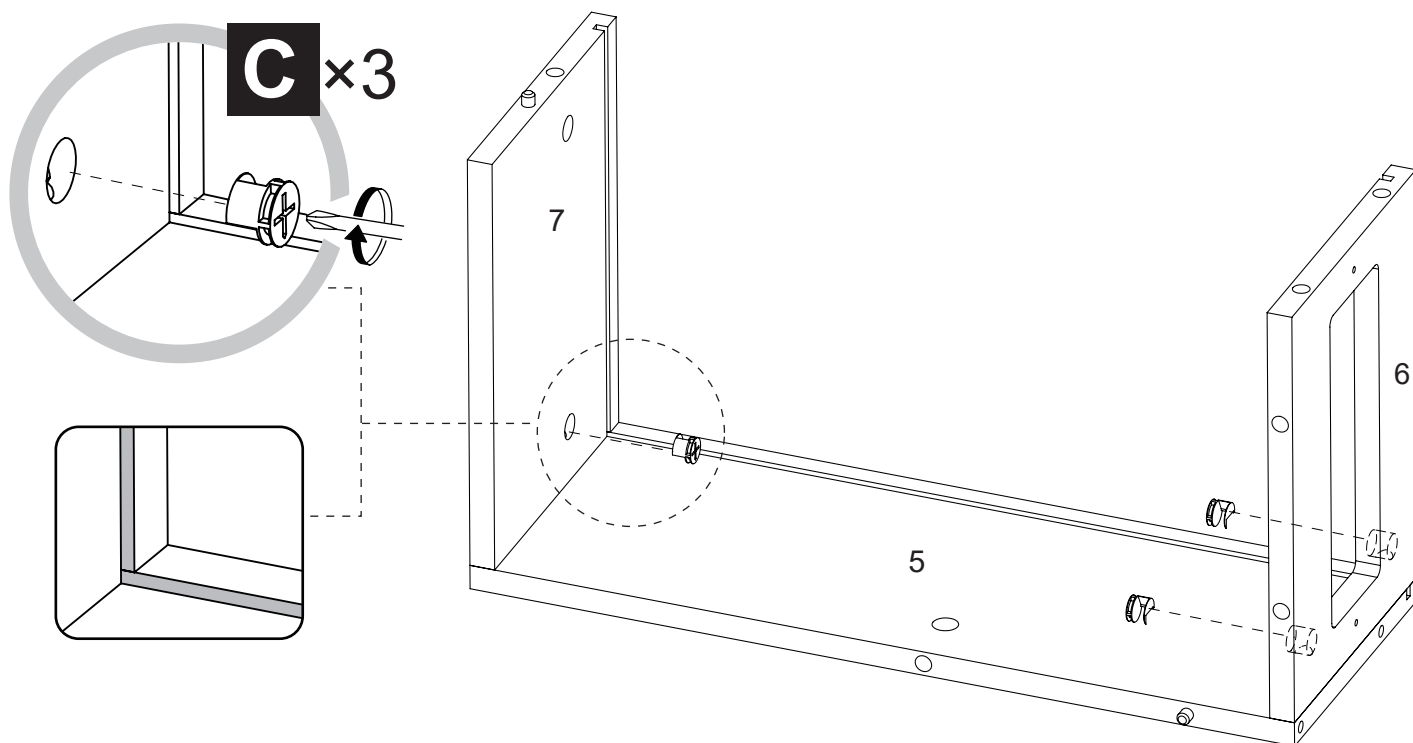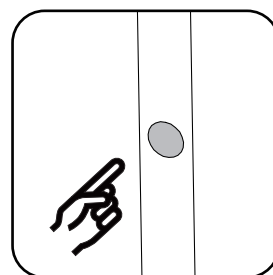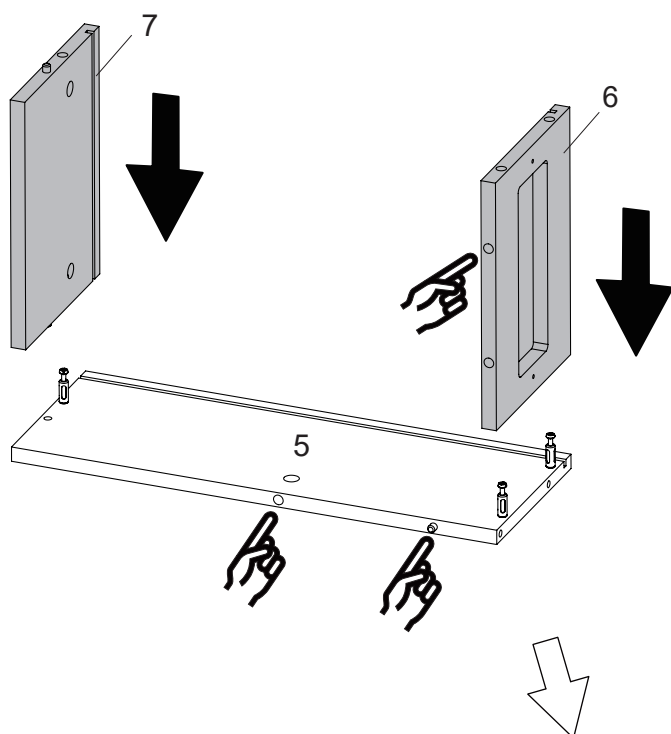


i) Let the grooves on part 6 and 7 be connected to the groove on part 5 .


## Step 4

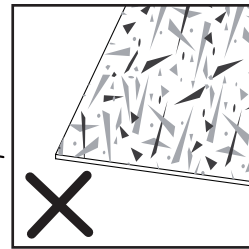

origin wood - colored

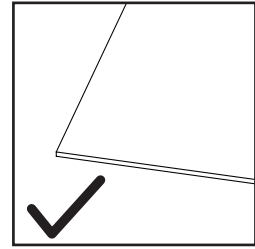



pure colored

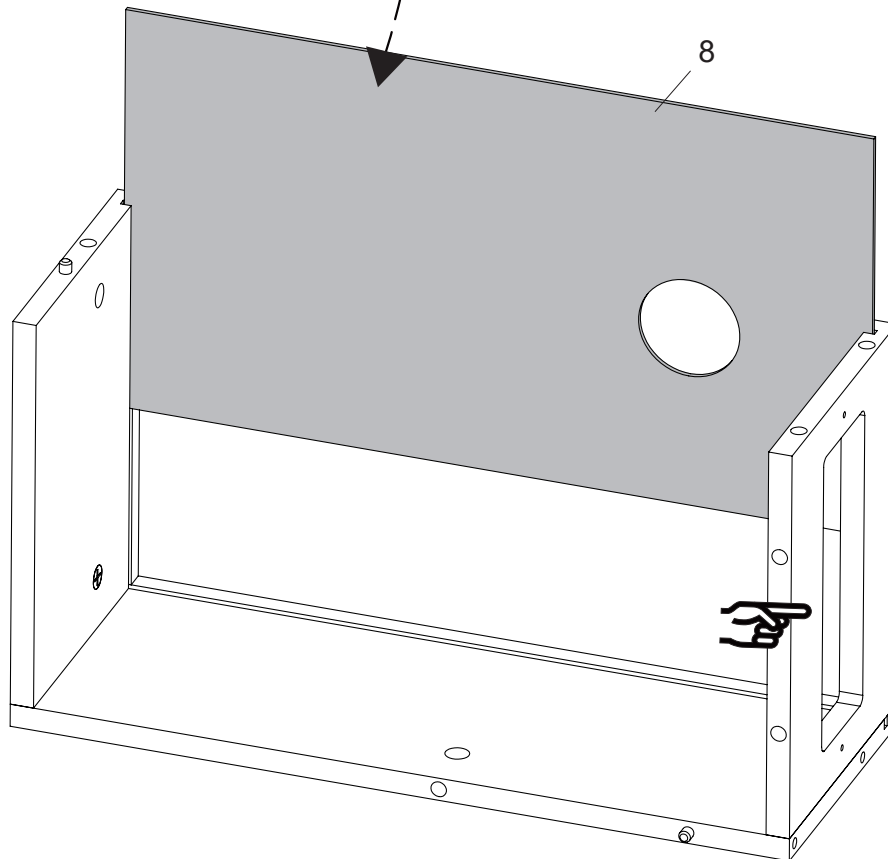

# Step 5




**C** X3

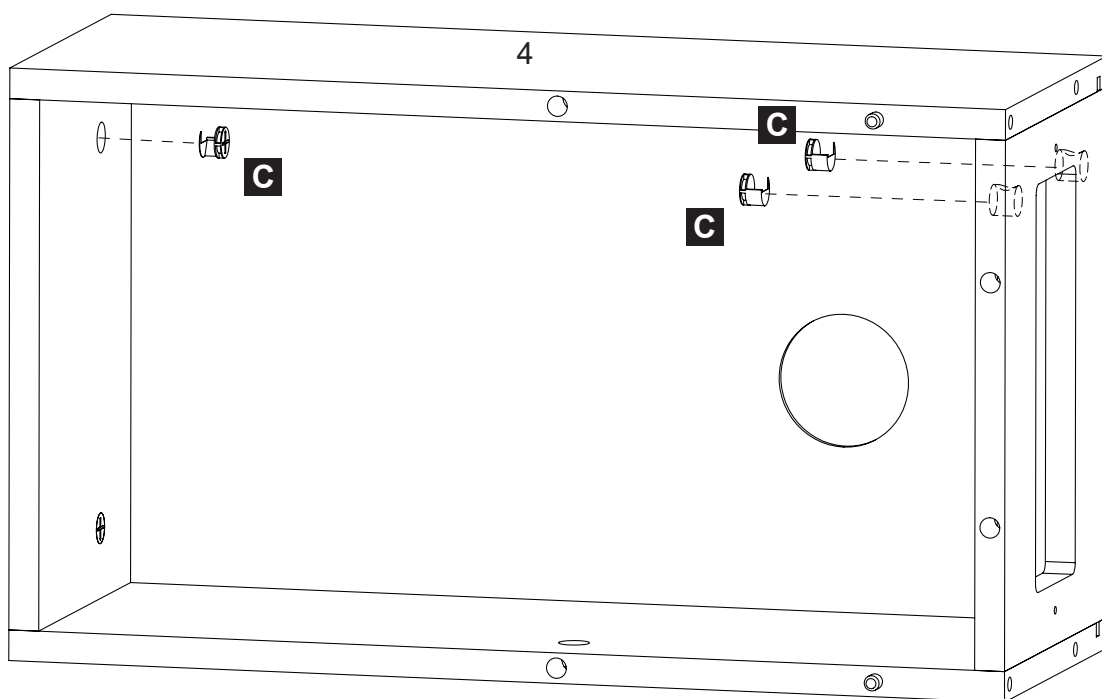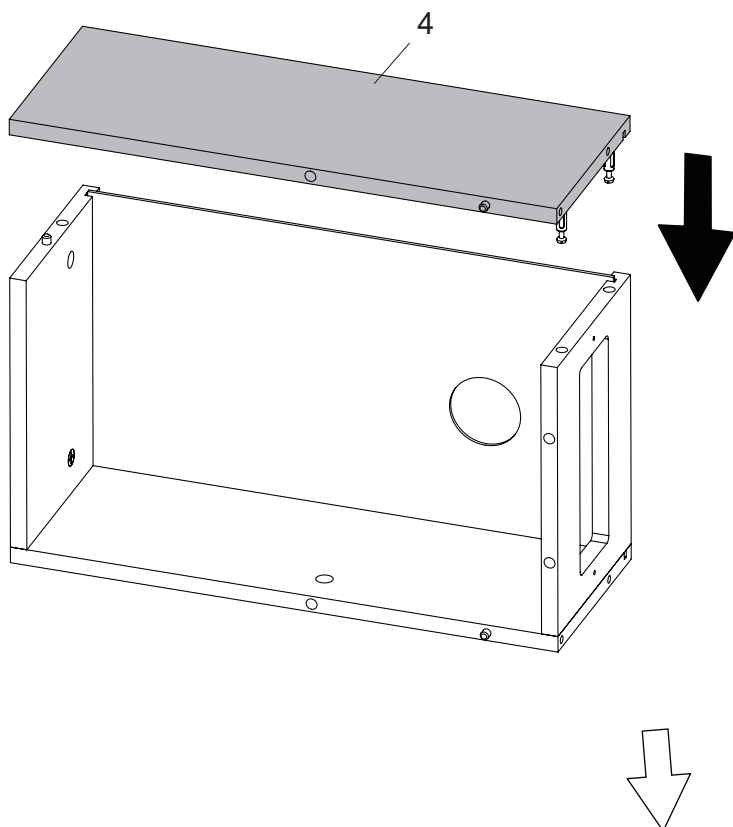

## Step 6




**E** X2  
M4x11



**J** X1


**i**) Please do not fully tighten screws until all screws are in place.

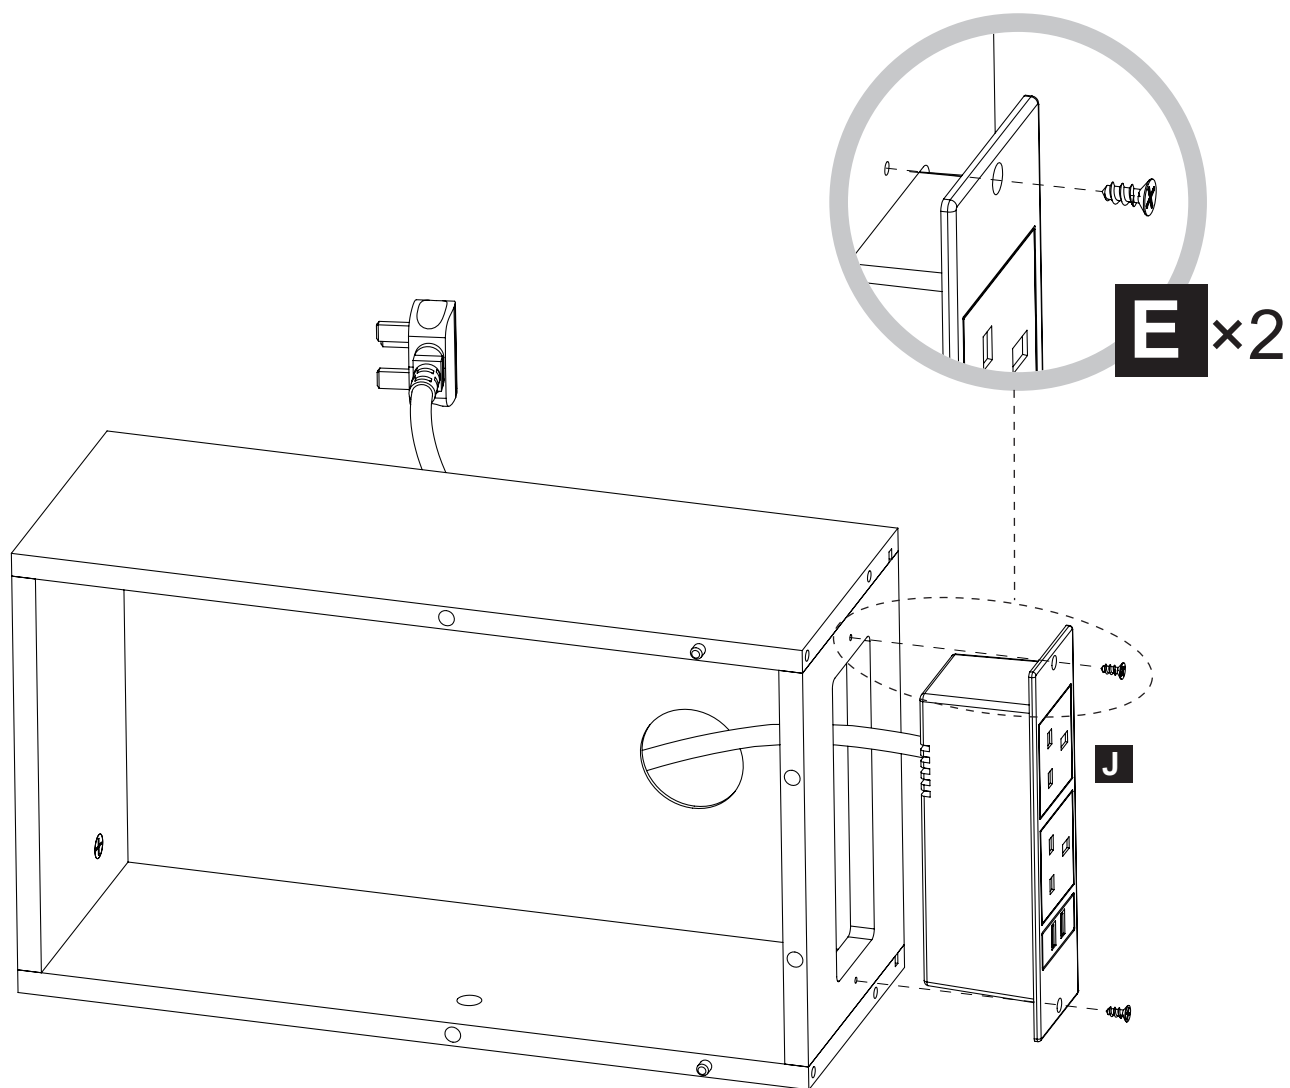


# Step 7

**i**) Please do not fully tighten screws at this step.



|                                                                                                        |                                                                                                 |
|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
|  <b>F</b> X4<br>M6x10 |  <b>K</b> X4  |
|                                                                                                        |  <b>L</b> X1 |

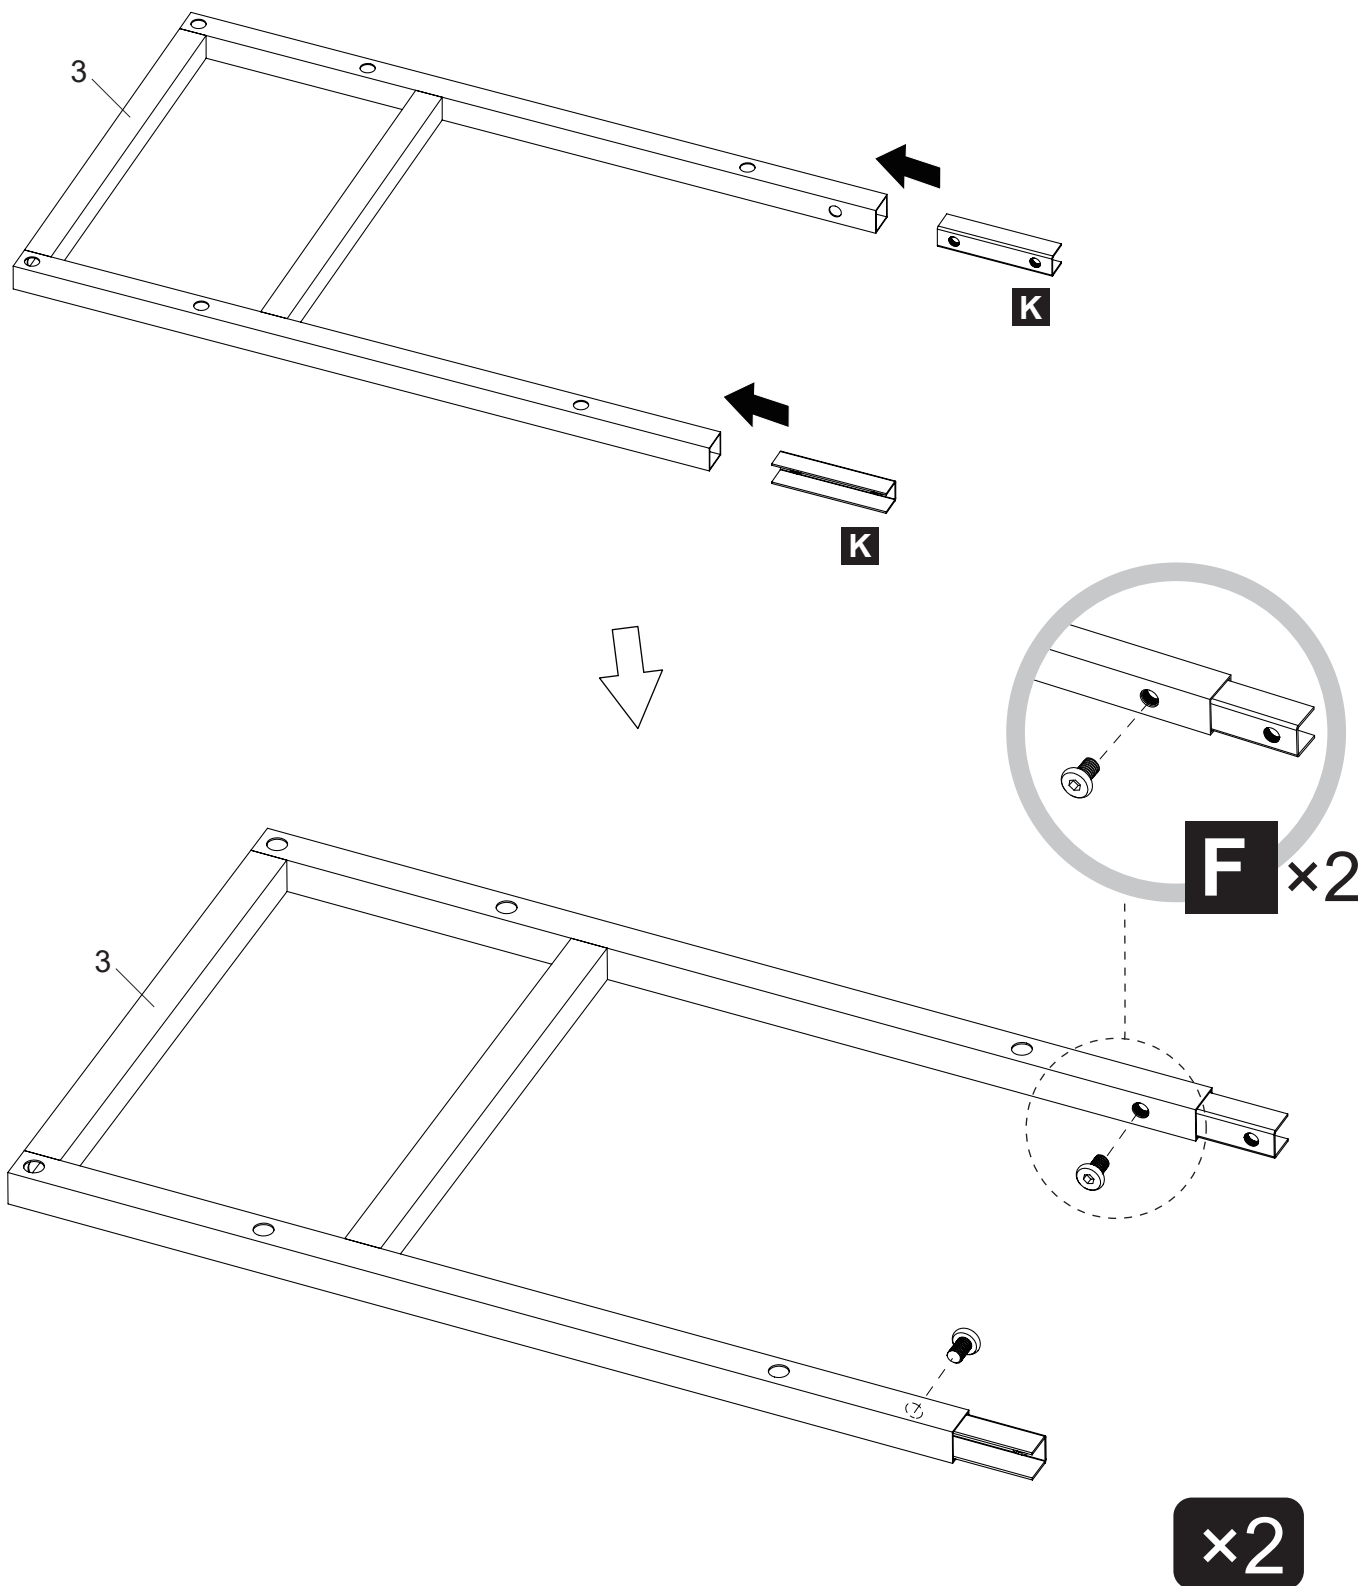

## Step 8

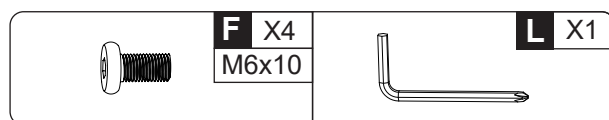


**i** Please fully tighten all the screws after they are in right place, including those in Step 7.

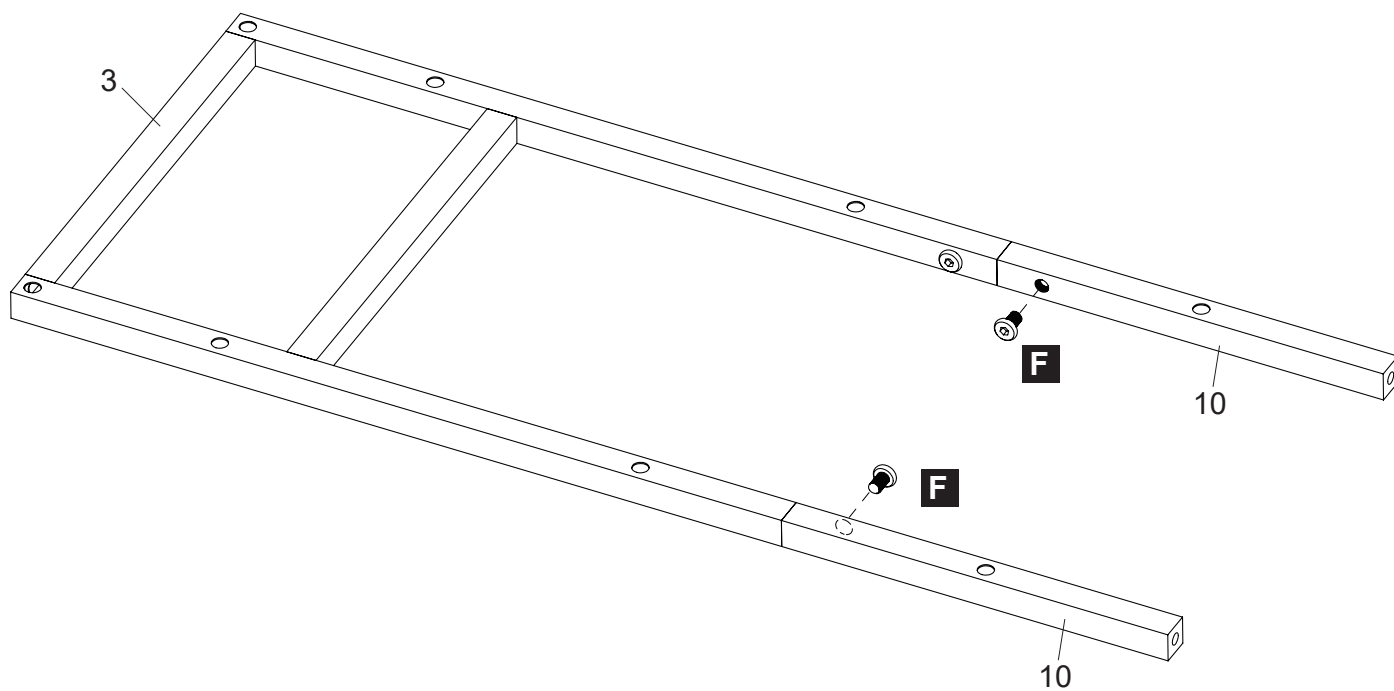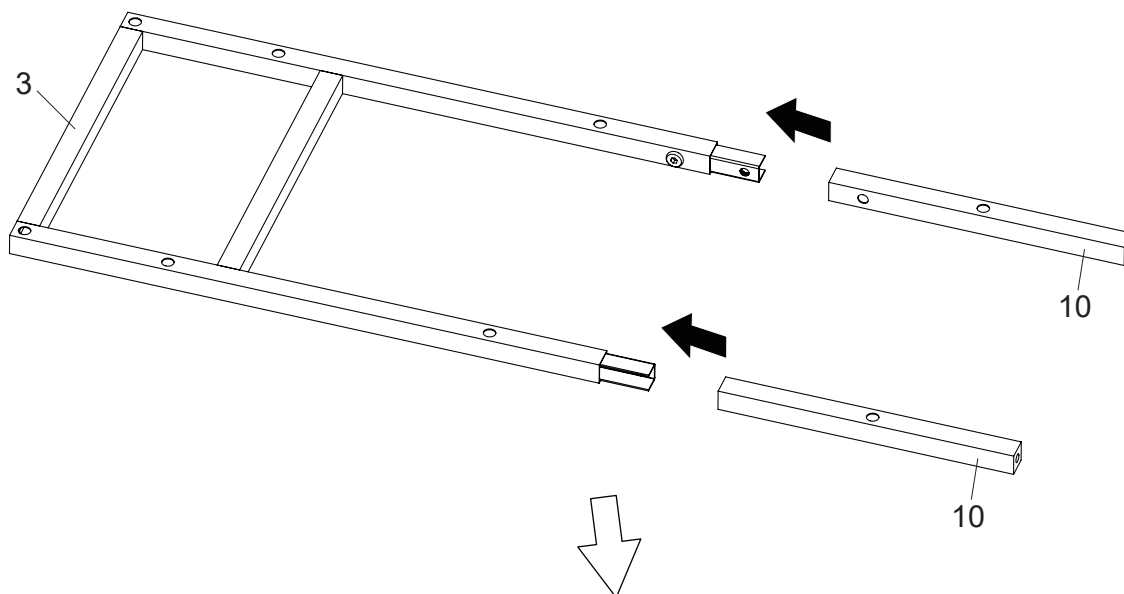


**×2**


## Step 9




i) Please do not fully tighten screws until all screws are in place.

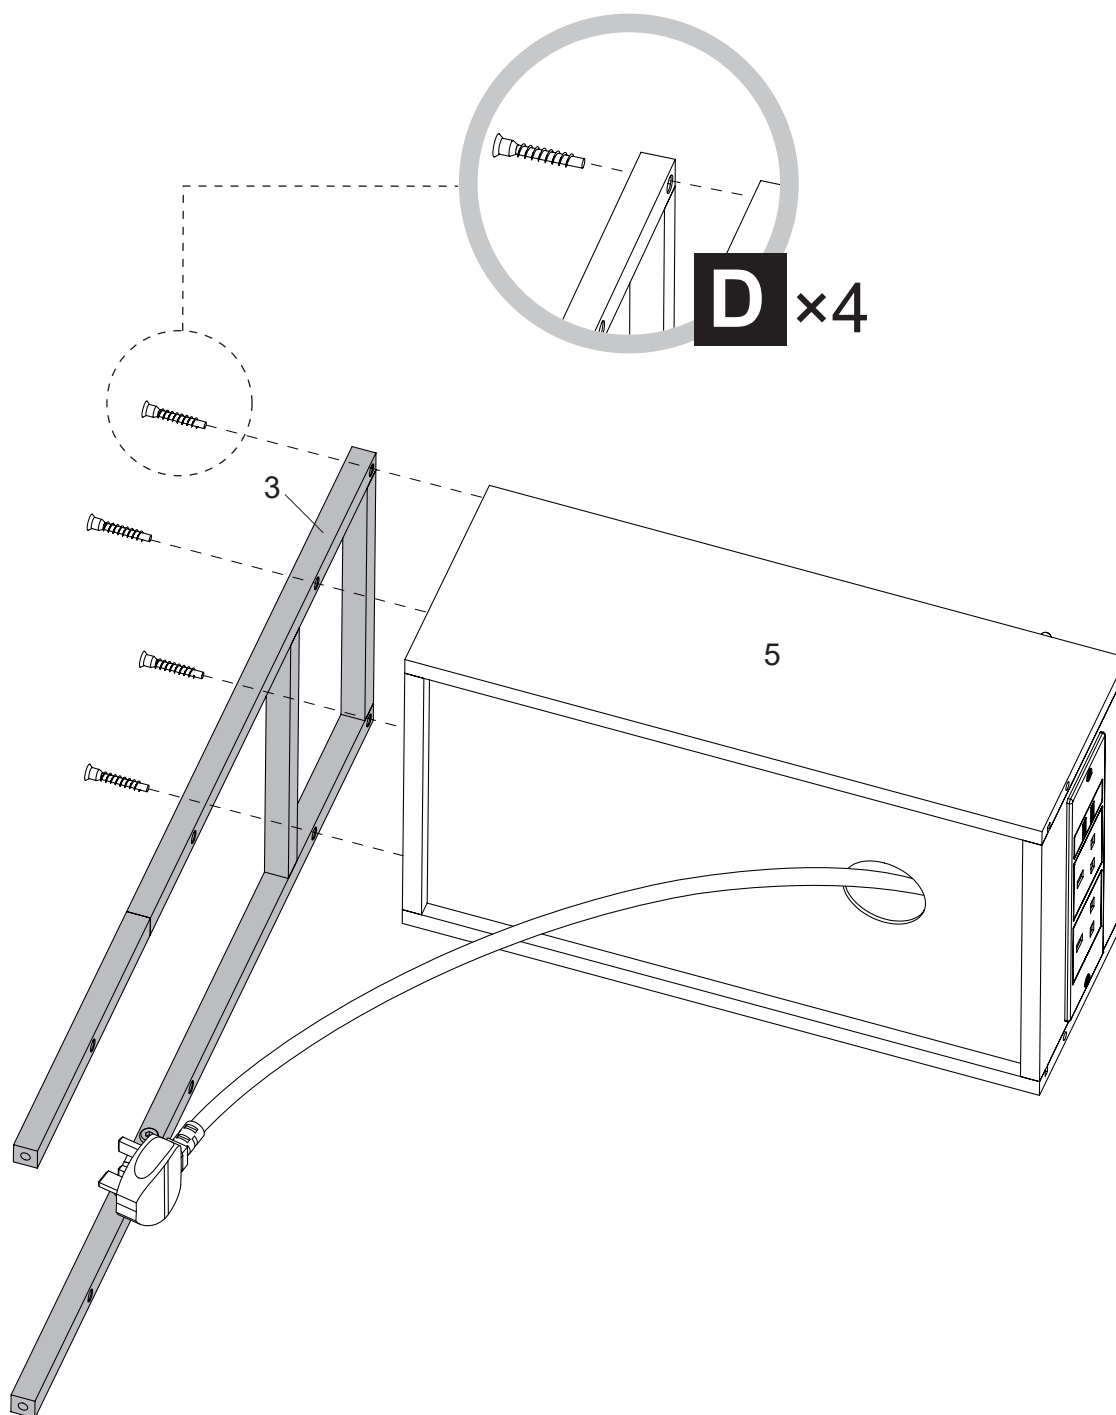


# Step 10

|                                                                                   |                      |                                                                                                |
|-----------------------------------------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------|
|  | <b>D</b> X4<br>M7x38 |  <b>L</b> X1 |
|-----------------------------------------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------|



i) Please do not fully tighten screws until all screws are in place.

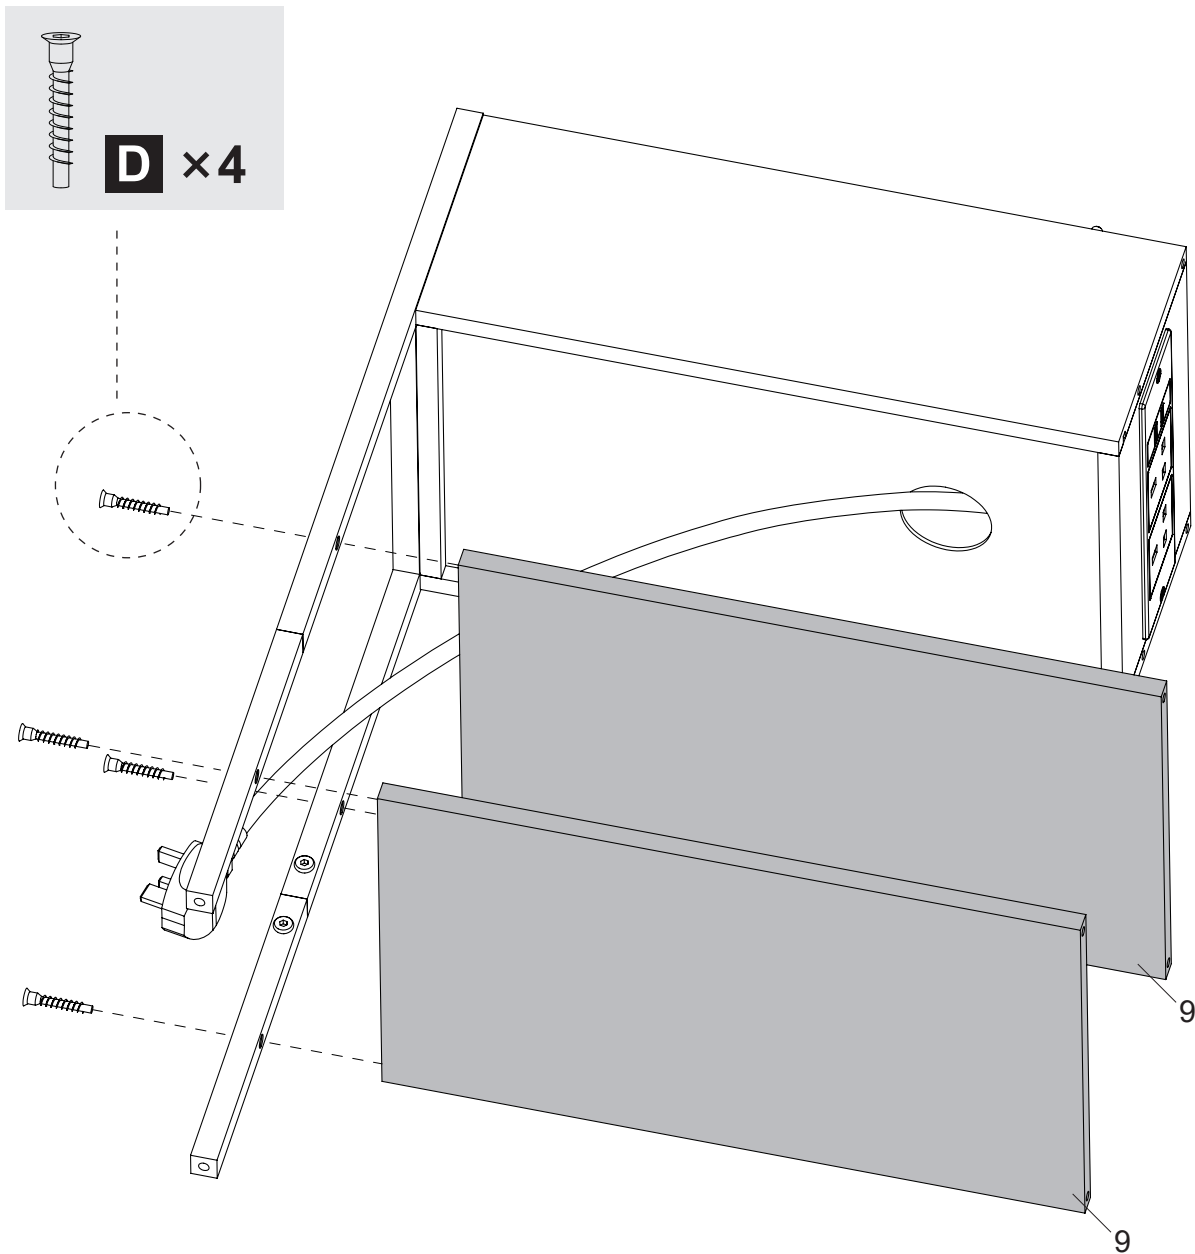




# Step 11

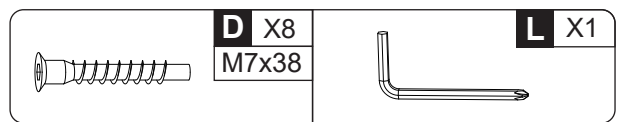



i) Please do not fully tighten screws until all screws are in place.

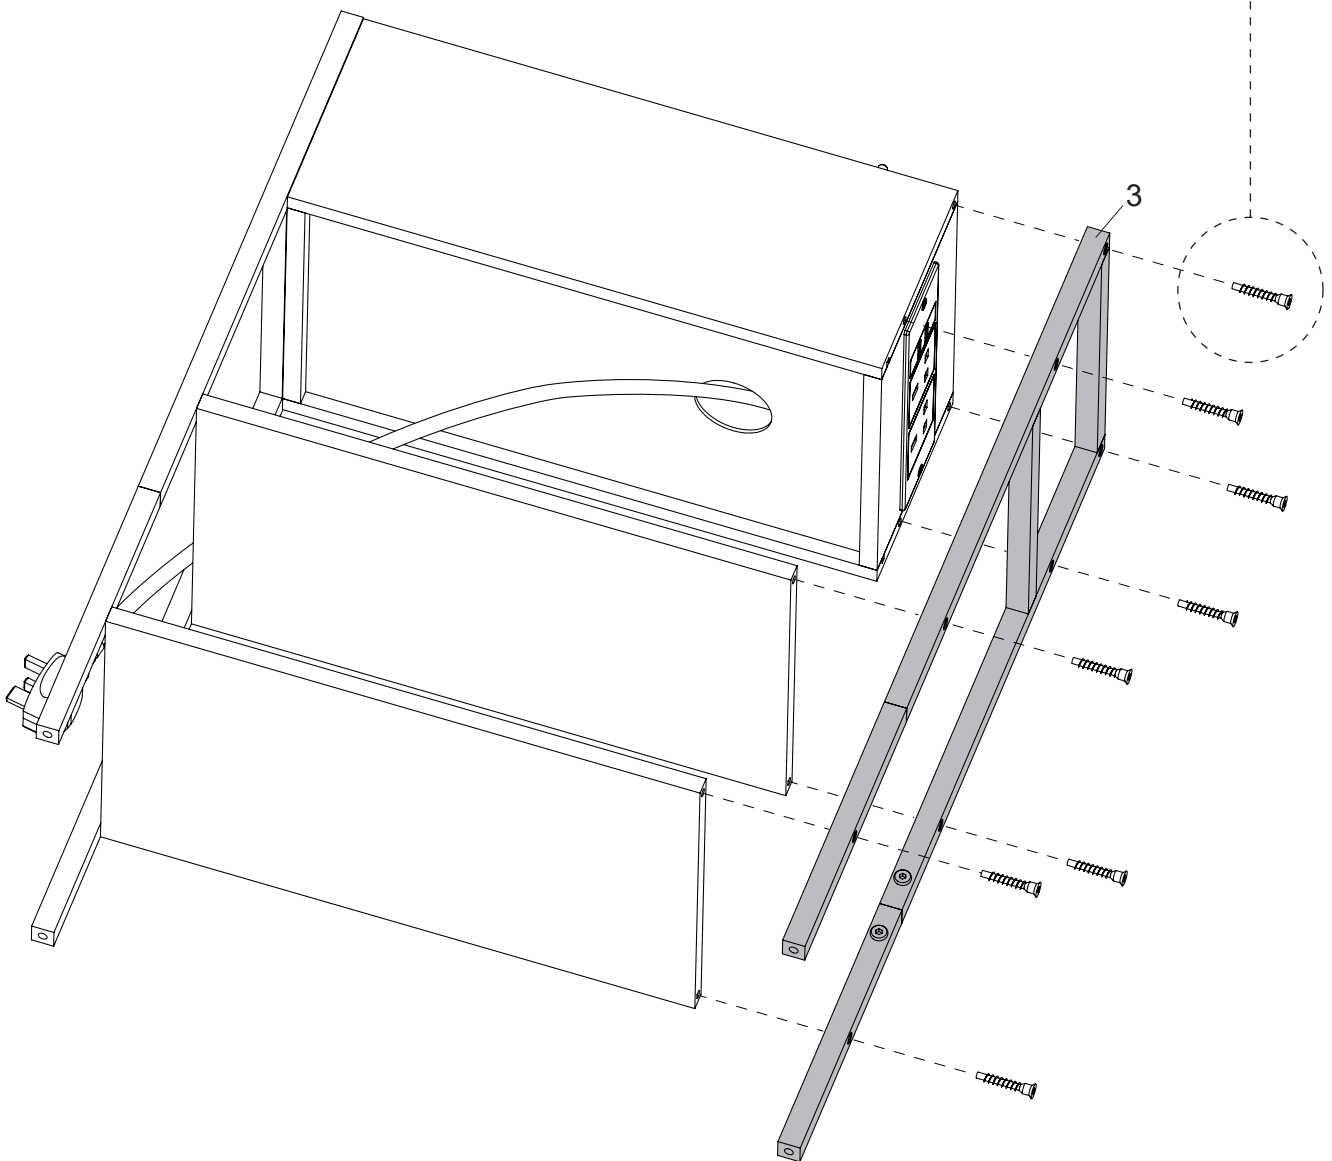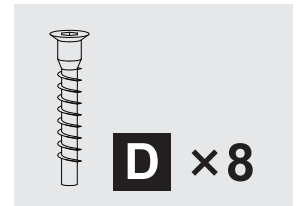


# Step 12

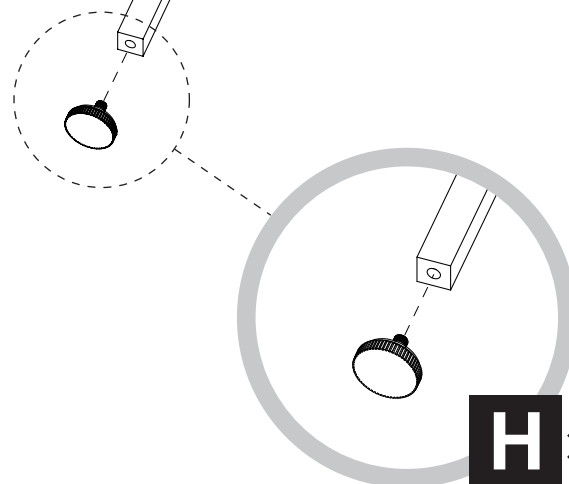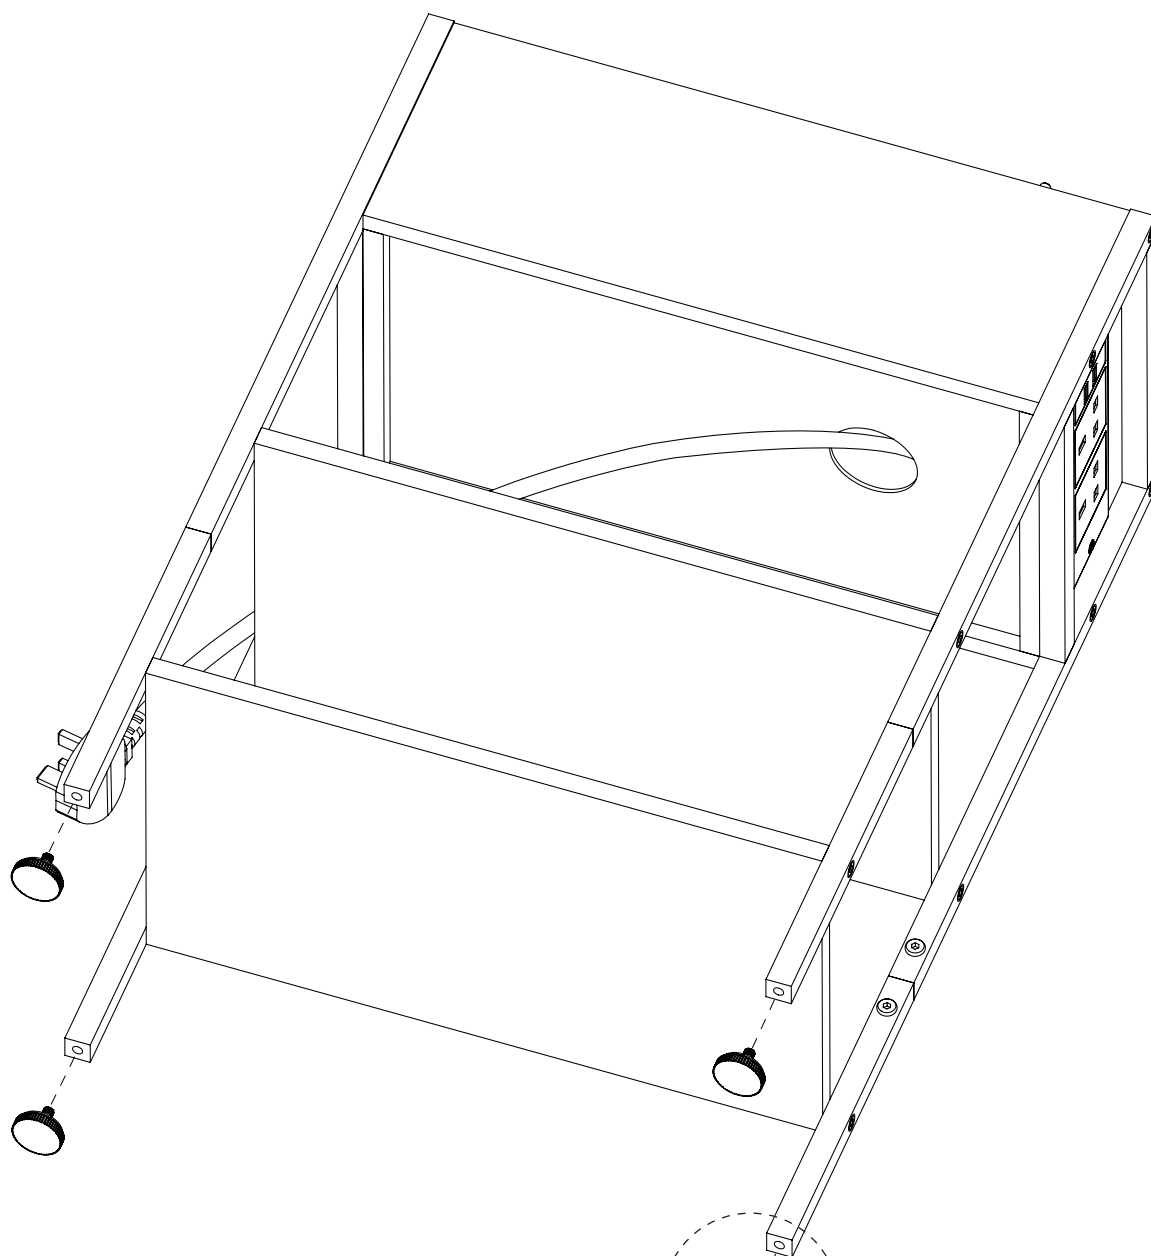






# Step 13

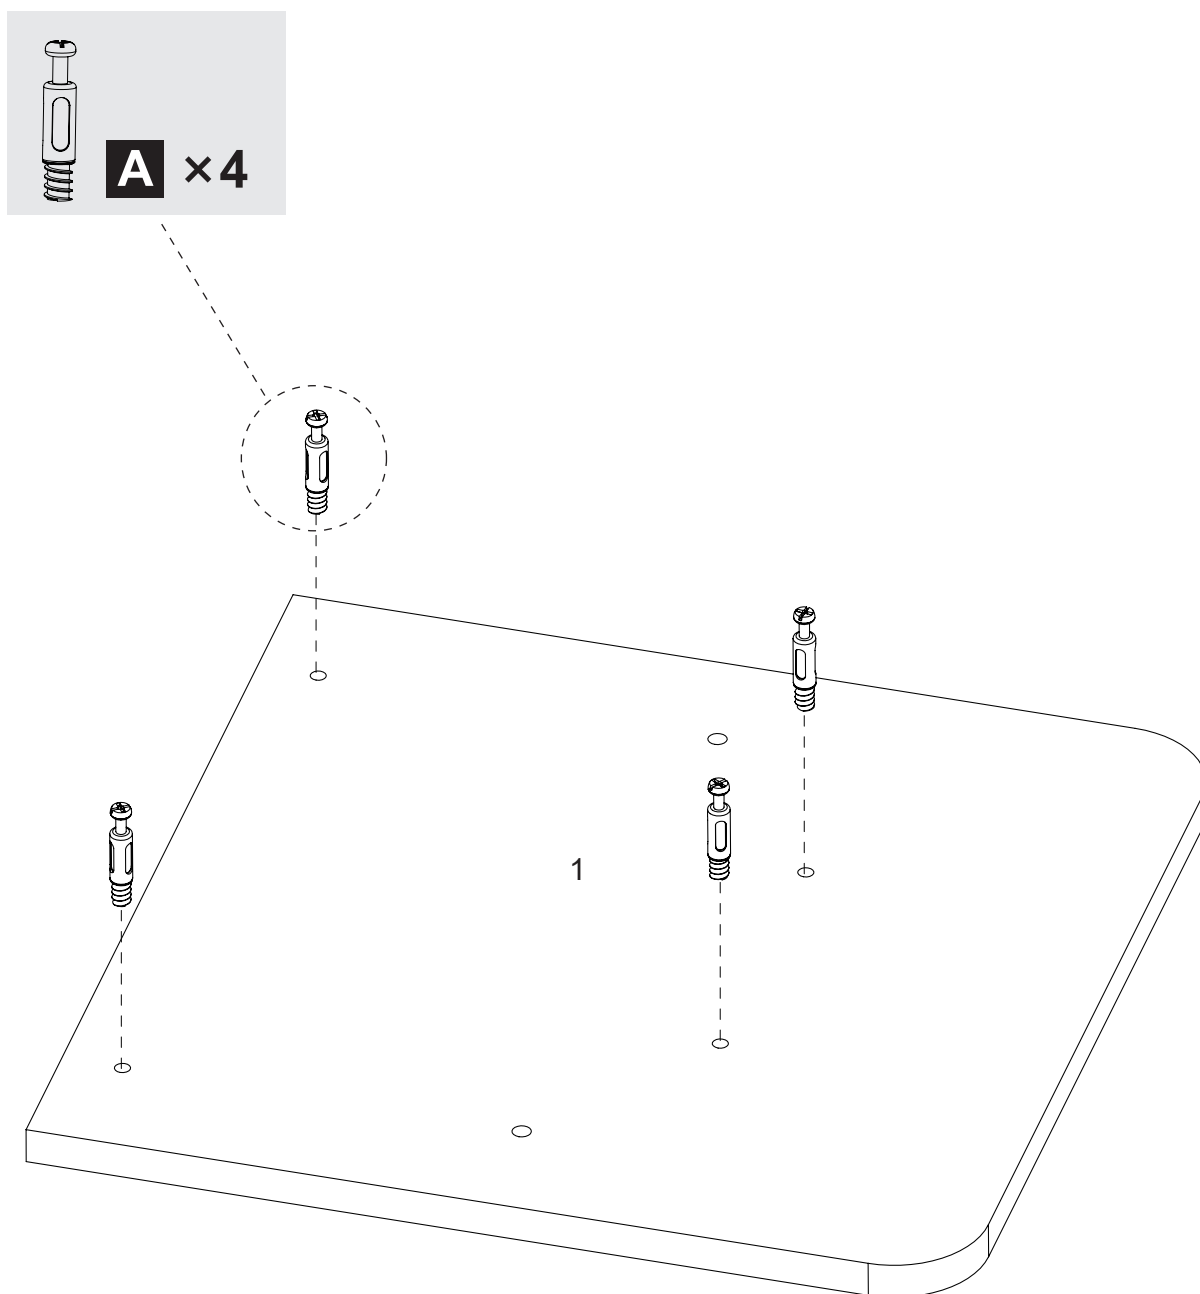

# Step 14



i) Please choose the appropriate angle to open the hinge.

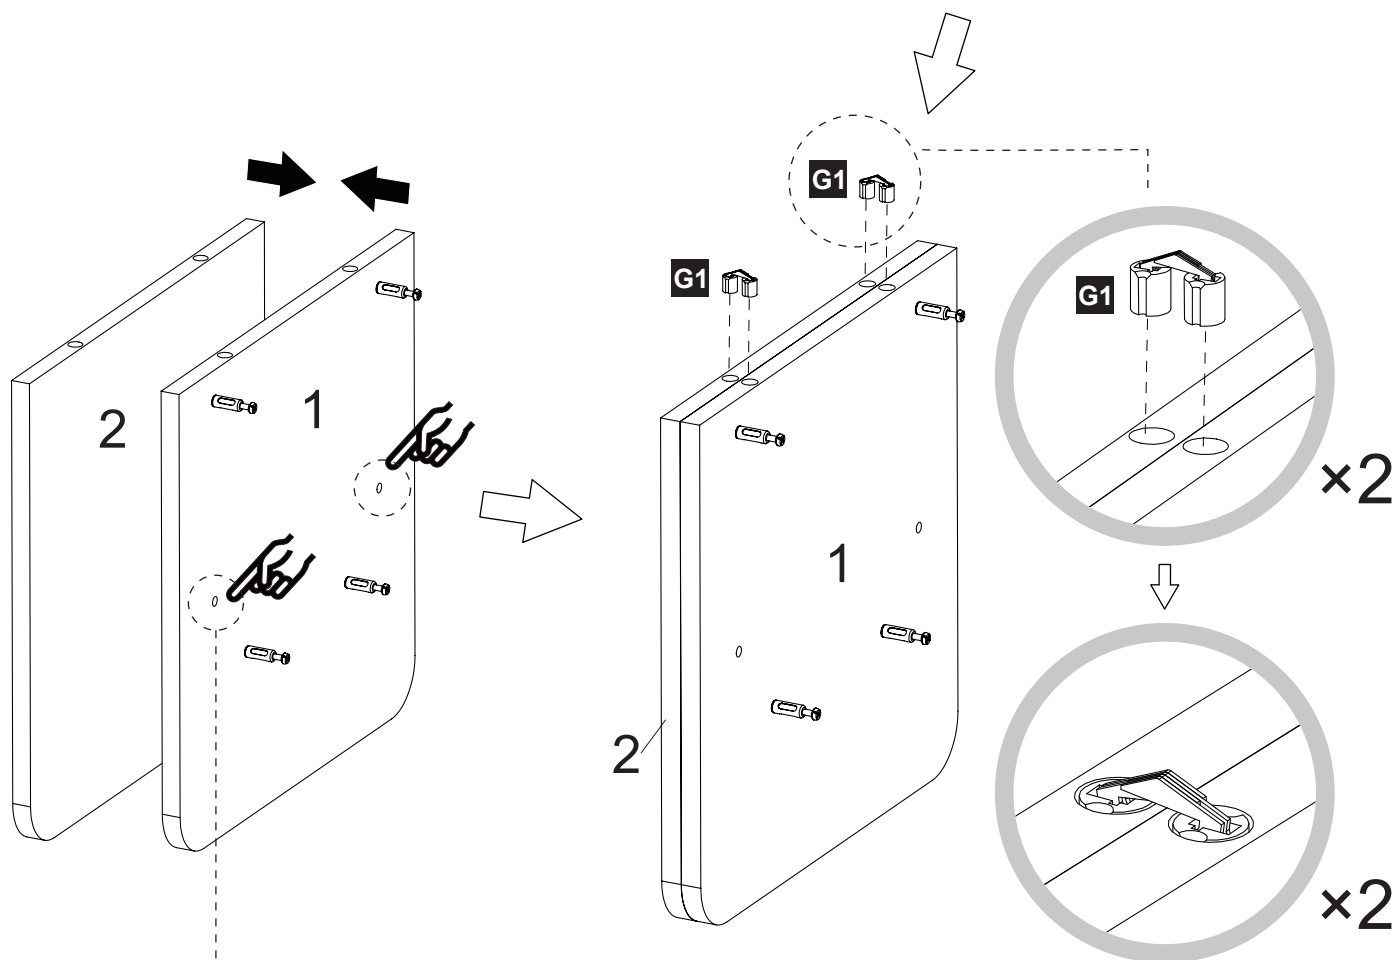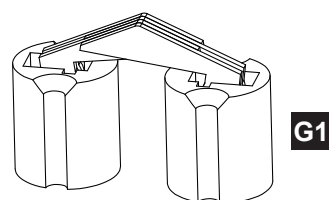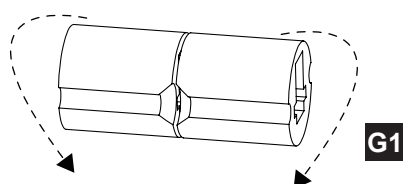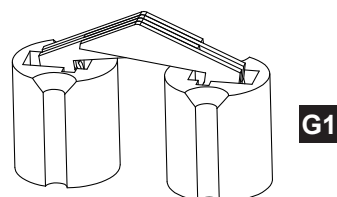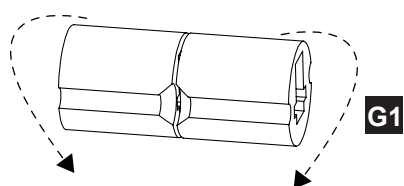


i) Pre-drilled holes face out; align the two panels.

# Step 15

|                                                                                   |              |                                                                                    |             |
|-----------------------------------------------------------------------------------|--------------|------------------------------------------------------------------------------------|-------------|
|  | <b>G2</b> X2 |  | <b>M</b> X1 |
|                                                                                   |              |                                                                                    |             |



**i**) Please do not fully tighten screws until all screws are in place.

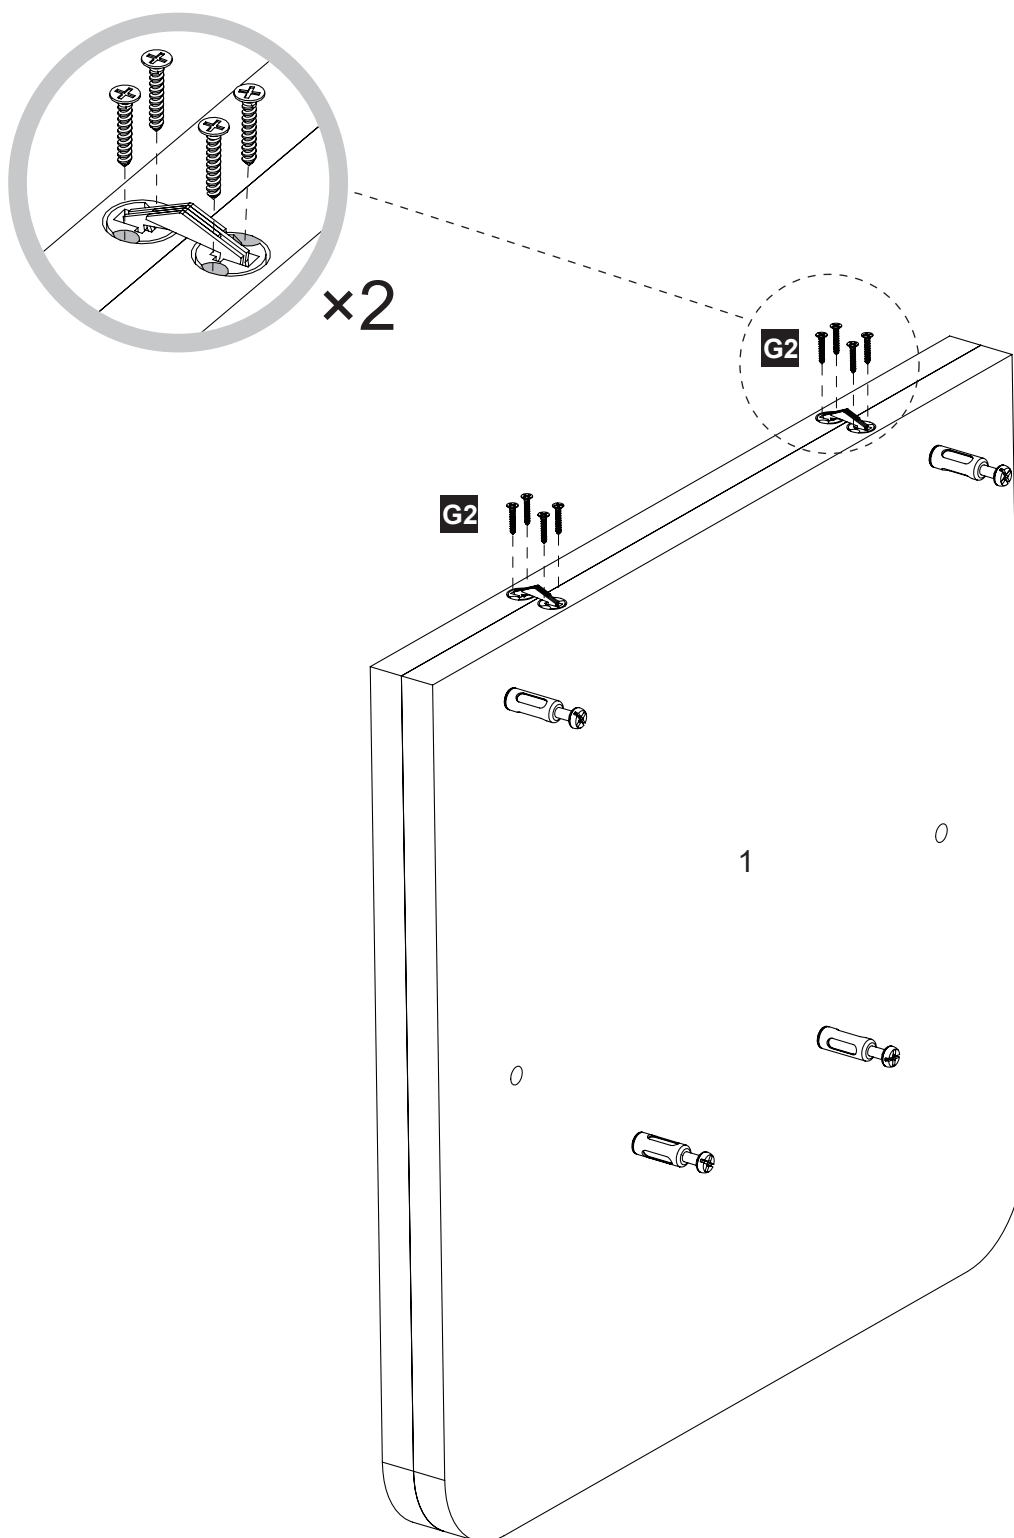

# Step 16



**C** X4

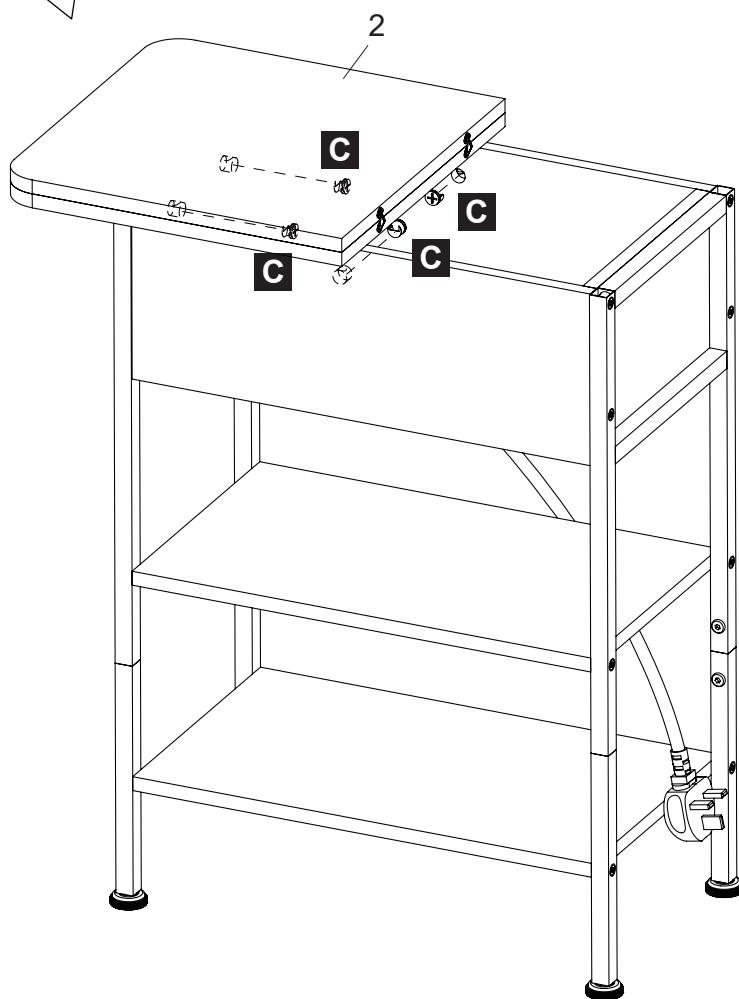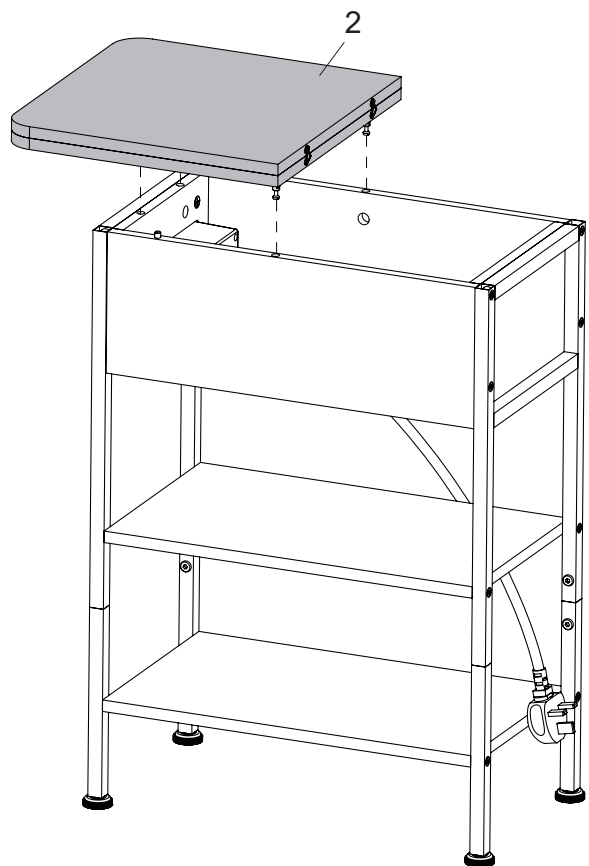

# DESIGN IS IN THE DETAILS

Find **5** differences between the 2 images.

