


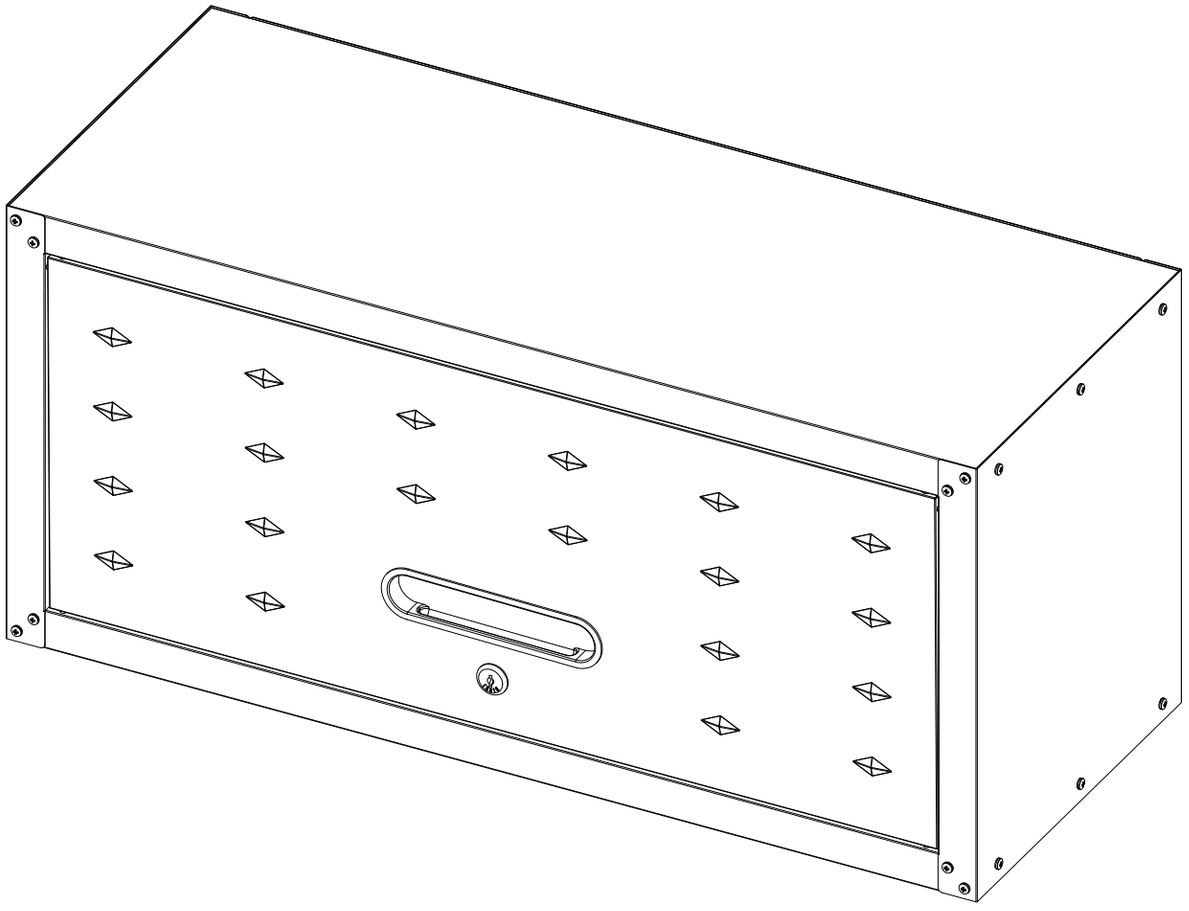


Installation video

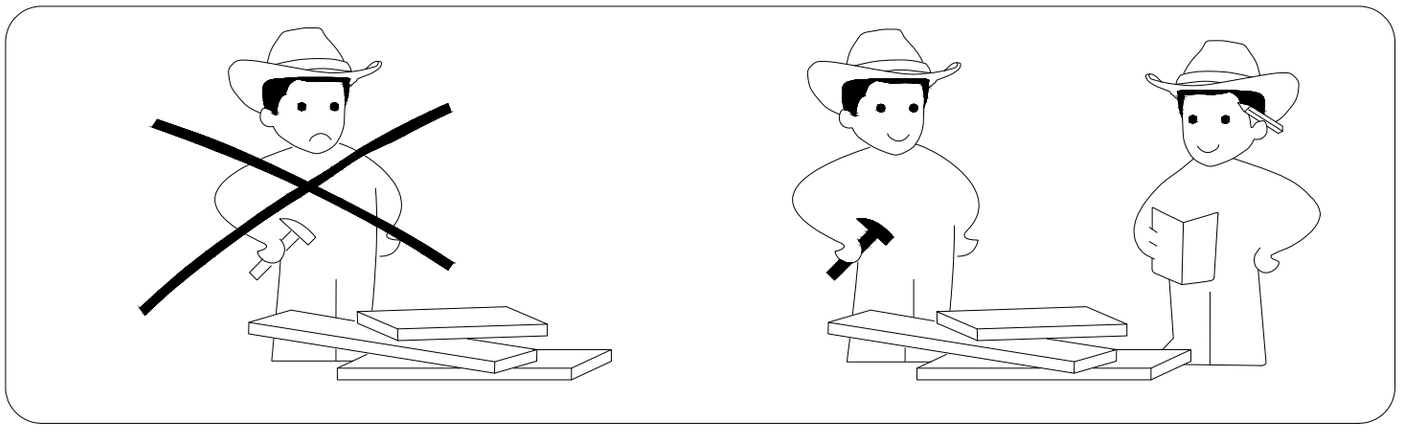


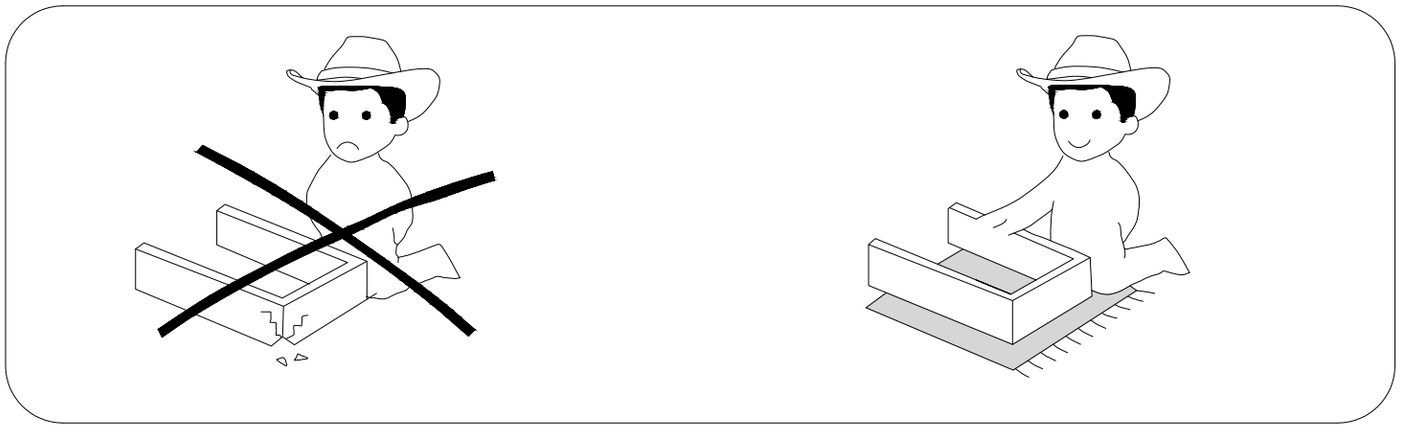

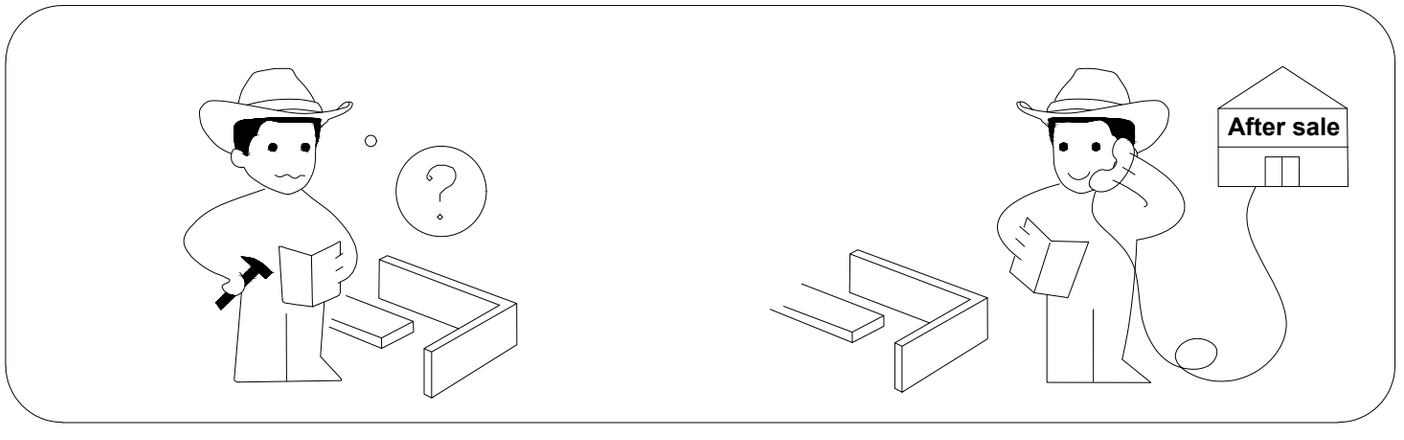



After sale


1×1

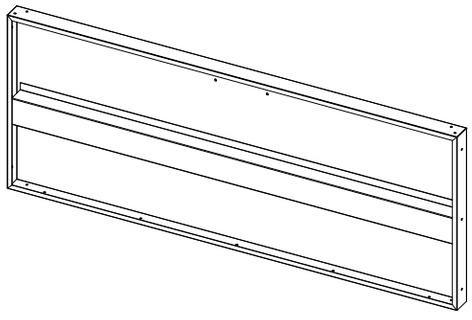


2×1

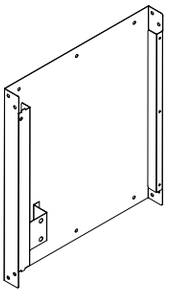


3×1

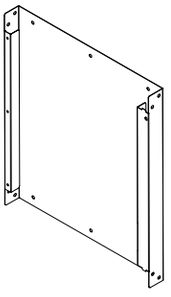


4×1

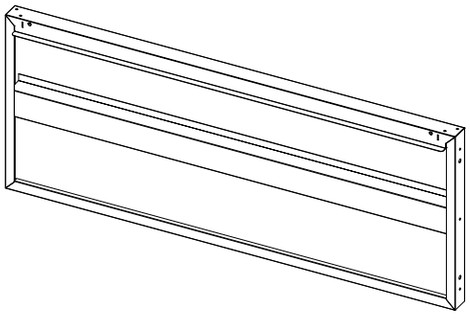

5×1

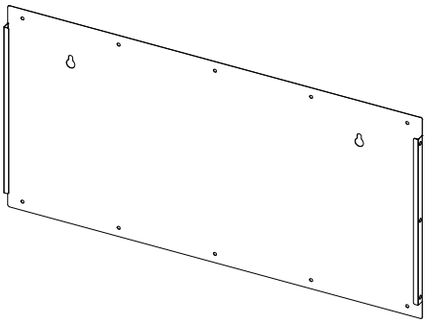

6×1

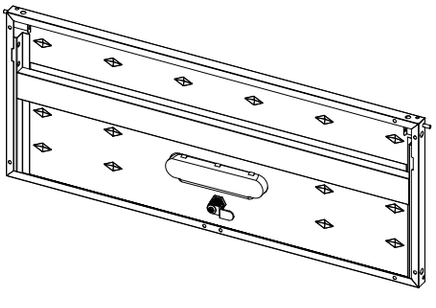


A×46



M4×8mm / 0.3inch

B×4



M5×10mm / 0.3inch


S×1



T×1



U×1




V×2



M5×40 mm




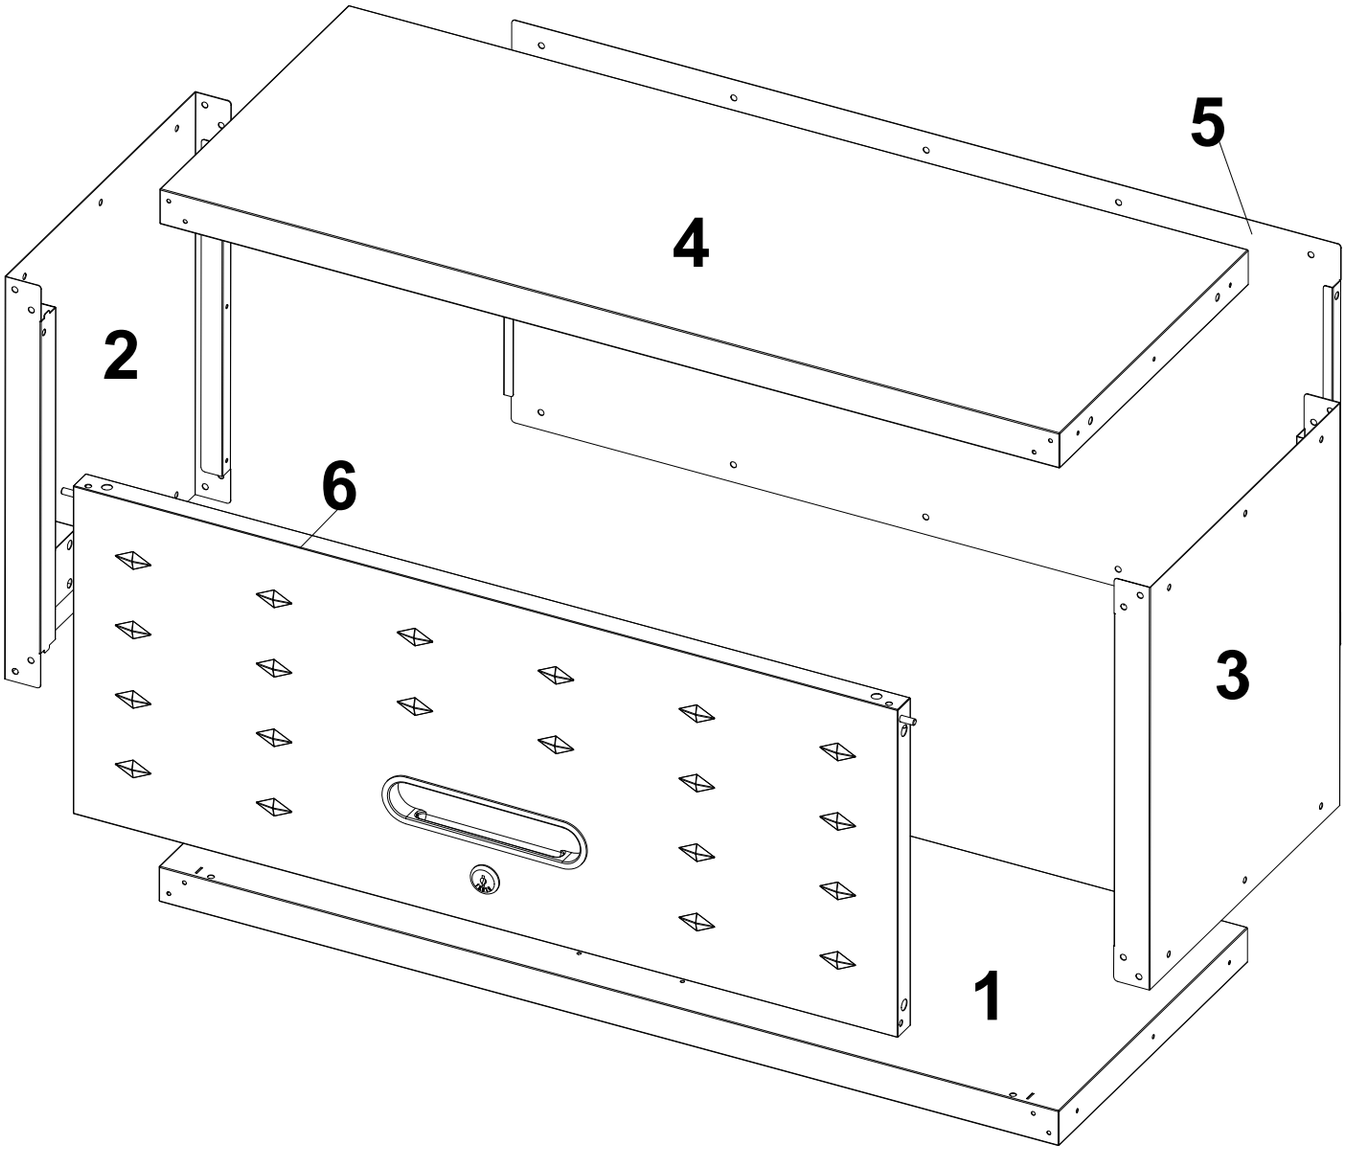



5
4
2
6
3
1

1


Align the lower buckle of side panel 2 with the slot at the top of the toolbox bottom plate, and then lower it down so that side panel 2 is stuck at the top of the toolbox floor

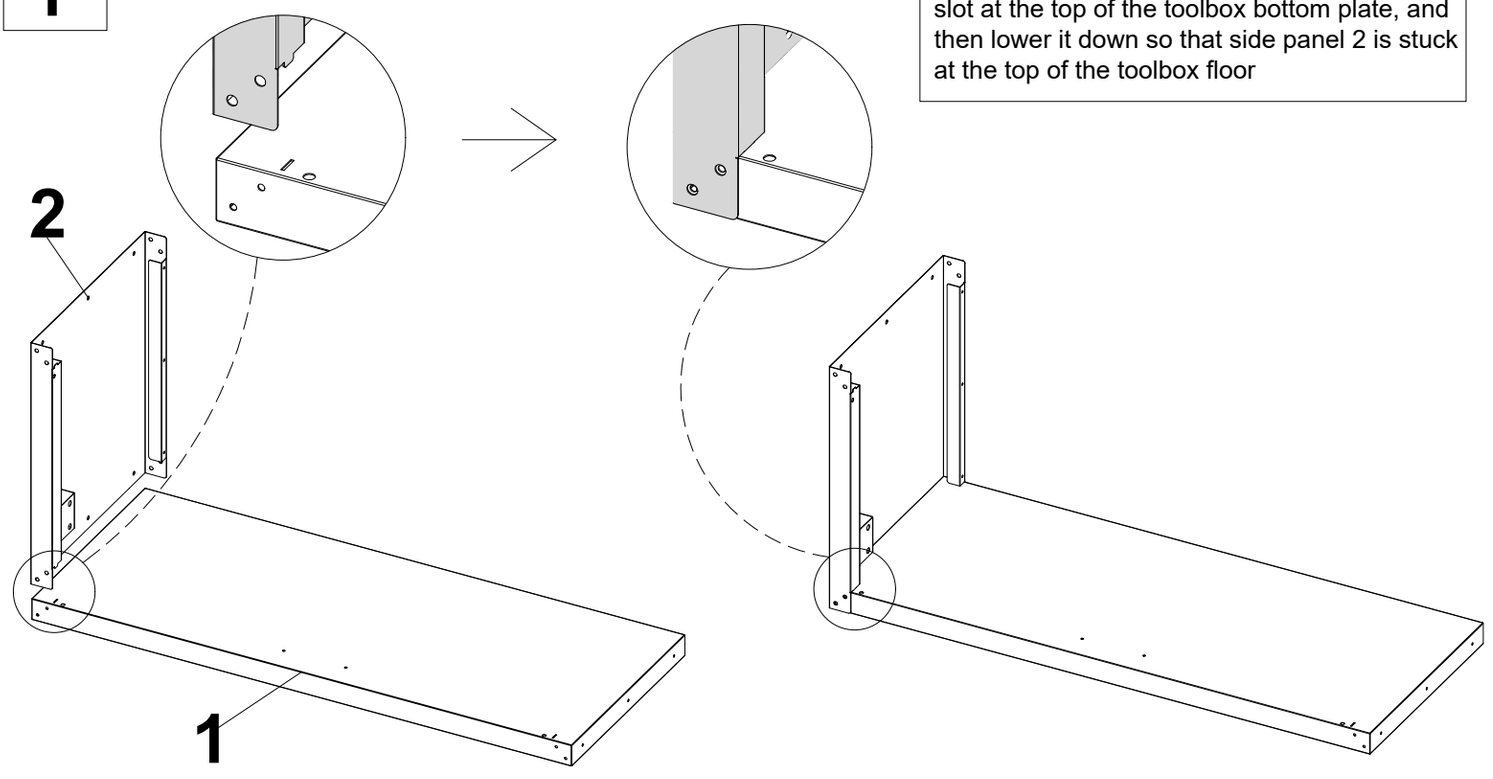



2

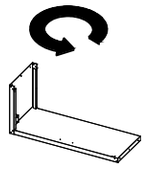


Align the lower buckle of side panel 2 with the slot at the top of the toolbox bottom plate, and then lower it down so that side panel 2 is stuck at the top of the toolbox floor

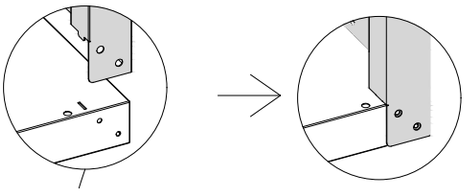


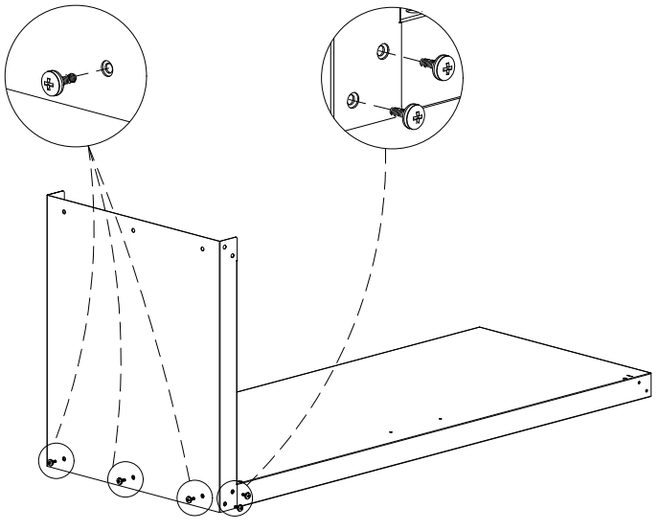


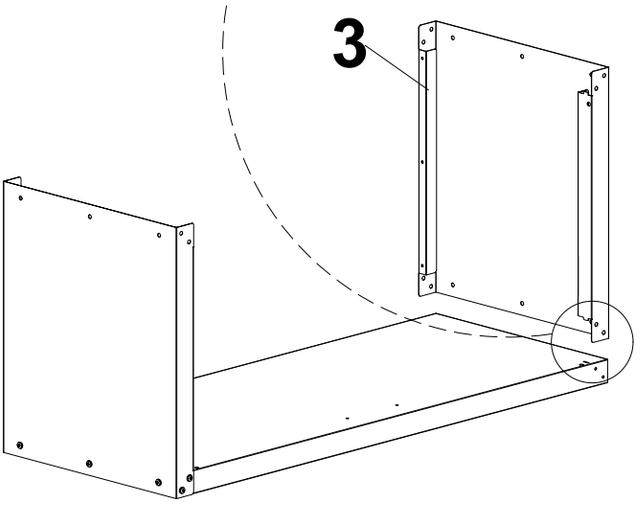




3

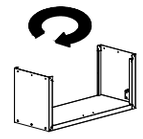

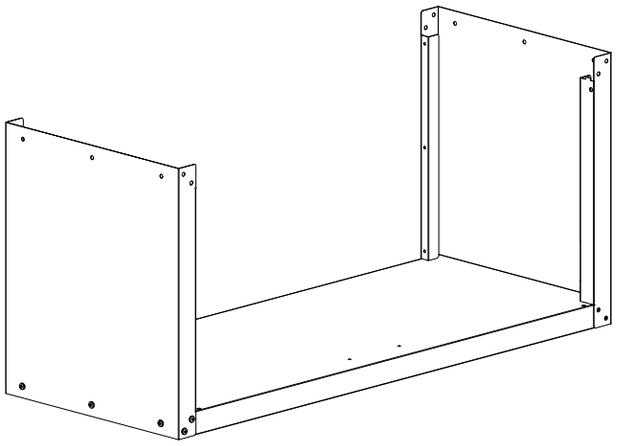


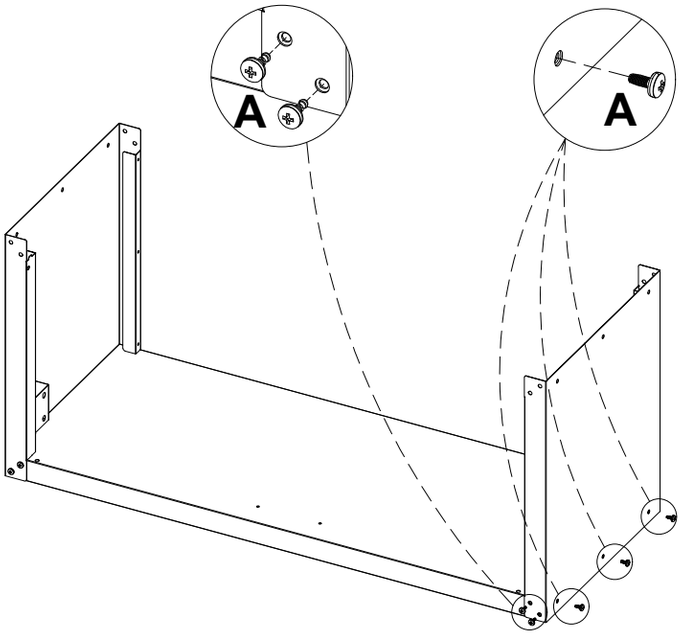


A×5

4


Align the card slots on both sides of the lower end of panel 4 with the buckles on the top of side panels 2 and 3, then lower it down so that panel 4 is stuck on the top of the toolbox

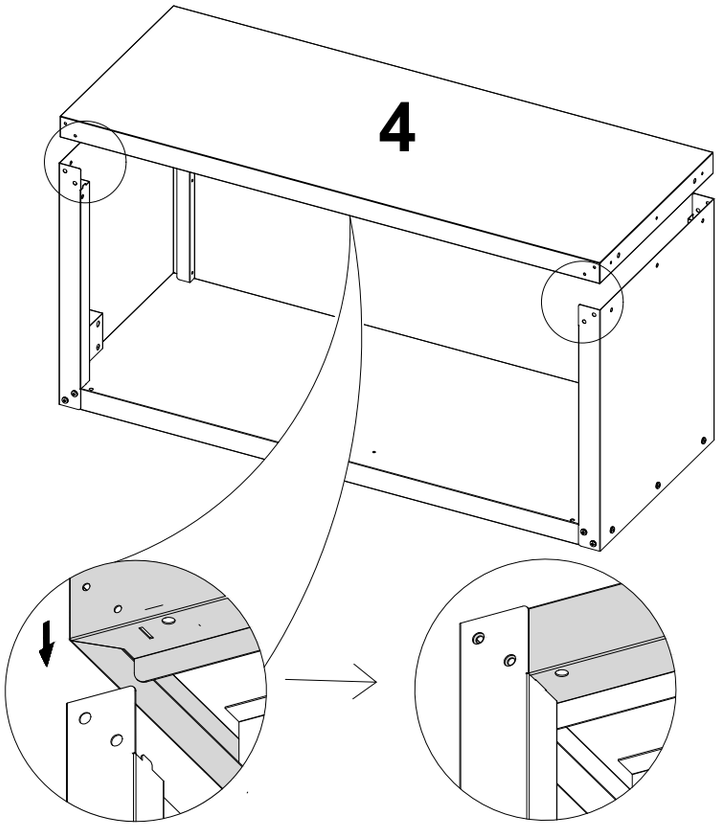


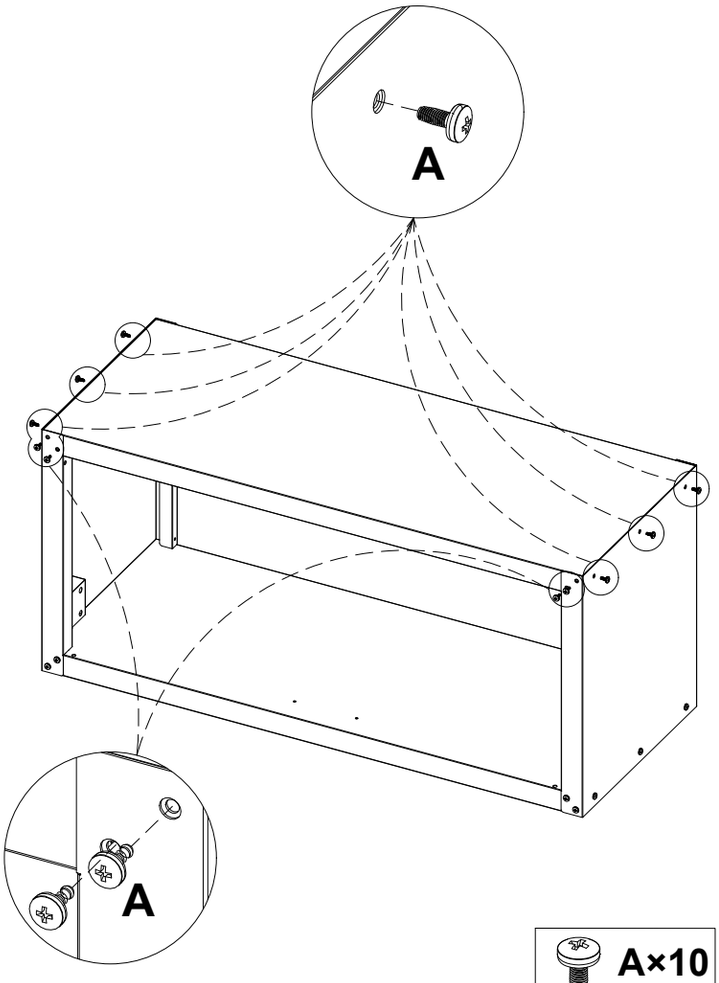

A×10


5

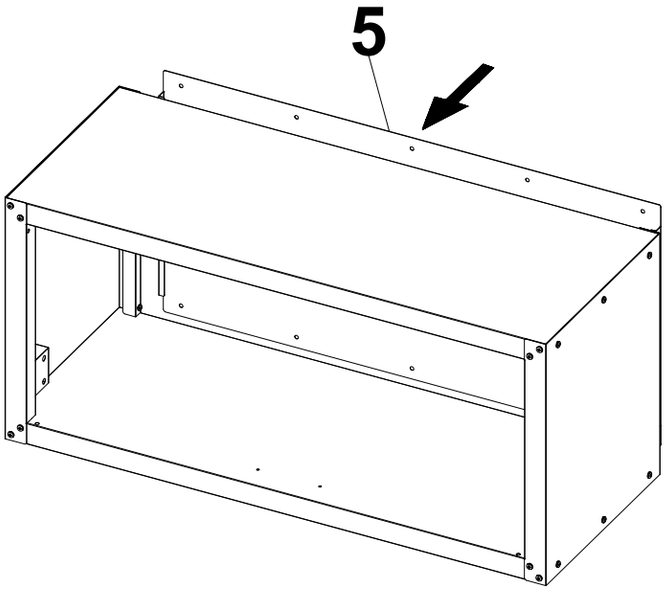


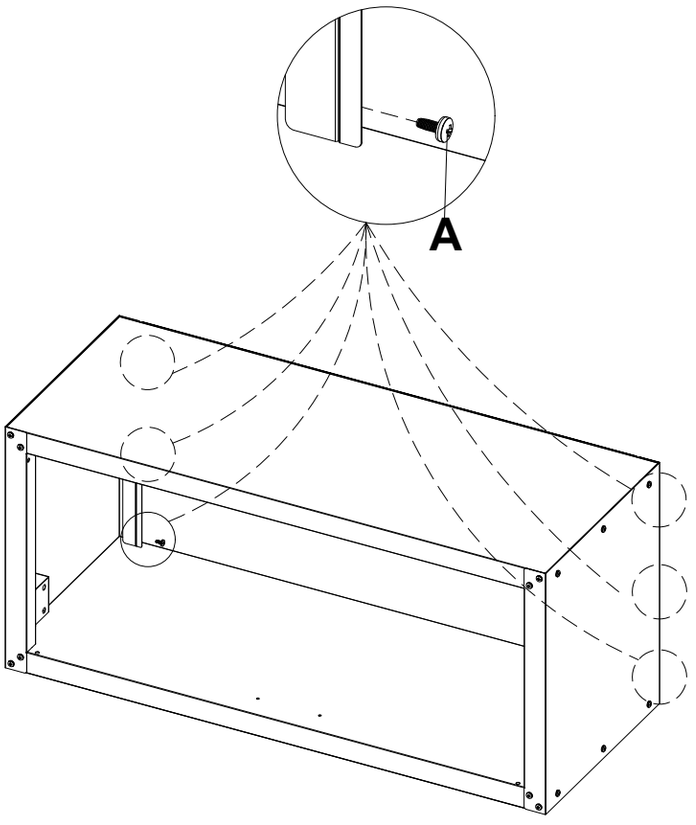




A×6

6

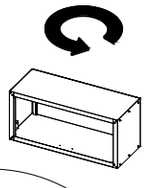

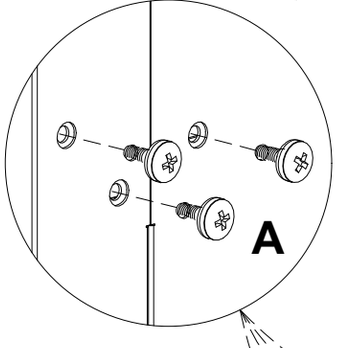


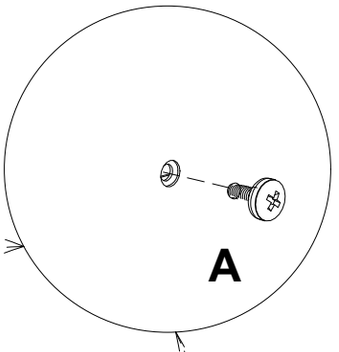

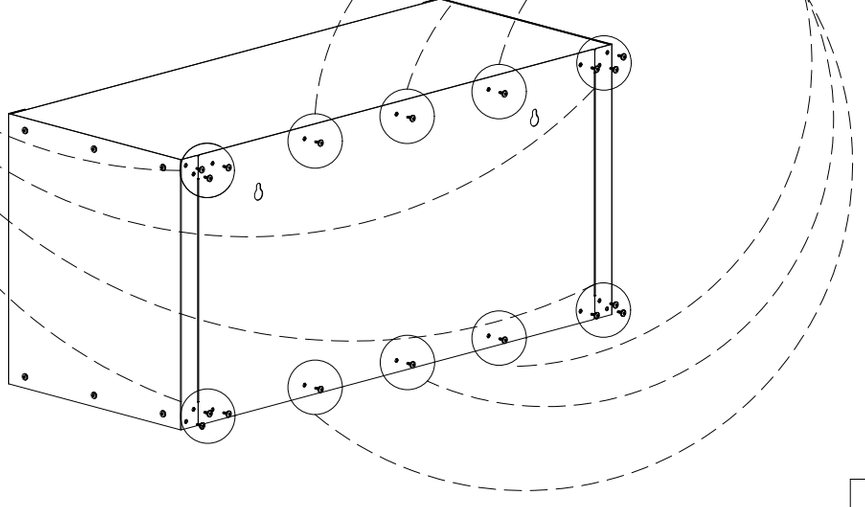



A×18

7

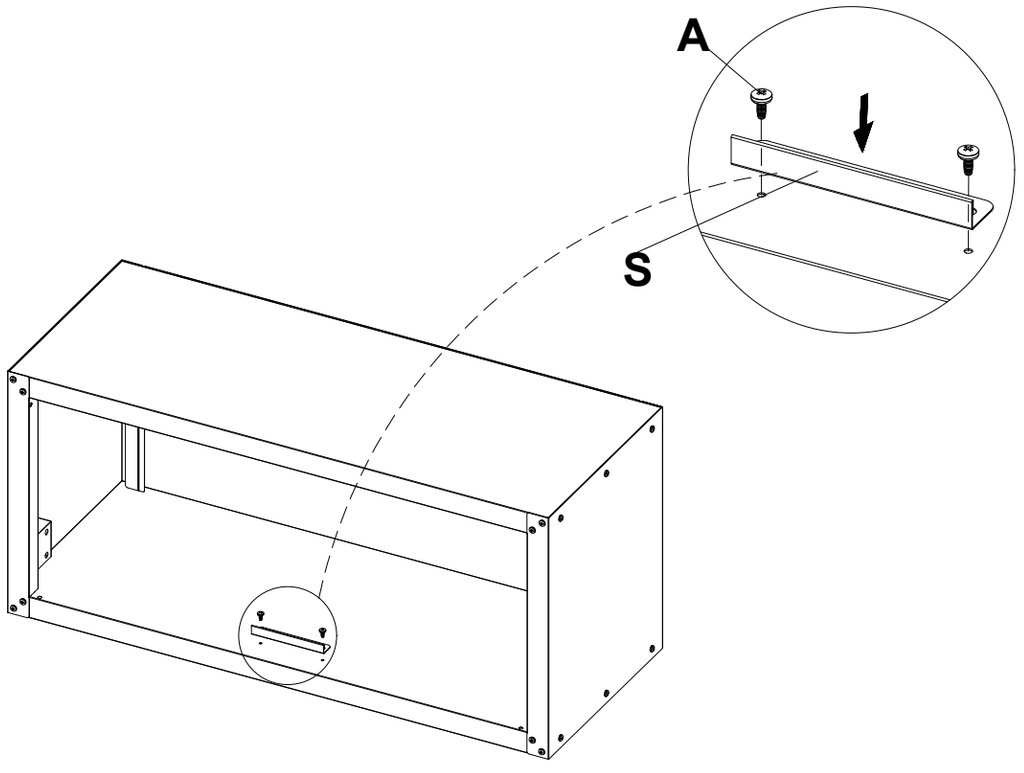


A×2

8

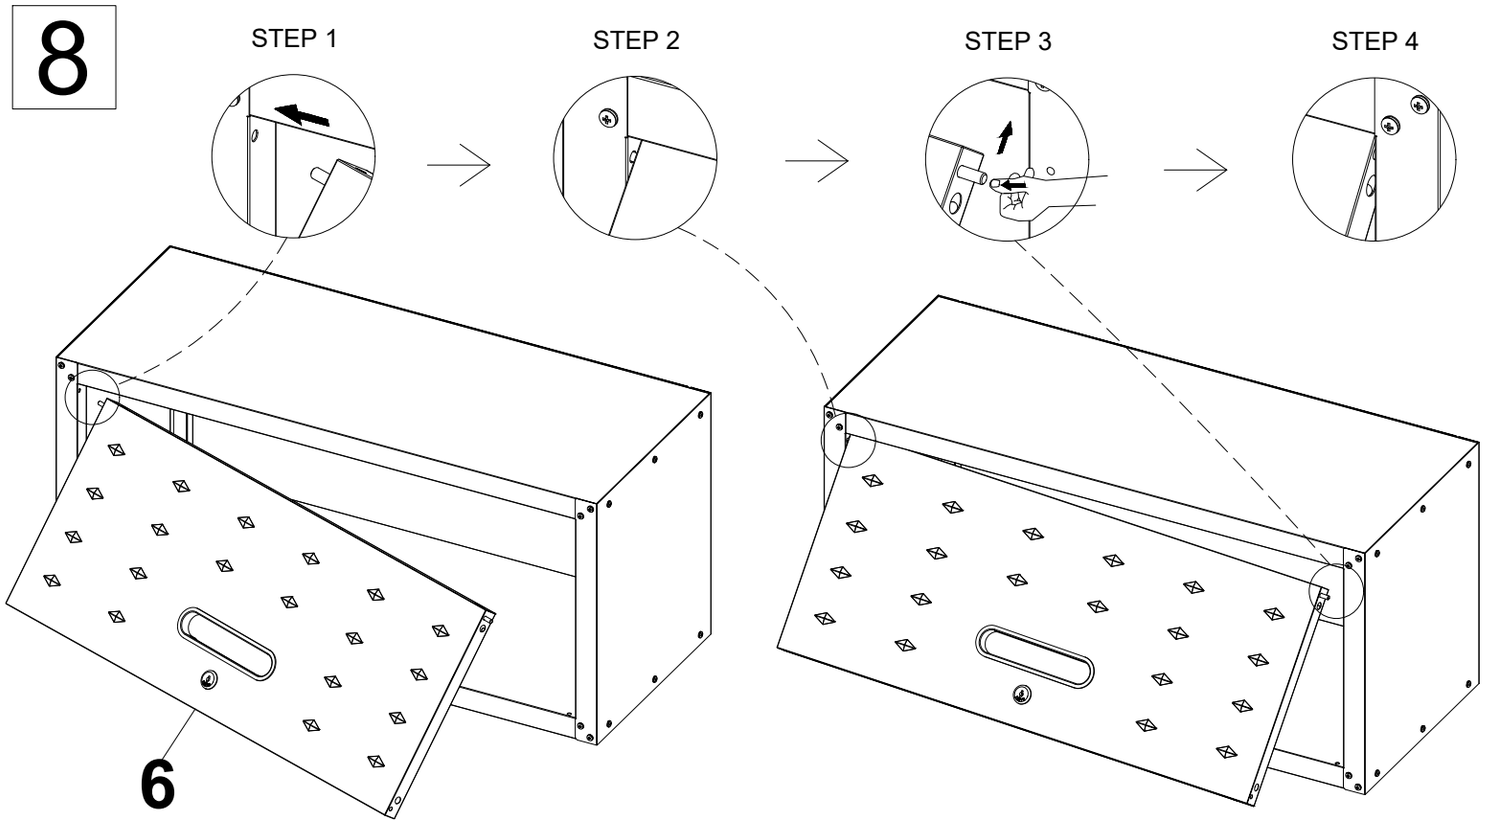



9

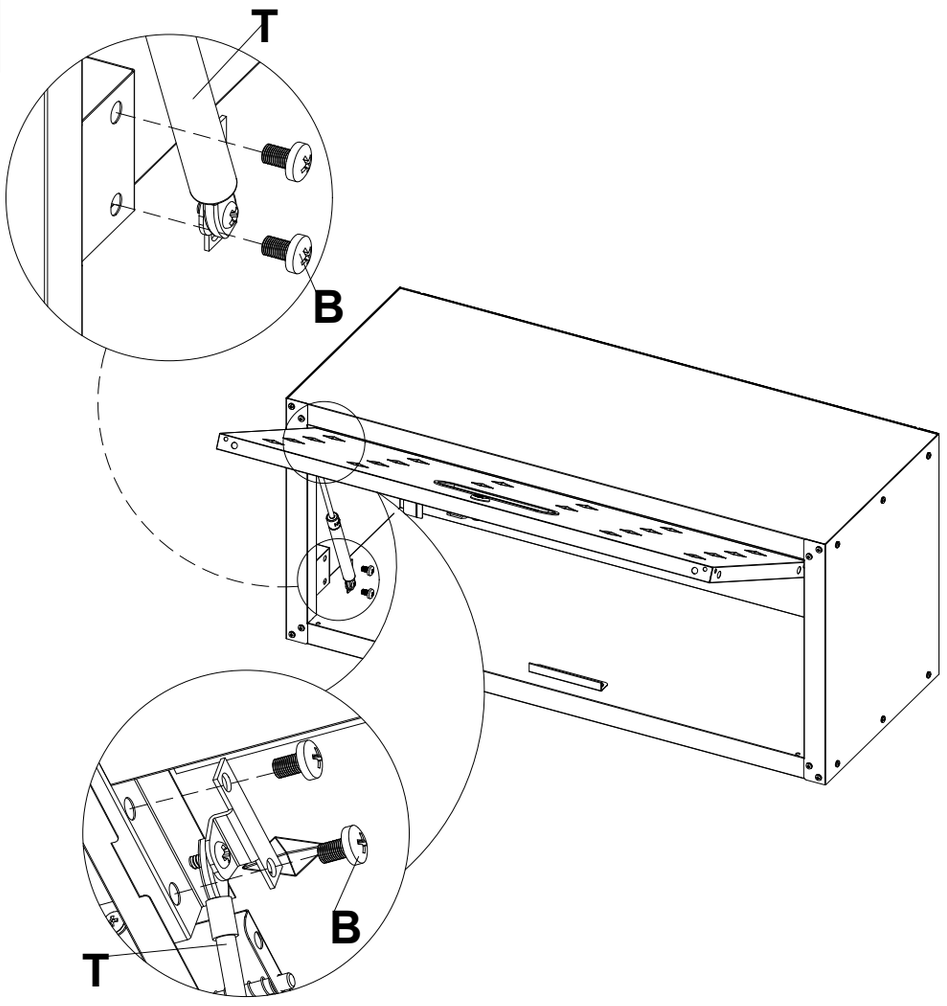




10

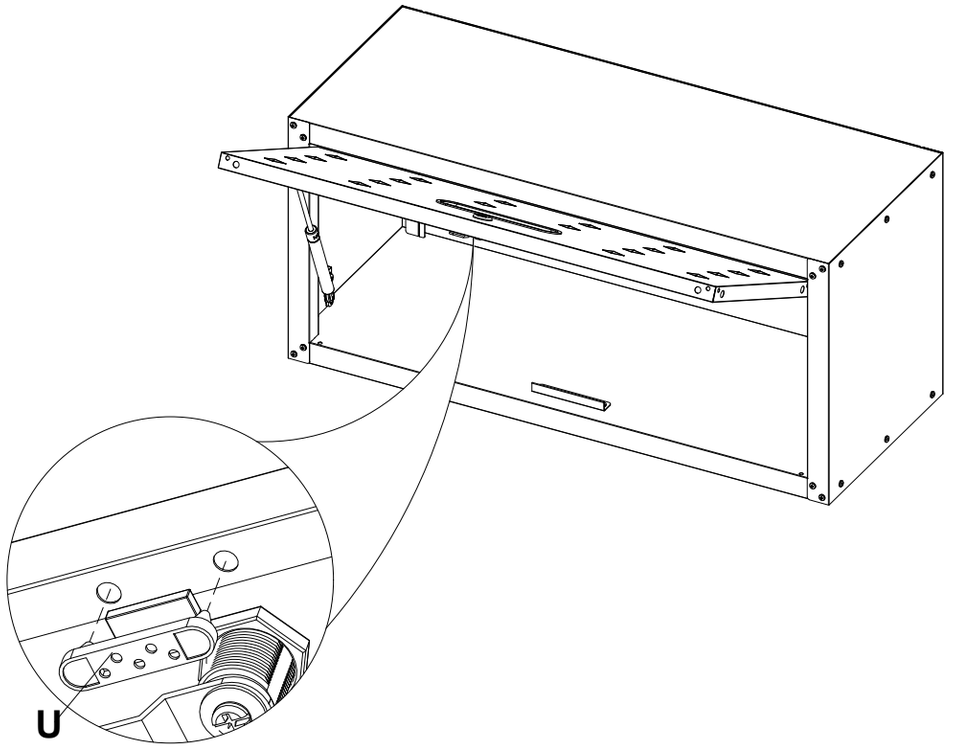



11

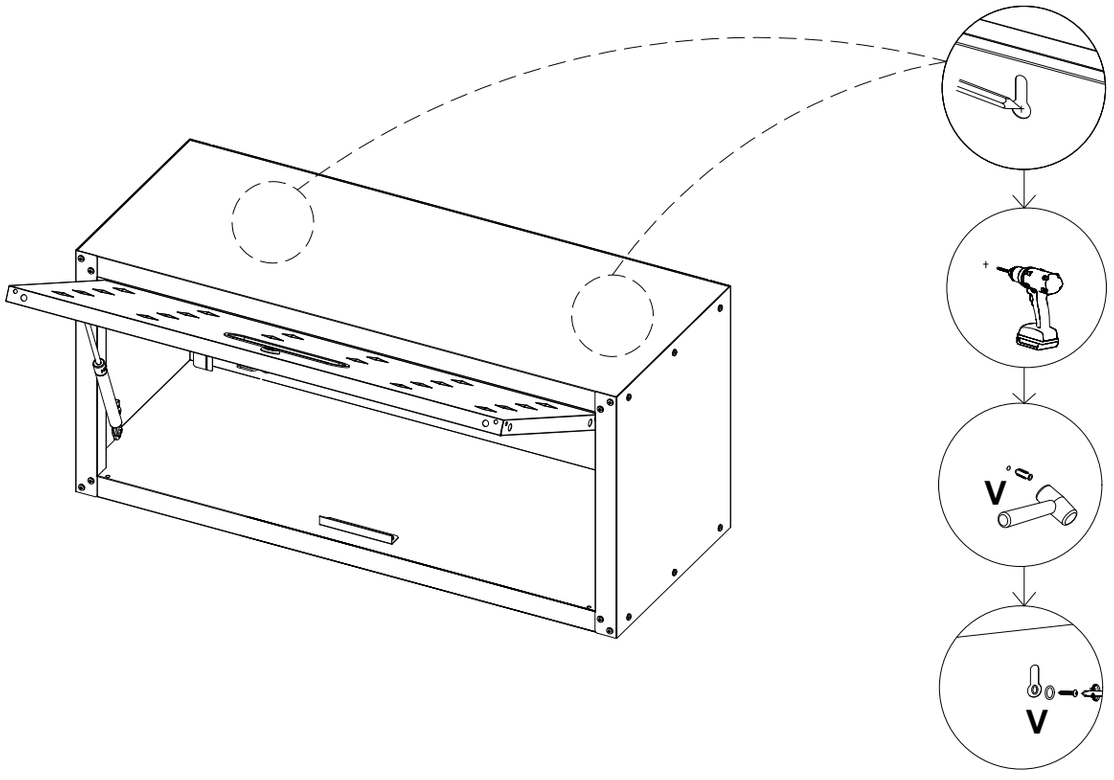

V×2

12

