



Free-standing faucet

Please check all parts available referring to <<standard part list>> after opening the box, If any parts are missing, Contact our local agent immediately

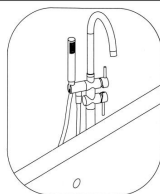


NO	Name	Quantity
1	body assembly	1
2	Straight pipe	1
3	Decorative cap	1
4	flexible pipes	2
5	mounting claw	1
6	Expansion screws	3
7	Hand shower	1
8	Shower hose	1
9	gloves	1
10	Installation leaflet	1
11	Allen key	1

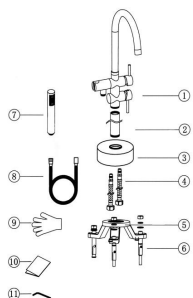


1.The height of the bathtub should be required as the height of the product.


1. Put the flexible pipes through the straight pipe, decorative cap and mounting cap. Then screw the flexible pipes to the main body.

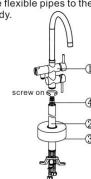


2. Screw the straight pipe onto the main body.

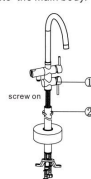



3. Construct the intake pipe according to the following diagram.

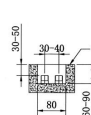


4. Connect the hose to the follow-up pipe.

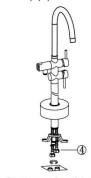


5. Twist the mounting claws on the main assembly.

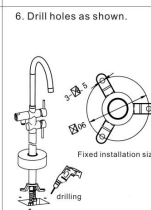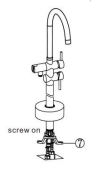


7. Fix the faucet assembly with expansion screws.

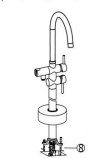

8. Screw the shower hose on the main body and hand-held hose respectively.

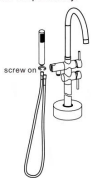


Assembly drawing




Free-standing faucet

Please check all parts available referring to <<standard part list>> after opening the box, If any parts are missing, Contact our local agent immediately

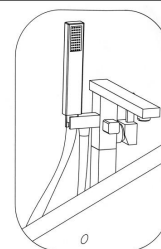


NO	Name	Quantity
1	body assembly	1
2	Straight pipe	1
3	Allen key	1
4	screw	2
5	Decorative cap	1
6	flexible pipes	2
7	mounting claw	1
8	Expansion screws	3
9	Hand shower	1
10	Shower hose	1
11	gloves	1
12	Installation leaflet	1

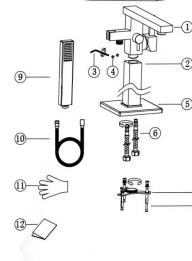


1.The height of the bathtub should be required as the height of the product.


1. Put the flexible pipes through the straight pipe, decorative cap and mounting cap. Then screw the flexible pipes to the main body.

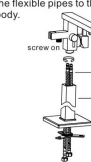

2. Screw the inner hexagonal screw with a hexagonal spoon to connect the main body to the straight pipe

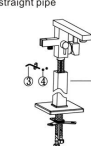

3. Construct the intake pipe according to the following diagram.

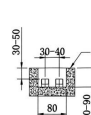

4. Connect the hose to the follow-up pipe.



5. Screw the retaining seat on the main assembly



6. Drill holes as shown.



7. Fix the faucet assembly with expansion screws.



8. Screw the shower hose on the main body and hand-held wine respectively.



Assembly drawing

