





- EN Scan for user manual
- DE Scan für Benutzerhandbuch
- FR Scannez pour le manuel d'utilisation
- IT Scansiona per il manuale utente
- ES Escanear para el manual del usuario
- JP Qrコードをスキャンして説明書を表示します
- AR يحاذر ليلحلخ لسم
- RU сканируйте для руководства пользователя
- NL
-
-
-

Basic Information

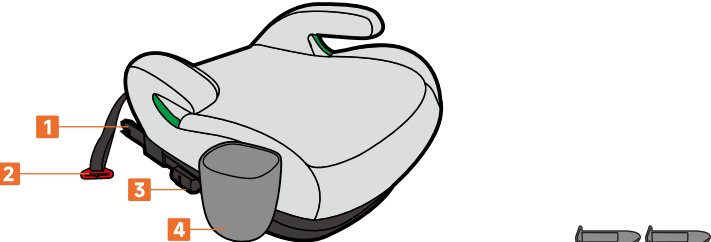

1. ISOFIX Connect Locking Arms
2. Seat Belt Hook
3. ISOFIX Release Button
4. Cup Holder


ISOFIX Guide
Insert the ISOFIX guides onto the car's anchors to attach the child seat securely.



Use In The Vehicle

 **Forward Facing Only**
It is not recommended to install child safety seats in front seats with airbags.


Green colors indicate optional installation locations where a 3-point harness system is required.
It is recommended to install on the back seat.



Quick Installation Guide

Installation in the vehicle with 3 point belt


①

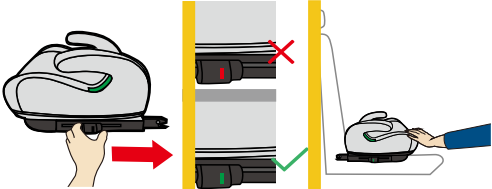

②



③

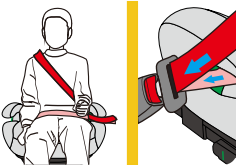

1. Press the ISOFIX release button (3) and slide the ISOFIX connect locking arms (1). When the ISOFIX connect locking arms (1) are successfully inserted into the fixture points, check the ISOFIX green/red indicator to confirm the
- 2.Installation status.
- 3.Place the child in the booster seat.
Thread the car seat belt correctly through the booster seat. After ensuring the seat belt is correctly fastened on the booster seat, lock the seatbelt until you hear a click.

CAUTION! DO NOT twist the seat belt.

USER
MANUAL



OHHO+

Approx.
6Y-12Y

125-150cm



Jovikids

Specific vehicle booster cushion
125-150CM



030105

UN-Regulation No.129/03

This booster seat armrest, ensuring maximum safety and comfort for your baby during travel.


Only suitable for vehicle seats with automatic three-point belts approved by UN Regulation No. 16 or a comparable standard.

Recommended for:
Age: From 6 years to approx. 12 years
Stature: 125-150 cm

ECE = European Standard for Safety Equipment
The booster seat has been designed, tested, and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R129). The seal of approval "E" (in a circle) and the approval number are located on the approval label (sticker on the child safety seat).

This approval will be invalidated if any modifications are made to the booster seat. Only the manufacturer is permitted to make modifications to the booster seat.

Care And Cleaning

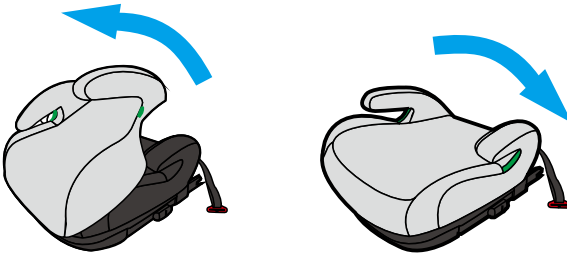

Notes for Cleaning the Booster Seat

- To maintain the proper functionality of the booster seat, please ensure that only original replacement seat covers are used. Replacement seat covers are essential for the correct performance of the car seat and are available from your retailer or authorized branches.



The booster seat must not be used without the seat cover.

- The cover can be removed and washed with a mild detergent delicate cycle (30°C). Follow the instructions on the washing label of the cover. The cover's colors may fade if washed at temperatures higher than 30°C. Do not spin dry, and never use an electric dryer as the fabric may separate from the padding.
- Clean plastic parts with soapy water. Do not use harsh cleaning agents such as solvents.



www.jovikids.com



jovikids_global



service@jovikids.com